



G Fuel Gauge Sender

- in fuel tank, beneath luggage compartment, right side