


Power outlets (12V),

from June 2003

Note:

Information for

- ◆ *Relay and fuse arrangements*
 - ◆ *Connector arrangements*
 - ◆ *Control Modules and Relays*
 - ◆ *Ground connections*
- ⇒ *Component Locations!*

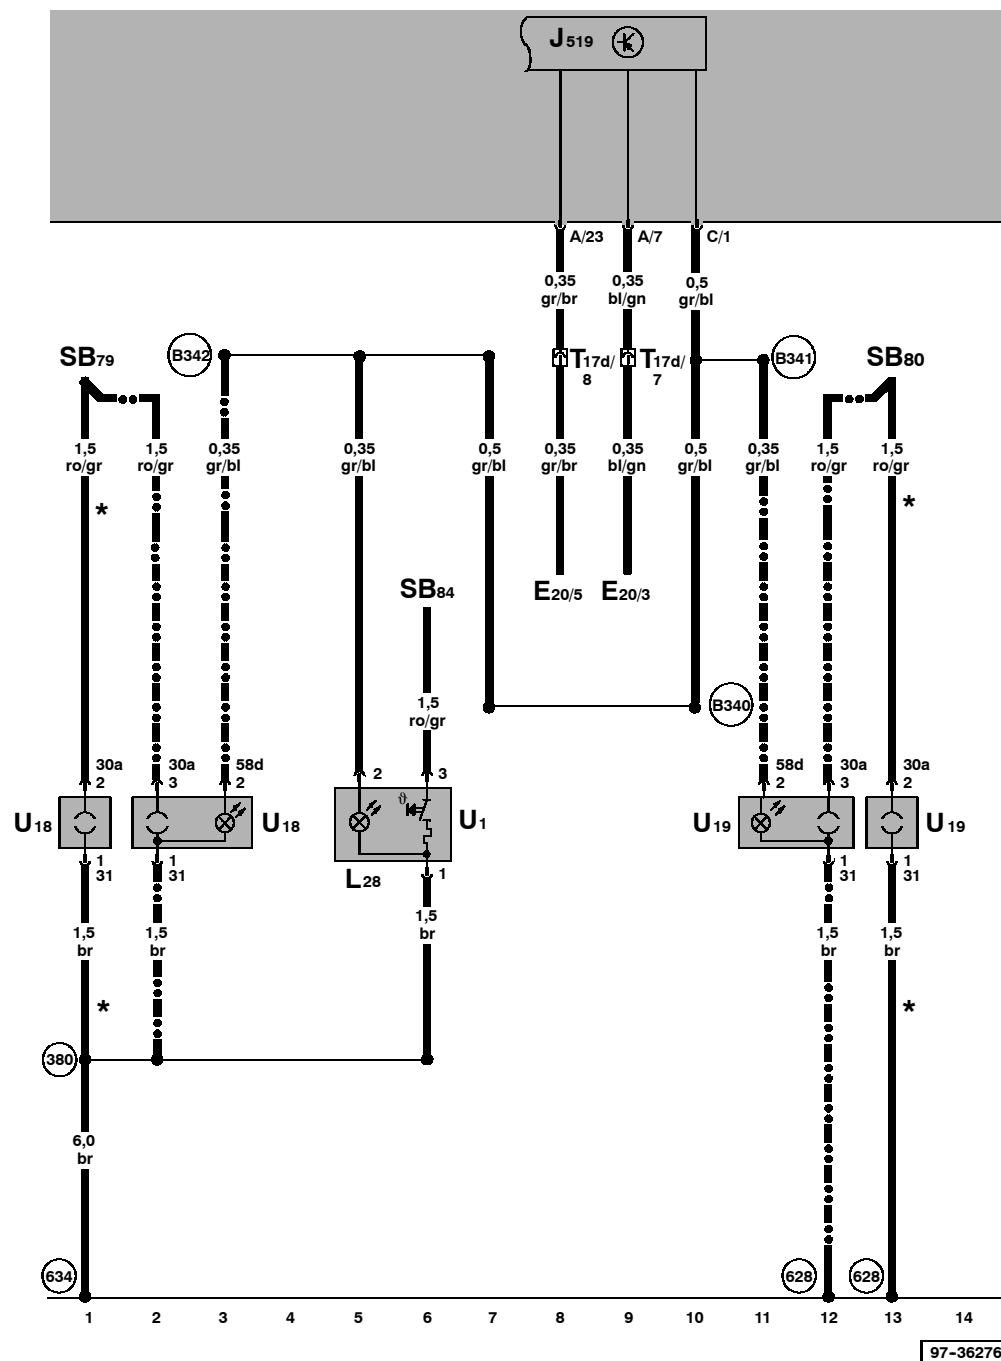

Vehicle Electrical System Control Module, Cigarette Lighter, 12V outlet

- E20 - Instrument Panel Light Dimmer Switch
- J519 - Vehicle Electrical System Control Module
- L28 - Cigarette Lighter Light
- SB79 - Fuse 79 (in fuse holder)
- SB80 - Fuse 80 (in fuse holder)
- T17d - 17-Pin connector, behind instrument panel, left
- U1 - Cigarette Lighter
- U18 - 12V outlet -2-
- U19 - 12V outlet -3-


- (380) - Ground Connection 15 (in main wiring harness)
- (628) - Ground Connection 2 (seat control module)
- (634) - Ground Connection (driver's seat control module)
- (B341) - Connection 2 (58d) (in main wiring harness)
- (B342) - Connection 3 (58d) (in main wiring harness)
- * - Vehicles with 4 seats
- - Vehicles with 5 seats

Left and Right Rear Cigarette Lighter, 12V Socket

- SB85 - Fuse 85 (in fuse holder)
 SB86 - Fuse 86 (in fuse holder)
 SC27 - Fuse 27 (in fuse holder)
 T6tl - 6-Pin connector, red, connector station B-pillar, left
 T6tr - 6-Pin connector, rot, connector station B-pillar, right
 T10t - 10-Pin connector, connector station B-pillar, left
 T10u - 10-Pin connector, connector station B-pillar, right
 U3 - Left Rear Cigarette Lighter
 U5 - 12 V Socket, luggage compartment left
 U7 - Right Rear Cigarette Lighter

- (382) - Ground Connection 17 (in main wiring harness)
 (622) - Ground Connection 1 (ground plate)
 (630) - Ground Connection (Radio, A/C)
 (631) - Ground Connection (right rear door)

- - - - Not applicable to USA/CDN

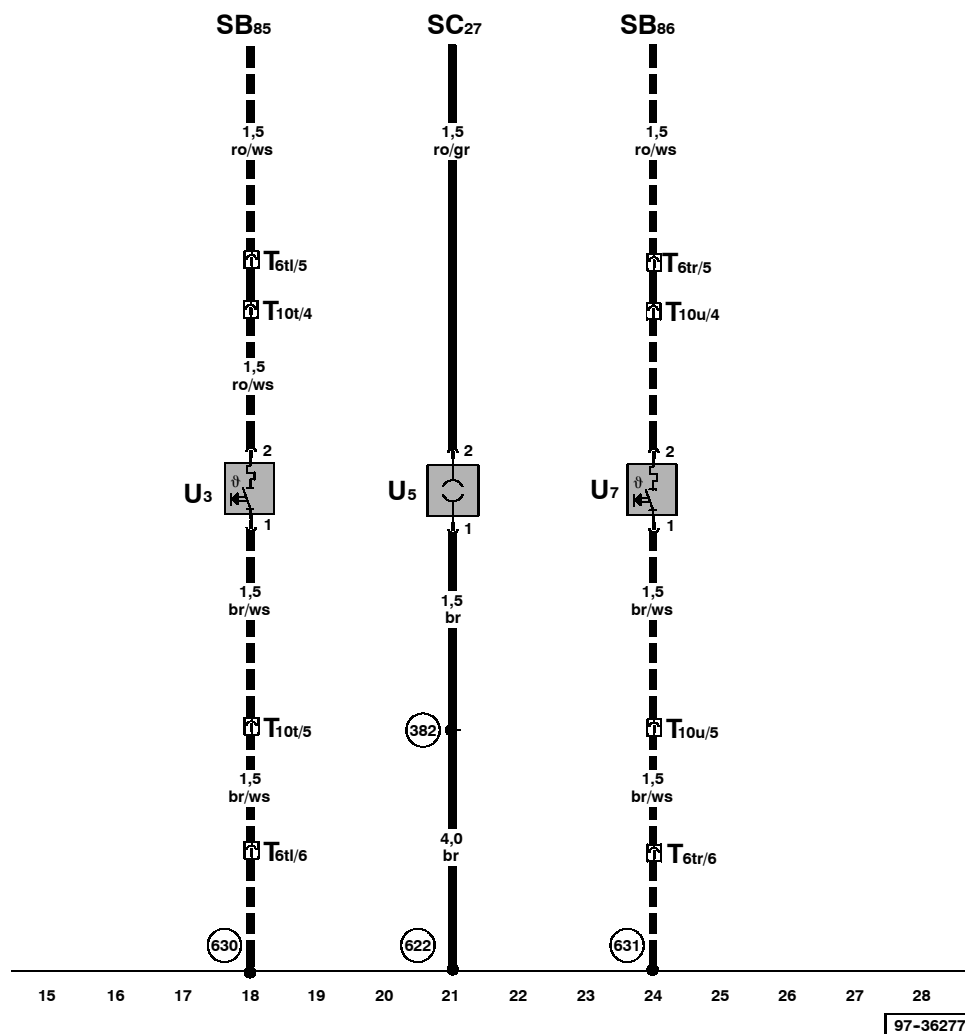

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange