


Ground Connections


Ground connections in engine compartment, overview


Ground connections in engine compartment

- ⑥40 - Ground Connection (in engine compartment, left), near wheel housing -arrowA-
- ⑥41 - Ground Connection 2 (secondary air pump), near left wheel housing -arrowB-

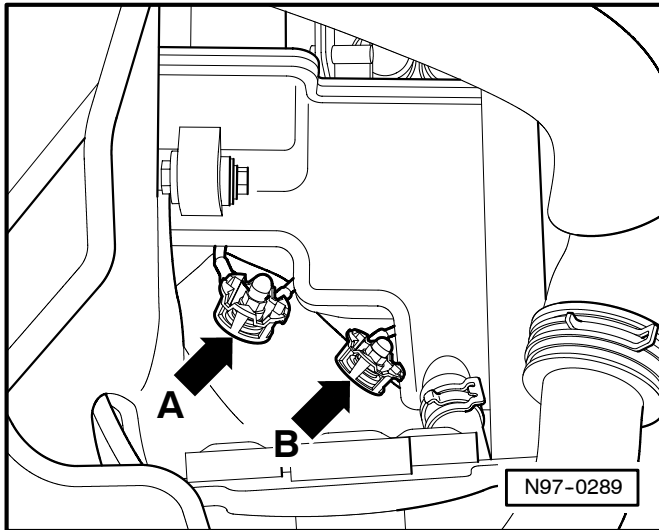


- ⑥42 - Ground Connection (electronic fan control), near right wheel housing -arrowB-
- ⑥43 - Ground Connection 1 (secondary air pump), near right wheel housing -arrowA-

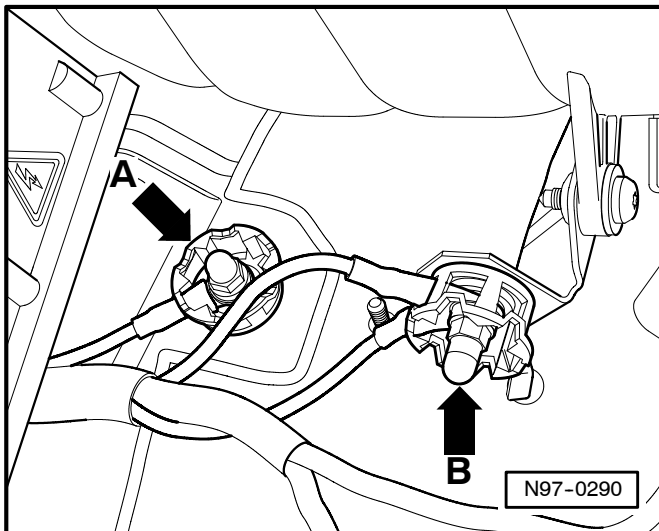


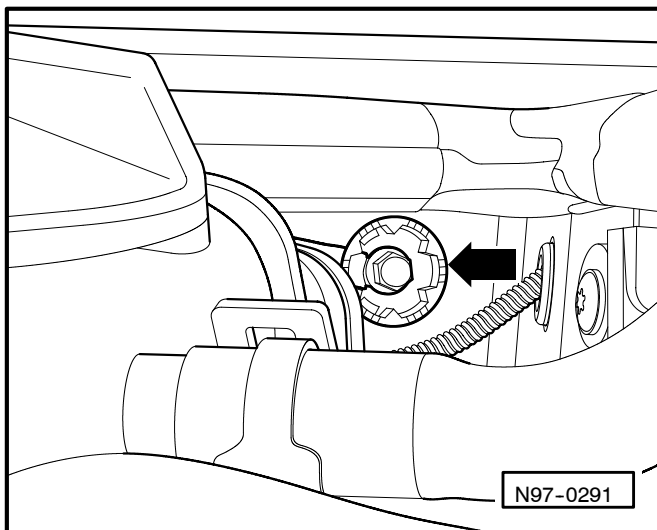


- 644 - Ground Connection (in engine compartment, right) -arrow
-

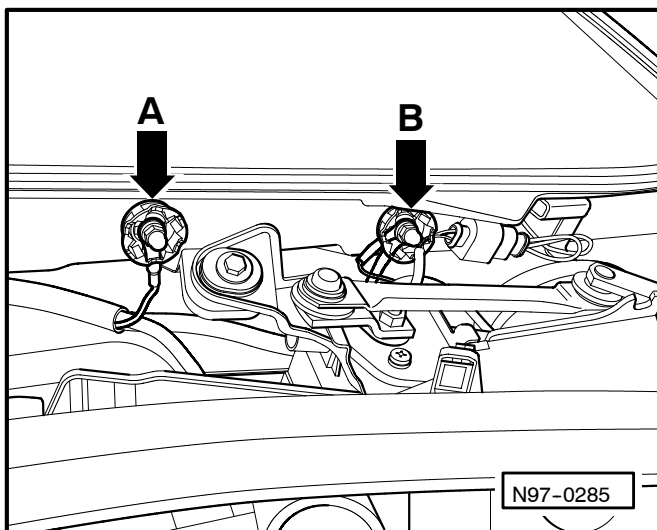

- 645 - Ground Connection 1 (on firewall) left -arrowB-
646 - Ground Connection 2 (on firewall) left -arrowA-

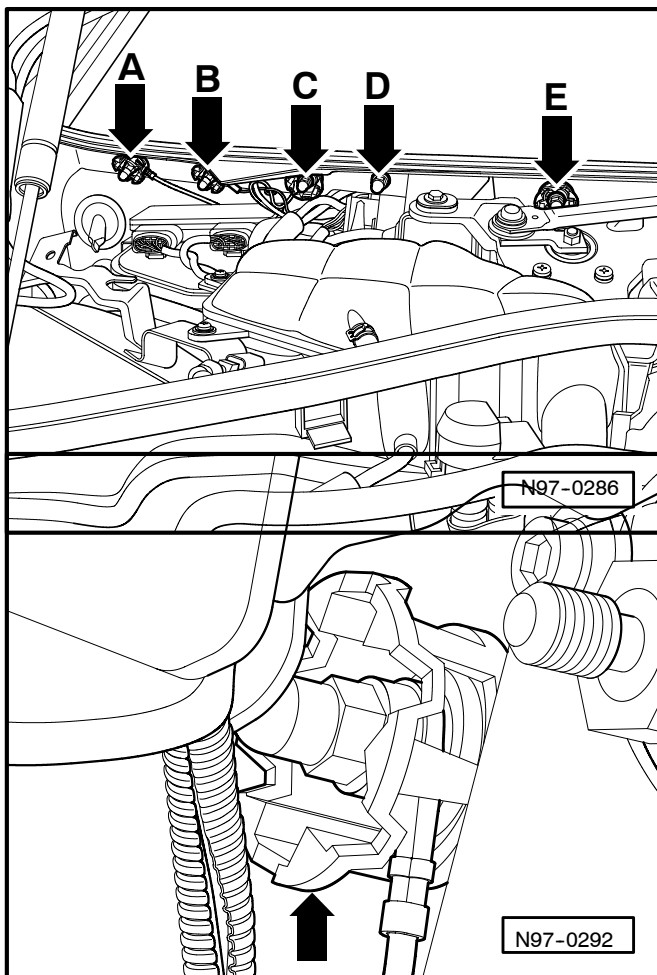


- 647 - Ground Connection 3 (on firewall) right -arrowE -
 - 648 - Ground Connection 4 (on firewall) right -arrowD -
 - 649 - Ground Connection 5 (on firewall) right -arrowC -
 - 650 - Ground Connection 6 (on firewall) right -arrowB -
 - 651 - Ground Connection 7 (on firewall) right -arrowA -
-
- 652 - Ground Connection (transmission/engine ground), on right front long member -arrow-

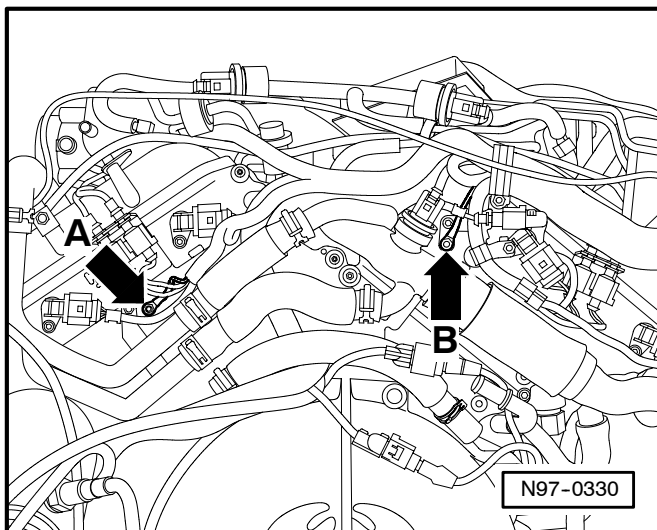**12-cylinder engine - code BAP**

600 - Ground Point on cylinder head, right -arrowB -


12-cylinder engine - code BAP

601 - Ground Point on cylinder head, left -arrowA -

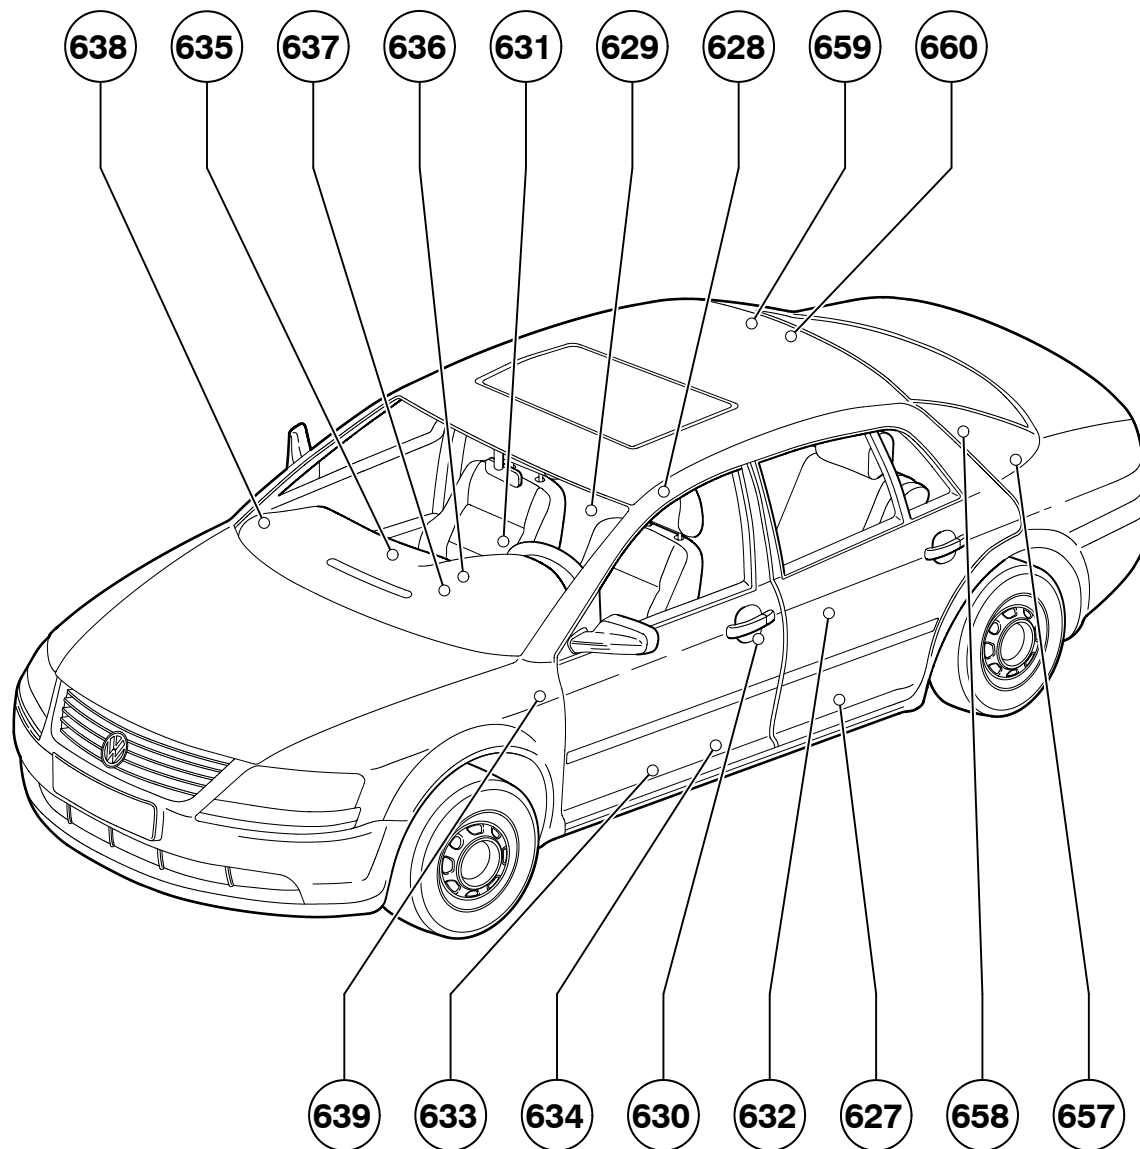


Ground connections in passenger compartment, overview


N97-0353

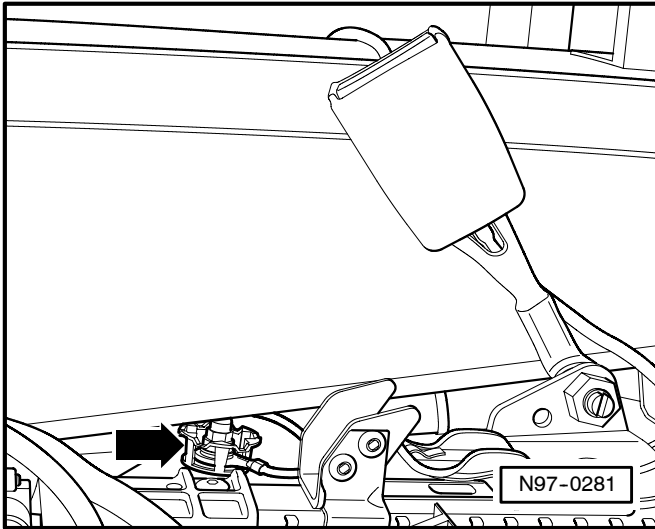


- 627 - Ground Connection 1 (seat control module), under rear seat, middle -arrow-

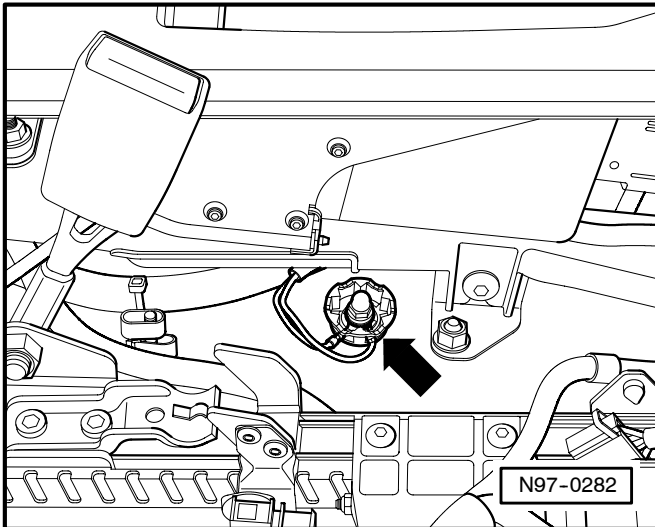


- 628 - Ground Connection 2 (seat control module), under rear seat, middle -arrow-

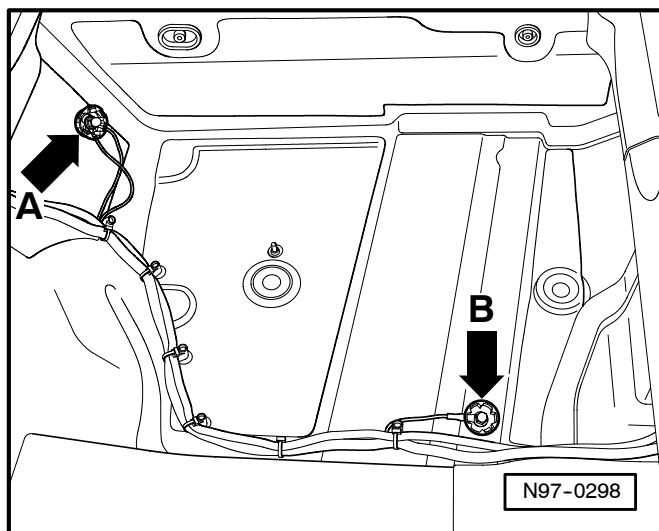


- 629 - Ground Connection (Radio, TV, Central Display Unit), near central tunnel, right rear -arrowA -

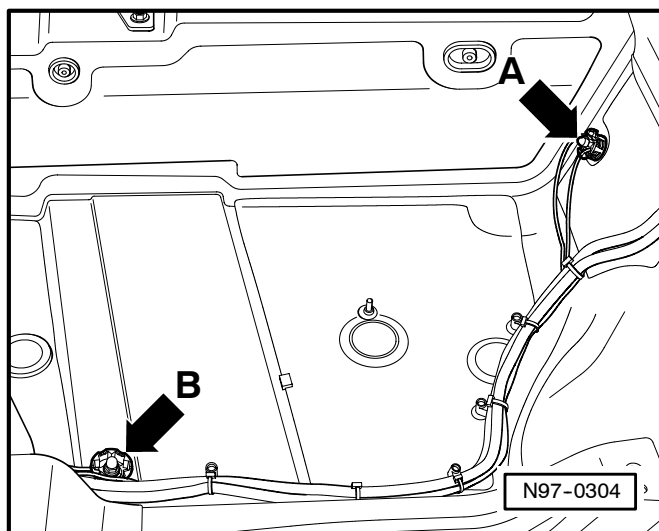


- 630 - Ground Connection (Radio, A/C), near central tunnel, left rear -arrowA -

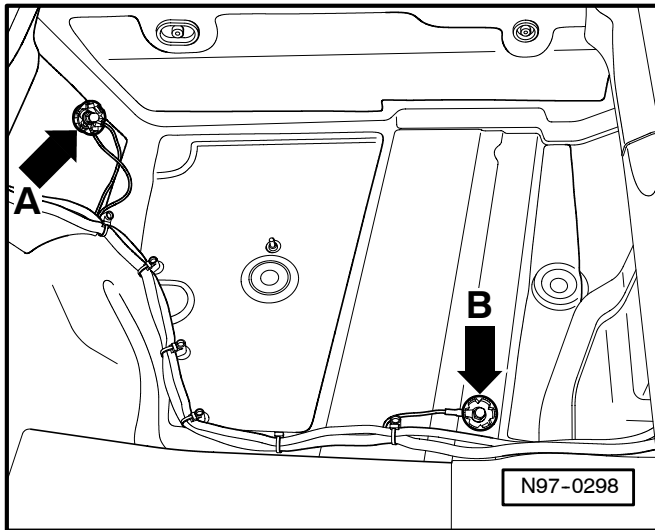


- 631 - Ground Connection (right rear door), floor, near right B-pillar -arrowB -

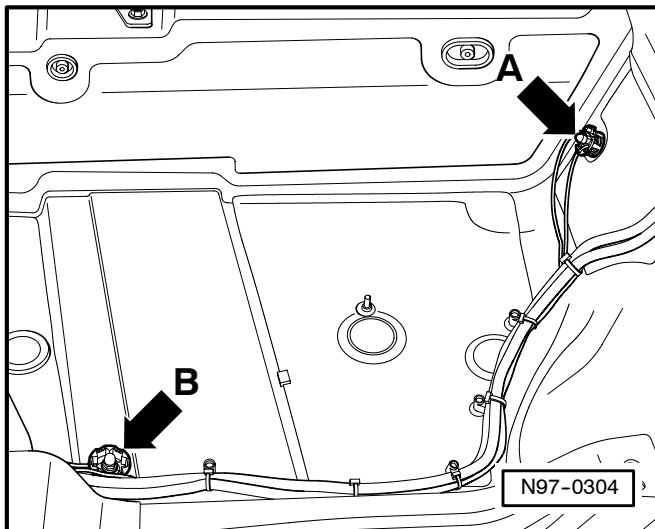


- 632 - Ground Connection (left rear door), floor, near left B-pillar -arrowB -

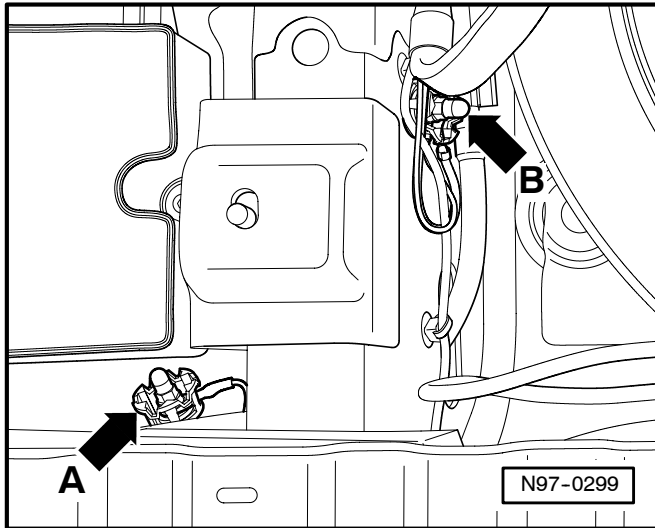

- 633 - Access/Start Control Module Ground Connection, by driver's seat frame -arrowA -
- 634 - Ground Connection (driver's seat control module), by driver's seat frame -arrowB -

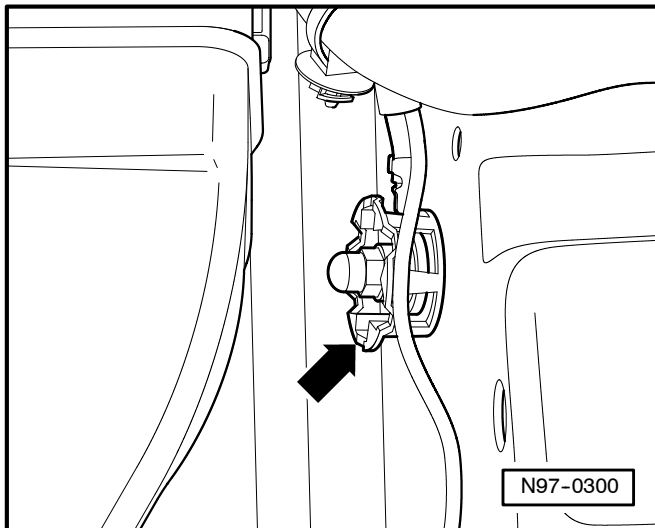


- 635 - Ground Connection (passenger's seat control module), by front passenger's seat frame -arrow-

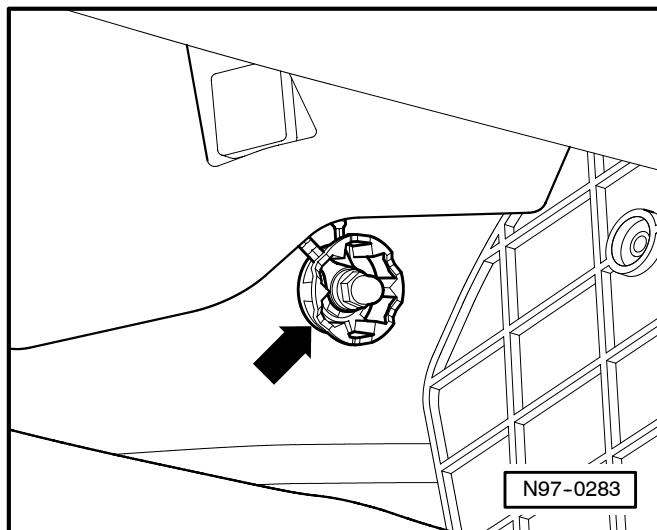


636

- Ground Connection (power circuit control module), front passenger's footwell/tunnel -arrow-

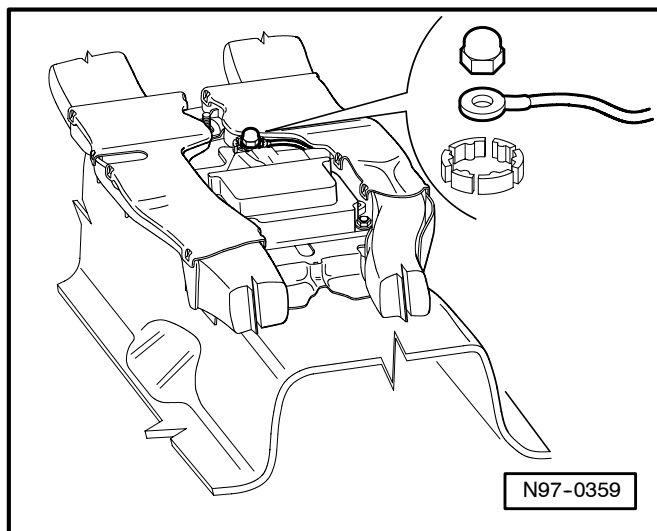


637


- Ground Connection (airbag control module), on center of front tunnel, under center console -arrow-

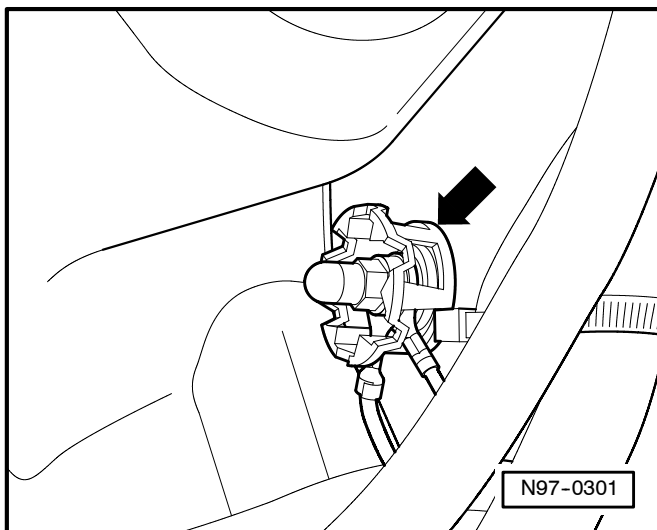

- 638 - Ground Connection (on right A-pillar), behind instrument panel, right -arrow-

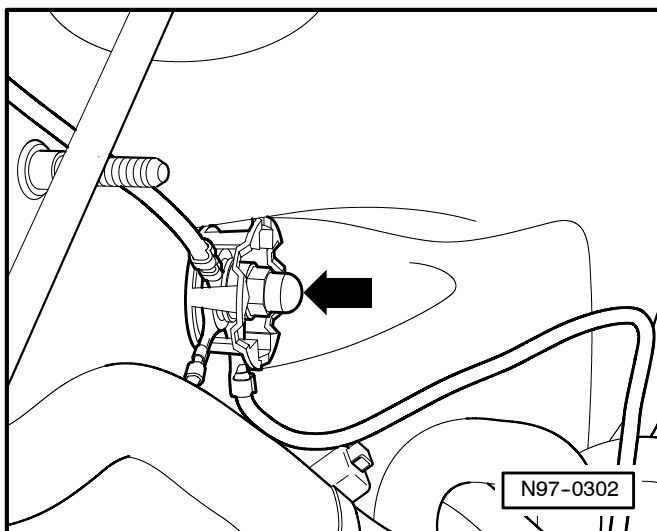


- 639 - Ground Connection (on left A-pillar), behind instrument panel, left -arrow-

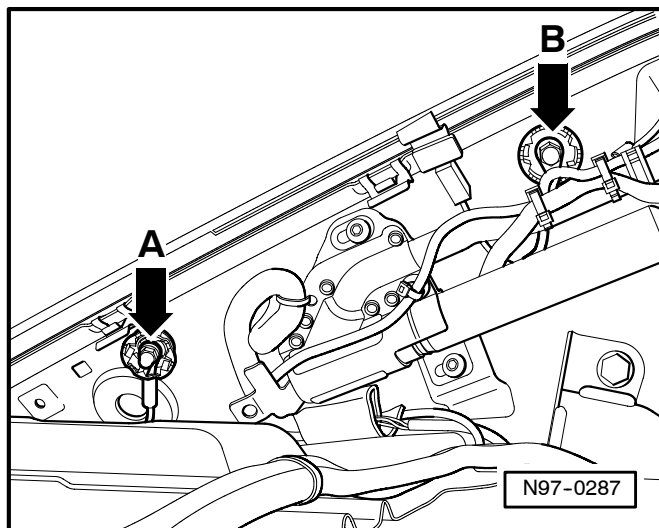


657 - Ground Connection 1 (left, near rear window), -arrowA-

658 - Ground Connection 2 (left, near rear window) -arrowB-

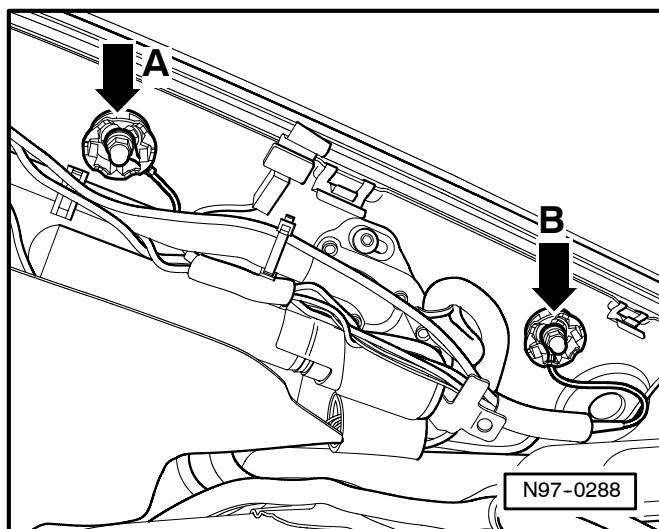


659 - Ground Connection 1 (right, near rear window) -arrowA-

660 - Ground Connection 2 (right, near rear window) -arrowB-

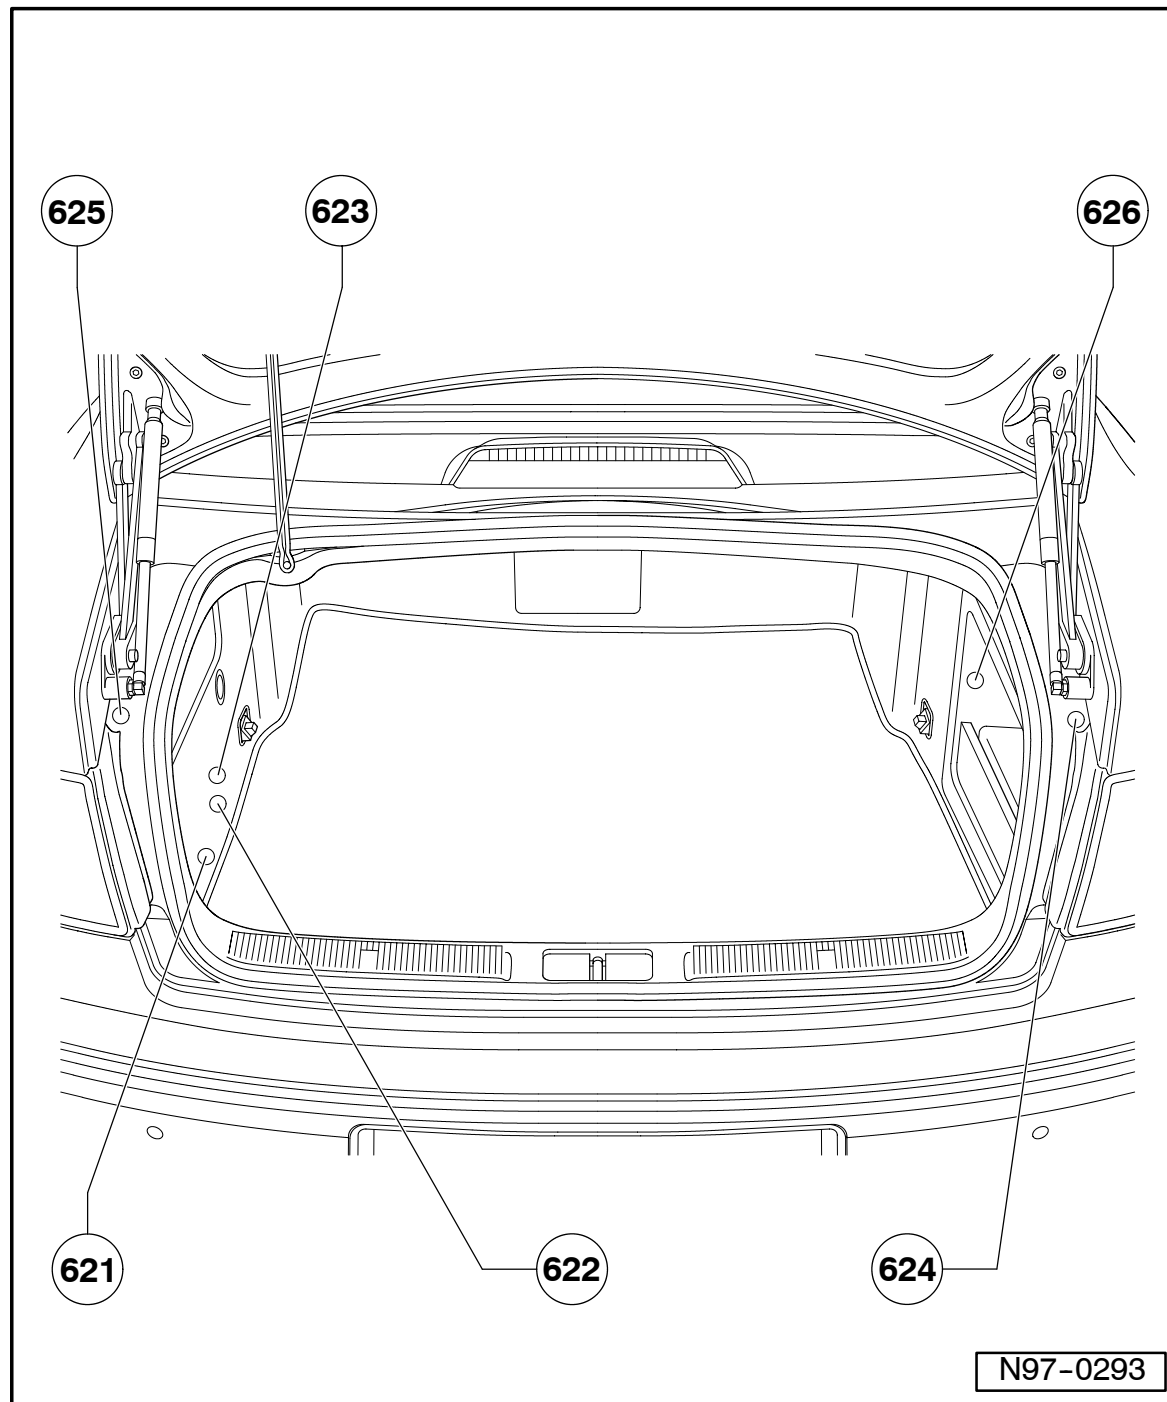
Ground connections in luggage compartment, overview


Ground connections in luggage compartment

- ⑥21 - Ground Connection (power circuit battery), on battery console -arrow-

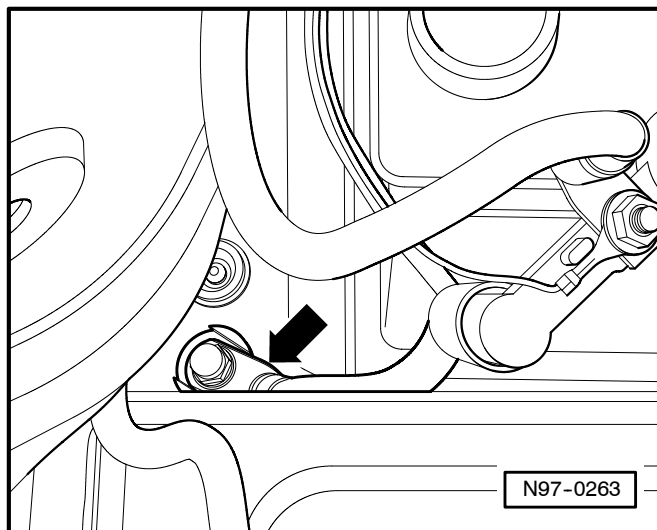


- ⑥22 - Ground Connection 1 (ground plate), in luggage compartment, left -arrow-

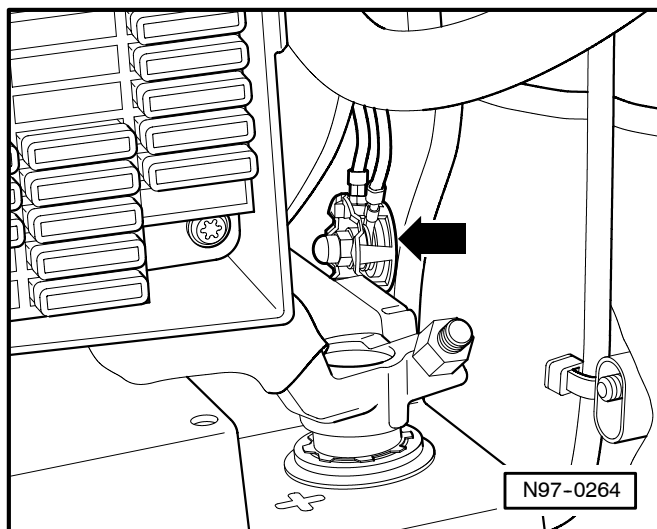


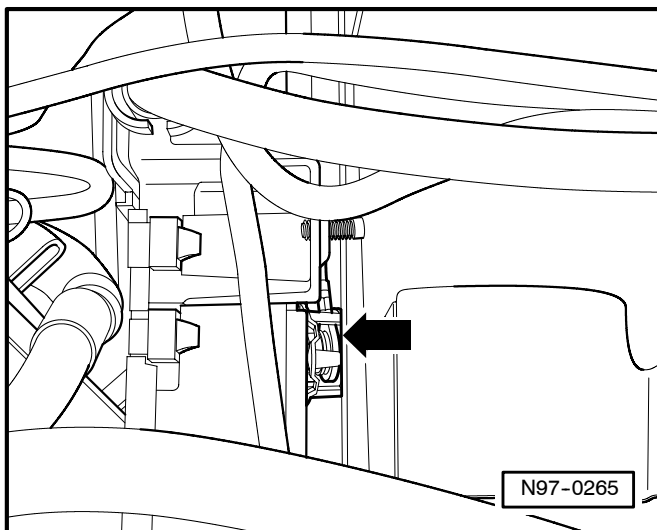


- 623 - Ground Connection 2 (ground plate), in luggage compartment, left -arrow-

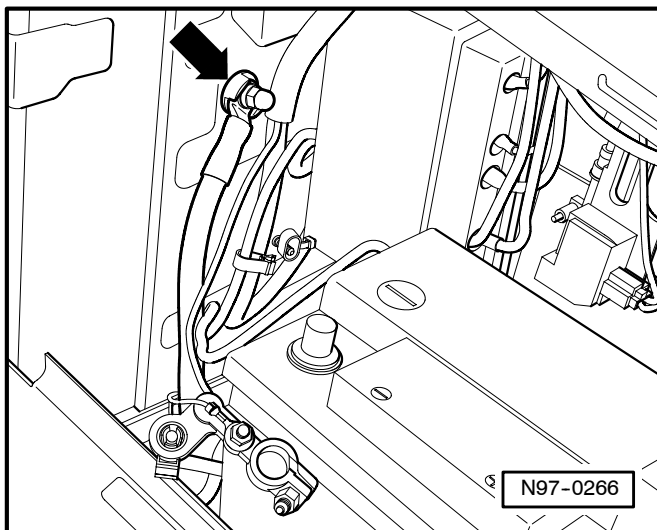

- 624 - Ground Connection (starter battery), in luggage compartment, right -arrow-

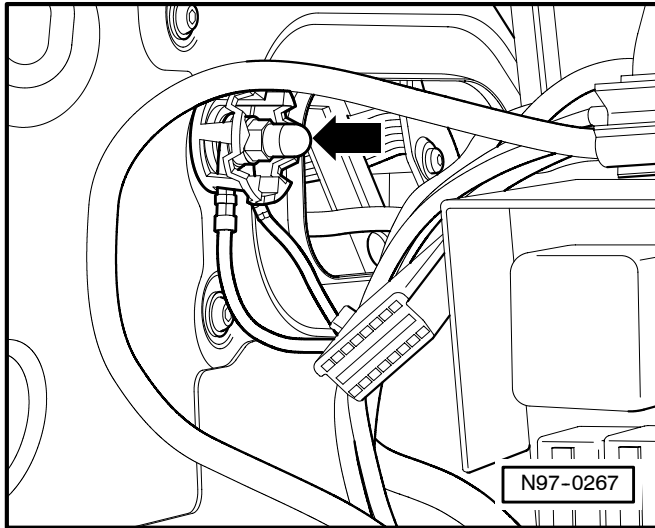

- 625 - Ground Connection (left rear lights), near rear lights, left
-arrow-

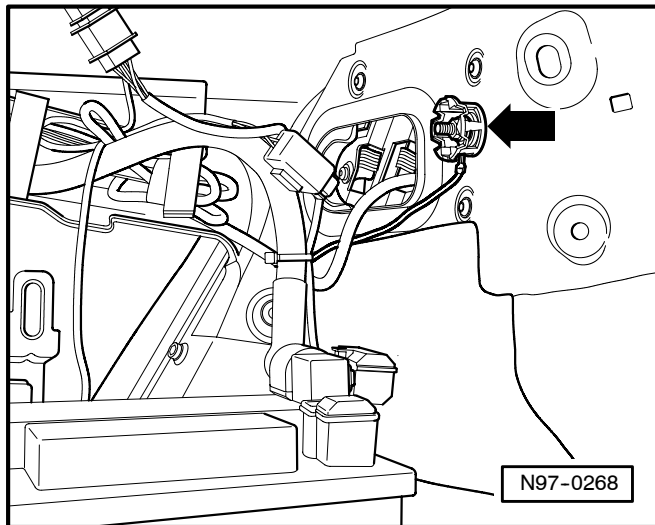

- 626 - Ground Connection (right rear lights), near rear lights, right
-arrow-