



**G169 Fuel Level Sensor 2**

- in fuel tank, beneath luggage compartment, right side