



**G237 Fuel Supply Sensor 3**

- in fuel tank, beneath luggage compartment, left side