



**T3      3-Pin Connector**

- in engine compartment, bottom, right, behind splash shield
- for Starter –B– and Generator –C–