



G6 **Transfer Fuel Pump (FP)**

- in fuel tank, beneath luggage compartment, left side