



G23 Fuel Pump (FP)

- in fuel tank, beneath luggage compartment, right side