



F8 Kick Down Switch

- in passenger compartment, on bulkhead, beneath accelerator pedal