


Control Modules and Relays - Multi-pin connector views & locations


-J519- Vehicle Electrical System Control Module

-J519- Multi-pin connector views:

- A = Multi-pin connector, 26-pin
- B = Multi-pin connector, 6-pin
- C = Multi-pin connector, 6-pin
- D = Multi-pin connector, 6-pin
- E = Multi-pin connector, 6-pin
- F = Multi-pin connector, 6-pin
- G = Multi-pin connector, 4-pin
- H = Multi-pin connector, 2-pin
- J = Multi-pin connector, 18-pin
- K = Multi-pin connector, 6-pin

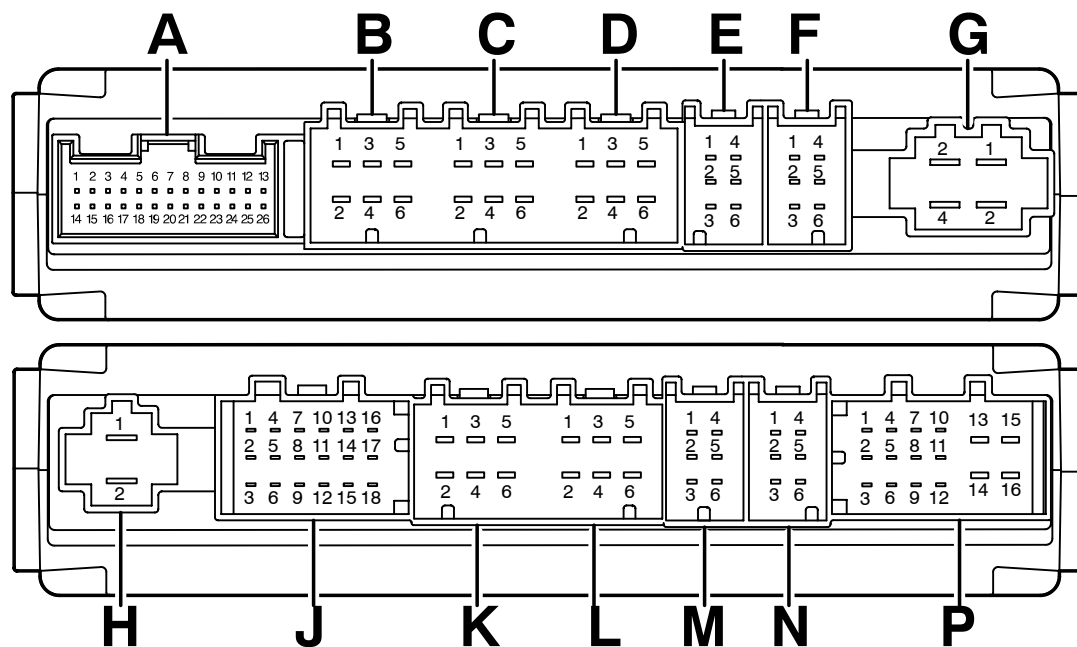


N97-0307

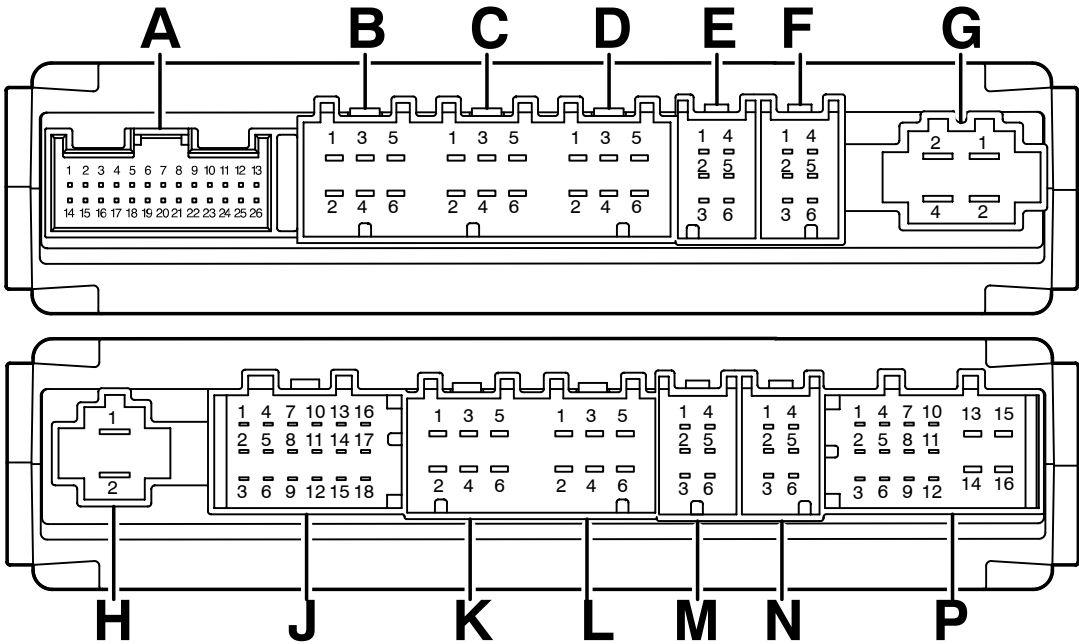

-J519- Multi-pin connector views:

- L = Multi-pin connector, 6-pin
- M = Multi-pin connector, 6-pin
- N = Multi-pin connector, 6-pin
- P = Multi-pin connector, 16-pin

N97-0307

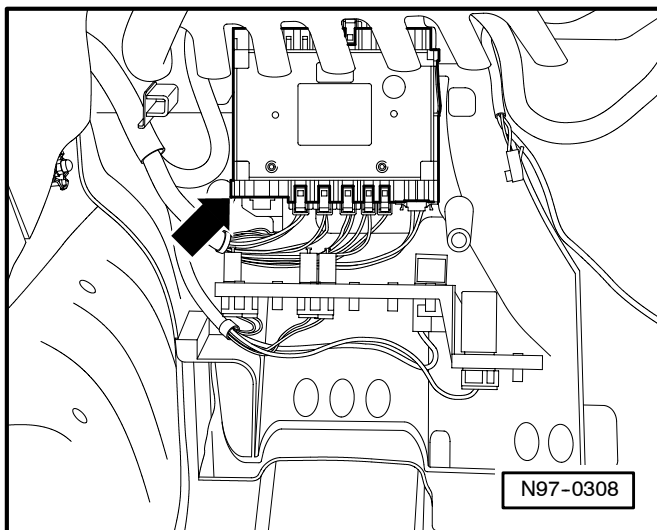

-J519- Location:

Under instrument panel, right, in upper footwell -arrow-.

-J197- Level Control System Control Module

A = -J197- Level Control System Control Module


-J197 - Multi-pin connector views:

Note:


Connection T121 at -J197- consists of two parts, B & C

B = Multi-pin connector, 81-pin

C = Multi-pin connector, 40-pin

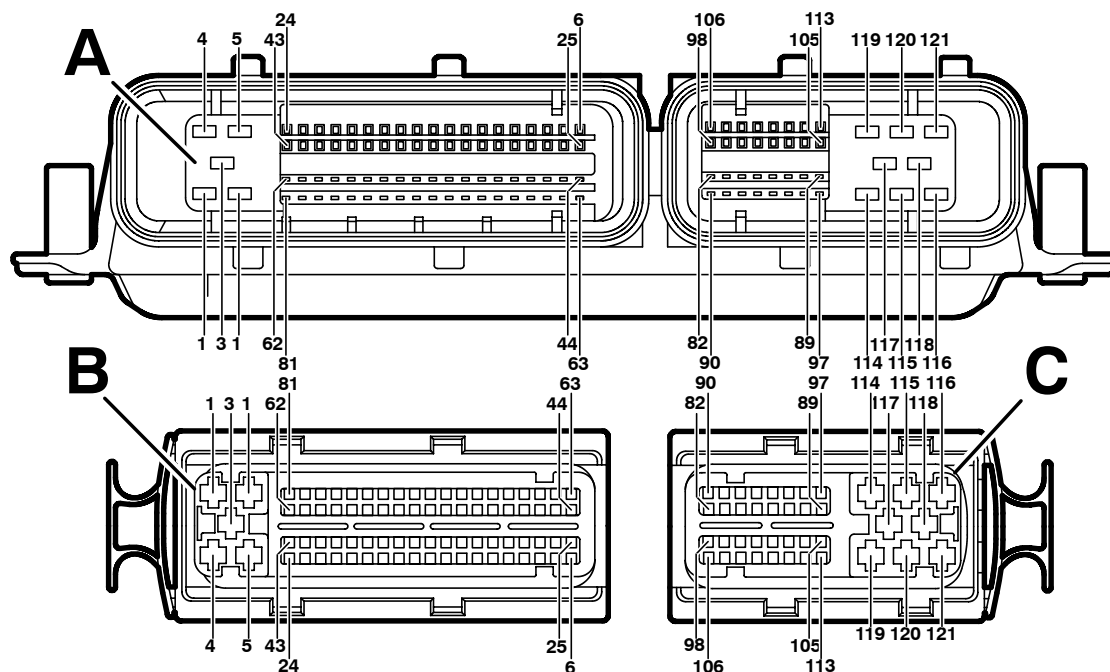

N97-0309

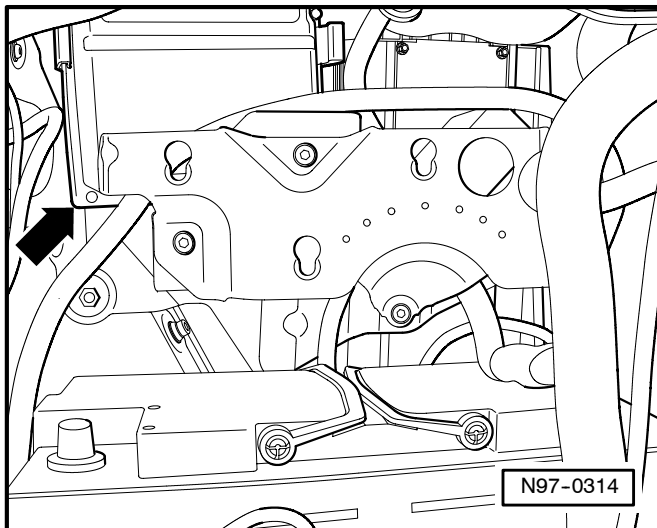

-J197- Location:

Luggage compartment, left - arrow-

-J623- Engine Control Module (ECM)
- Master (12-cylinder engine only)

A = Engine Control Module (ECM)


-J623- Multi-pin connector views:

Note:


Connection T121 at -J623- consists of two parts, B & C

B = Multi-pin connector, 81-pin

C = Multi-pin connector, 40-pin

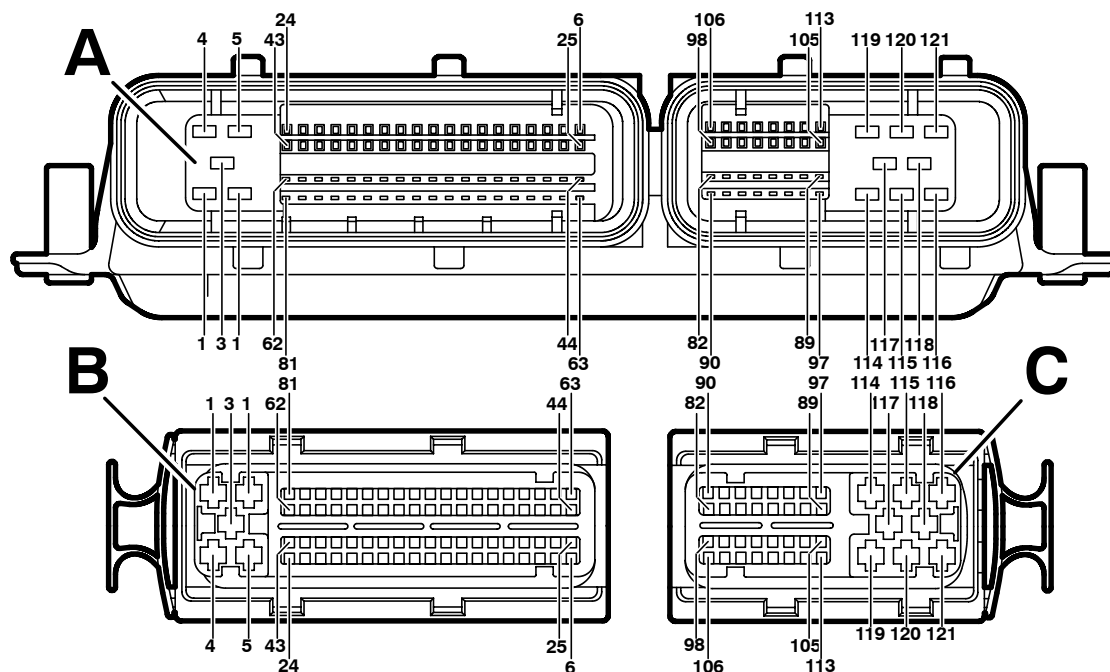

N97-0309

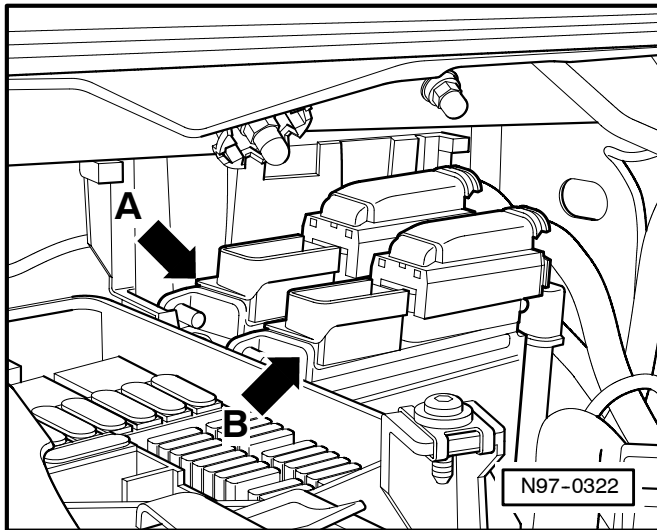

-J623- Location:

In air plenum, right -arrowA-.

**-J624- Engine Control Module (ECM)
2 - Slave (12-cylinder engine only)**

A = Engine Control Module (ECM) 2


-J624- Multi-pin connector views:

Note:


Connection T121 at -J624- consists of two parts, B & C

B = Multi-pin connector, 81-pin

C = Multi-pin connector, 40-pin

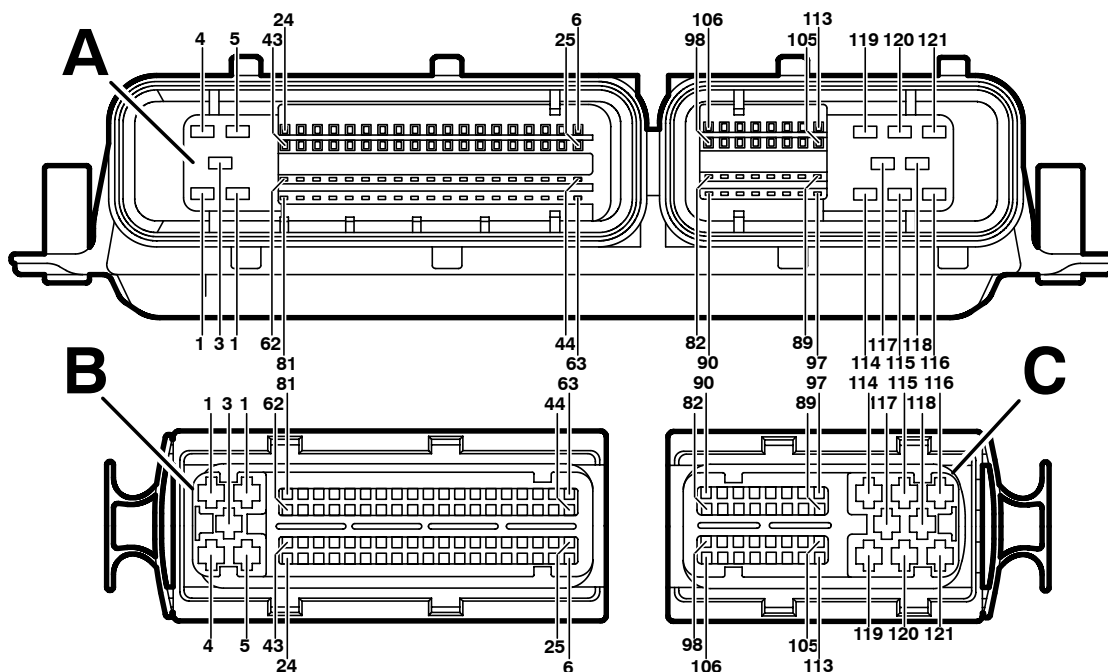

N97-0309

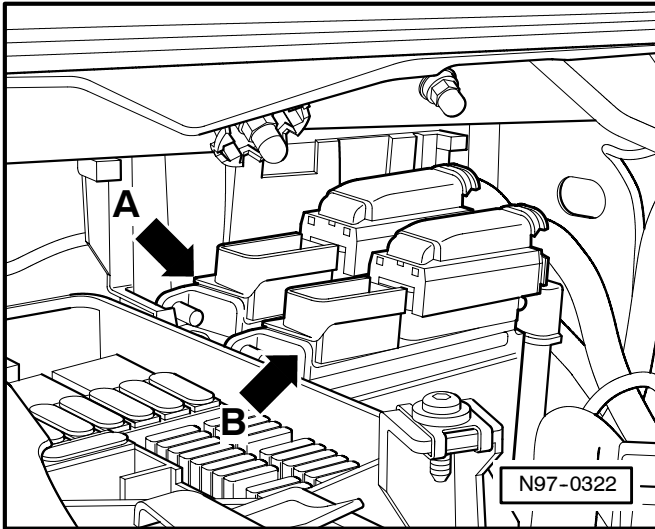

-J624- Location:


In right air plenum -arrowB-.

**-J502- Tire Pressure Monitoring
Control Module**


A = Tire Pressure Monitoring Control
Module

-J502- Multi-pin connector view:

B = Multi-pin connector, 32-pin

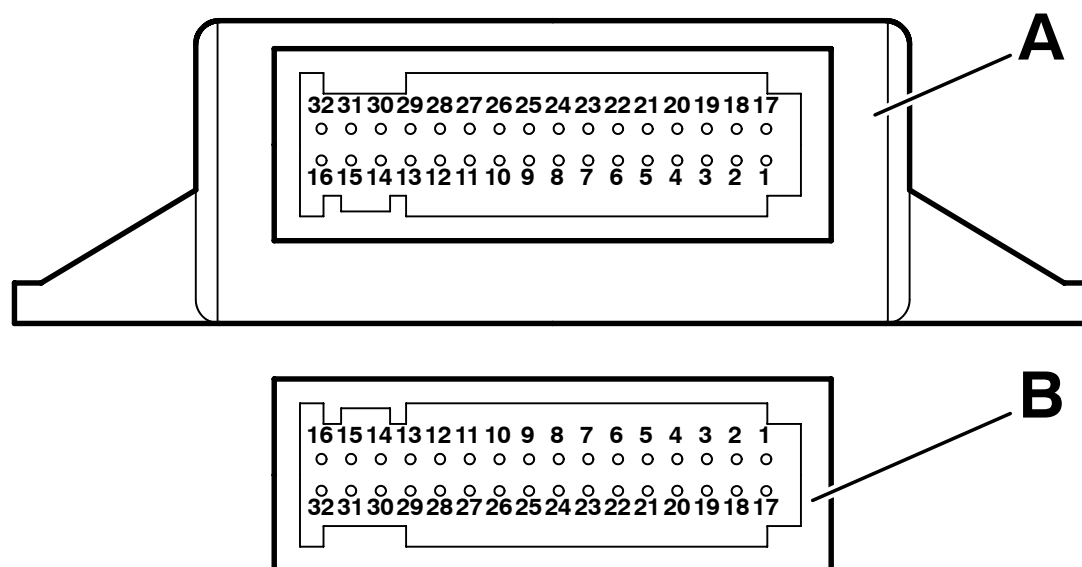

N97-0315

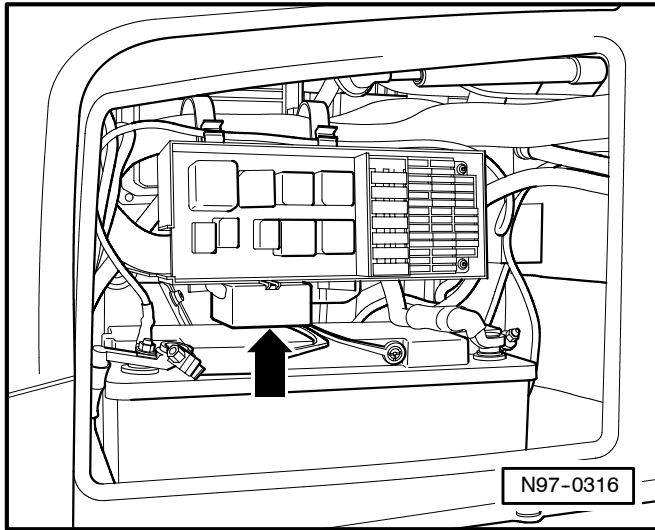

-J502- Location:

In luggage compartment, left -arrow-.


-J367- Battery Monitoring Control Module

A = Battery Monitoring Control Module


-J367- Multi-pin connector views

B = Multi-pin connector, 18-pin
(identified as connector "A" in wiring diagram)

C = Multi-pin connector, 2-pin
(identified as connector "B" in wiring diagram)

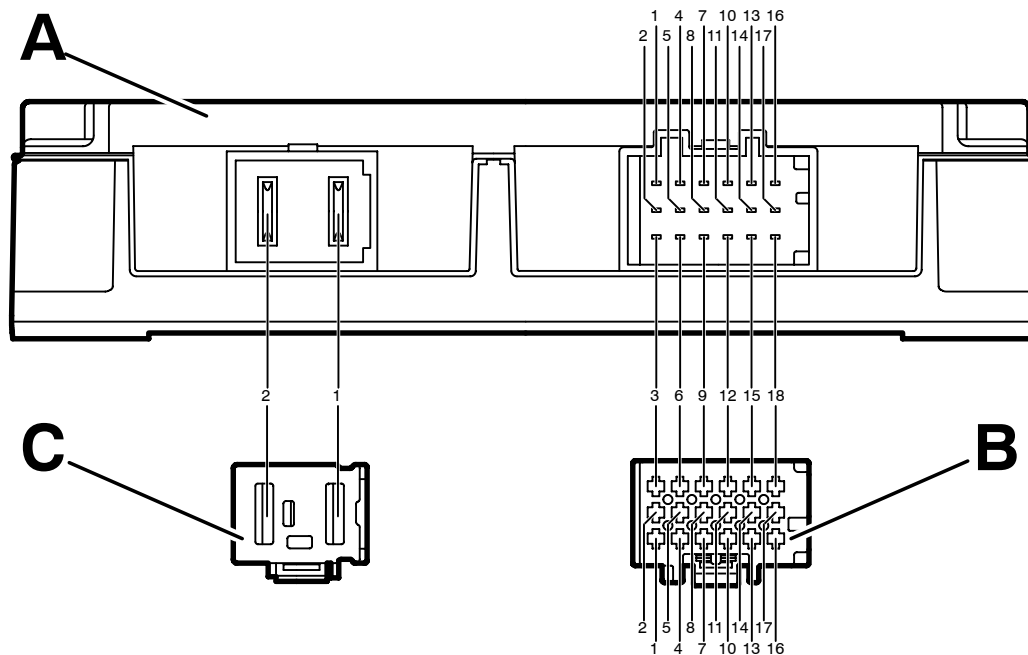

N97-0323

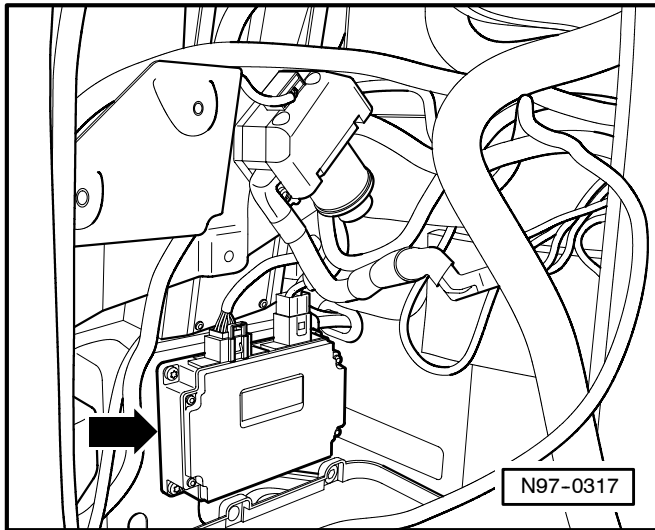

-J367- Location:

In luggage compartment, left -arrow-.


-J428- Control Module for Distance Regulation

A = Control Module for Distance Regulation


-J428- Multi-pin connector views:

B = Multi-pin connector, 14-pin

C = Multi-pin connector, 14-pin

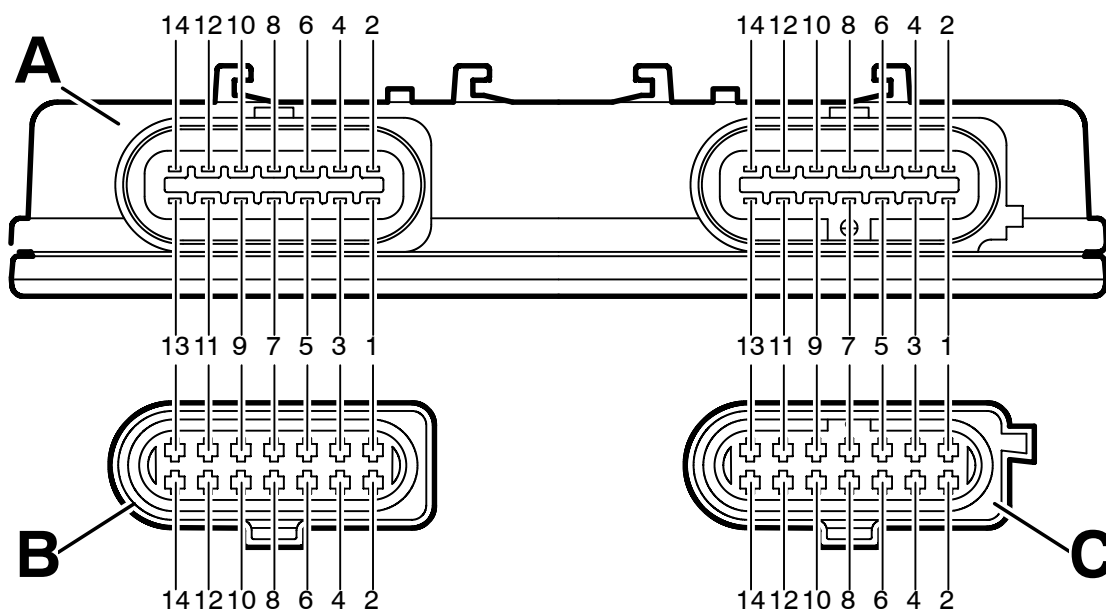

N97-0318

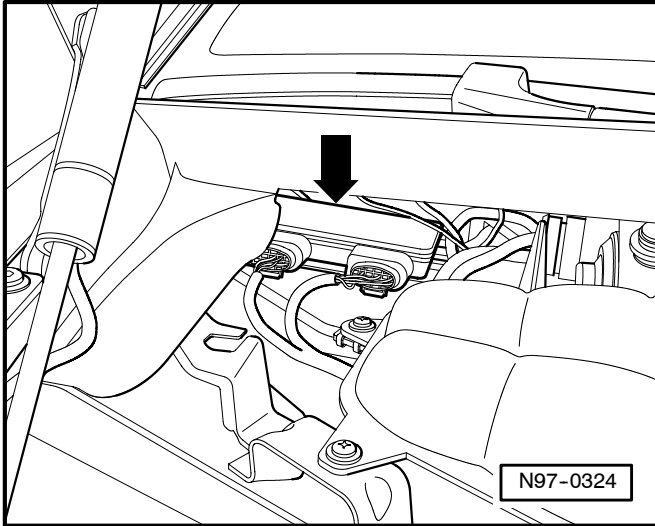

-J428- Location:

In air plenum, right -arrow-.


-J518- Access/Start Control Module

A = Access/Start Control Module


-J518- Multi-pin connector views:

B = Multi-pin connector, 6-pin

C = Multi-pin connector, 81-pin

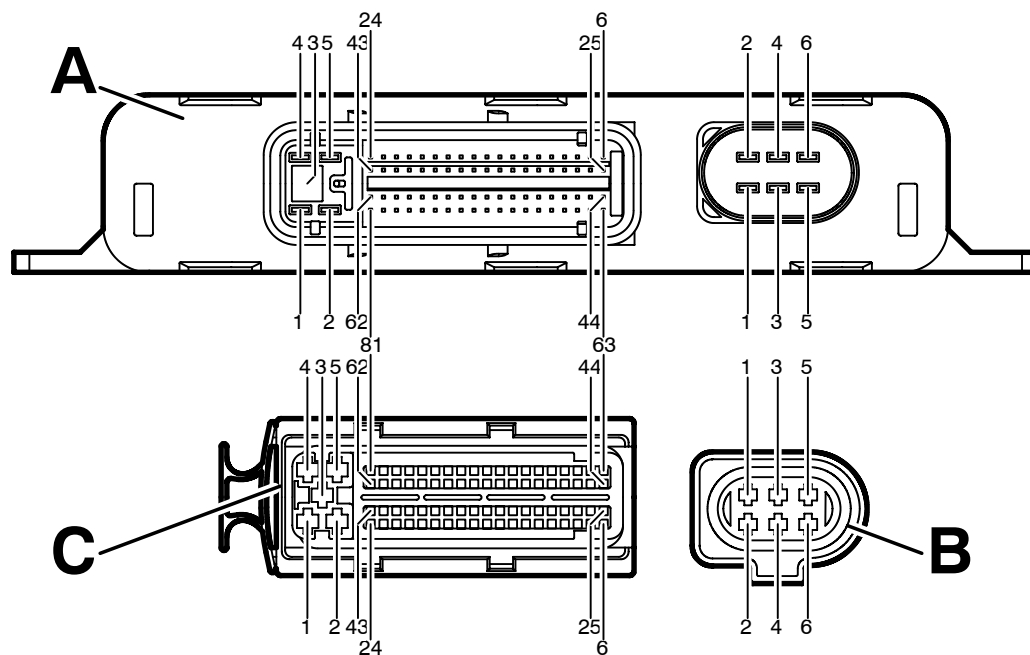

N97-0319

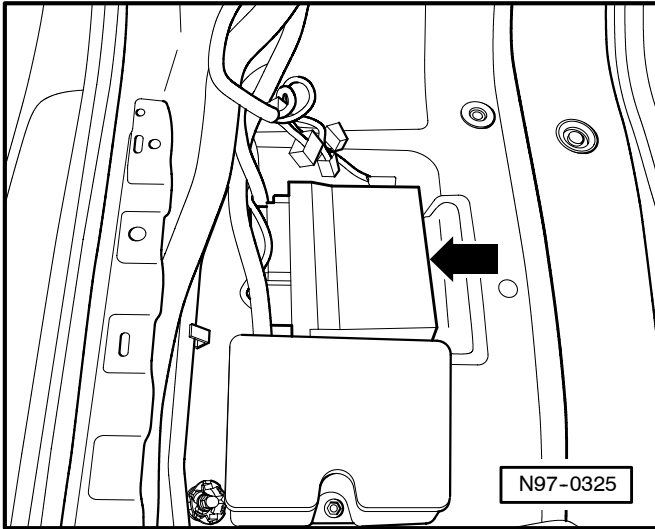

-J518- Location:

In right footwell -arrow-.


-J525- Digital Sound System Control Module (8-Channel)

A = Digital Sound System Control Module


-J528- Multi-pin connector views

B = Multi-pin connector T23b, green, 23-pin

C = Multi-pin connector T24d, grey, 24-pin

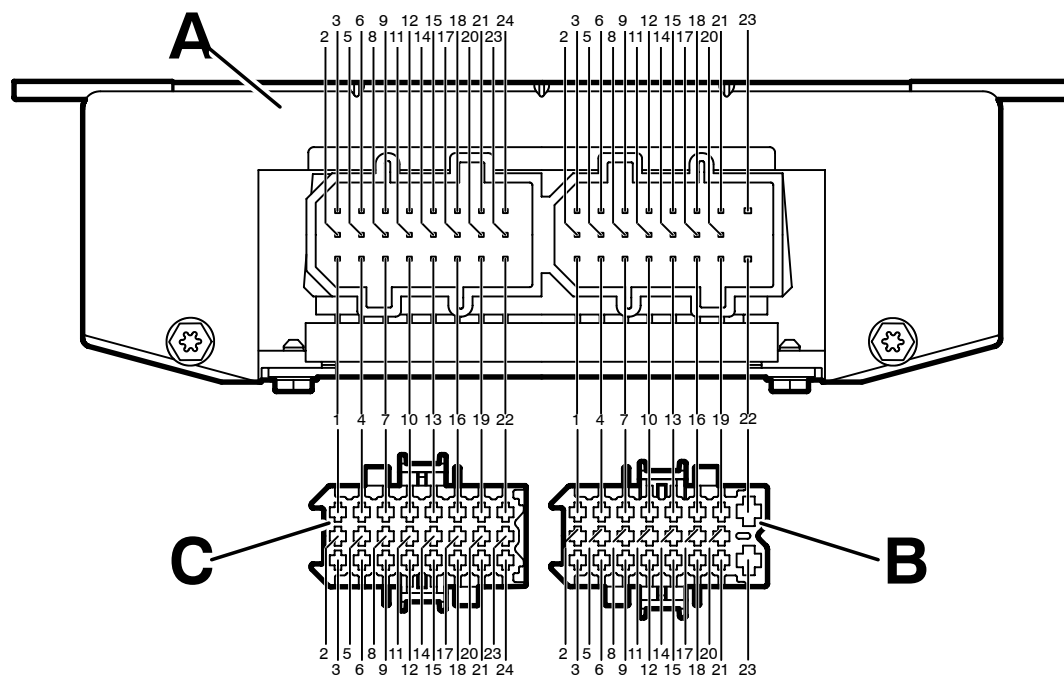

N97-0320

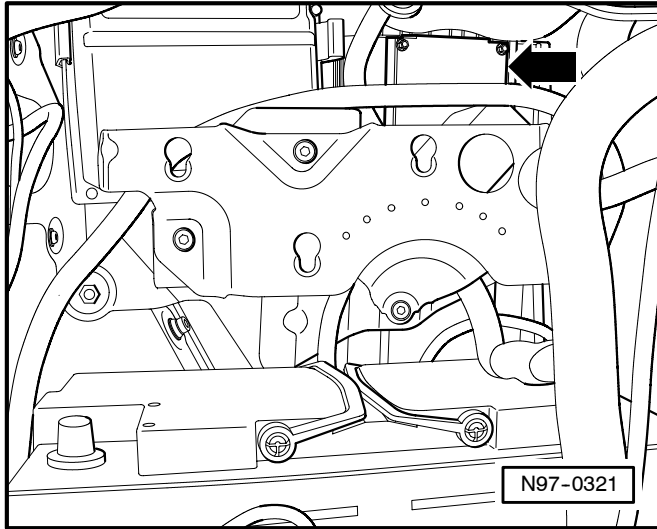

-J525- (8-channel) Location:

In luggage compartment , left -arrow-


-J136- Memory Seat/Steering Column Adjustment Control Module

-J136- Multi-pin connector views:


Note:

-J136- is used individually for the driver's, front passenger and rear seat locations. Multi-pin connector identification for all control module locations/applications is given below.

- A - Multi-pin connector, 26-pin
(Driver's seat: T26sa; Front passenger's seat: T26sb; Rear seats: T26sc)
- B - Multi-pin connector, 6-pin
(Driver's seat: T6sb; Front passenger's seat: T6sa; Rear seats: T6st)
- C - Multi-pin connector, 6-pin
(Driver's seat: T6sc; Front passenger's seat: T6sg; Rear seats: T6sz)
- D - Multi-pin connector, 6-pin
(Driver's seat: T6sd; Rear seats: T6su)
- E - Multi-pin connector, 6-pin
(Driver's seat: T6se; Front passenger's seat: T6sh; Rear seats: T6sv)

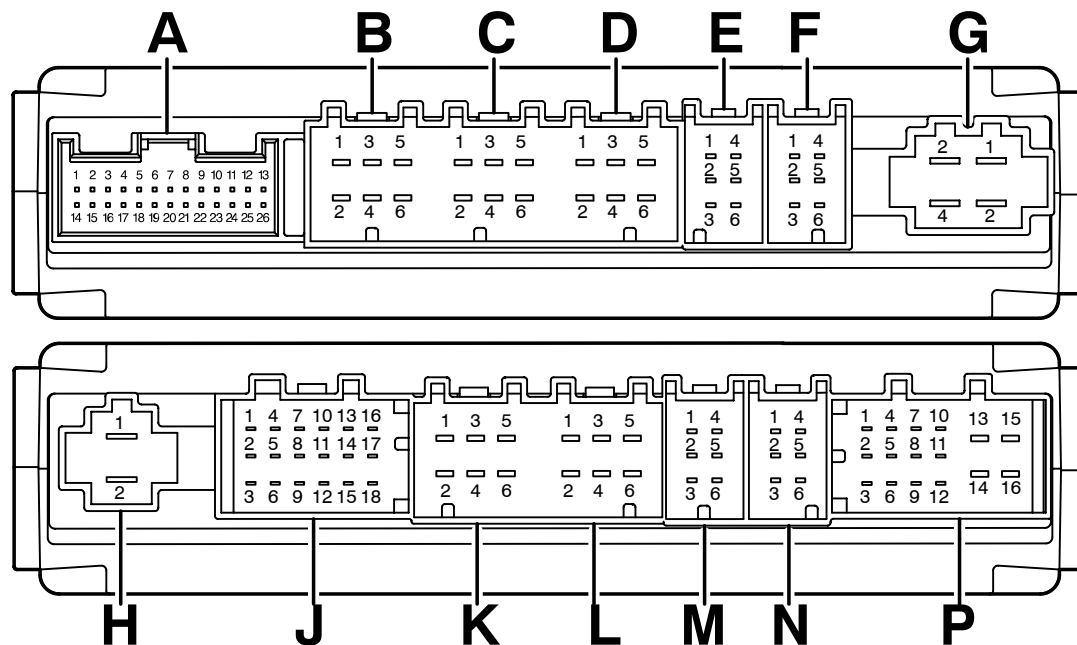


N97-0307

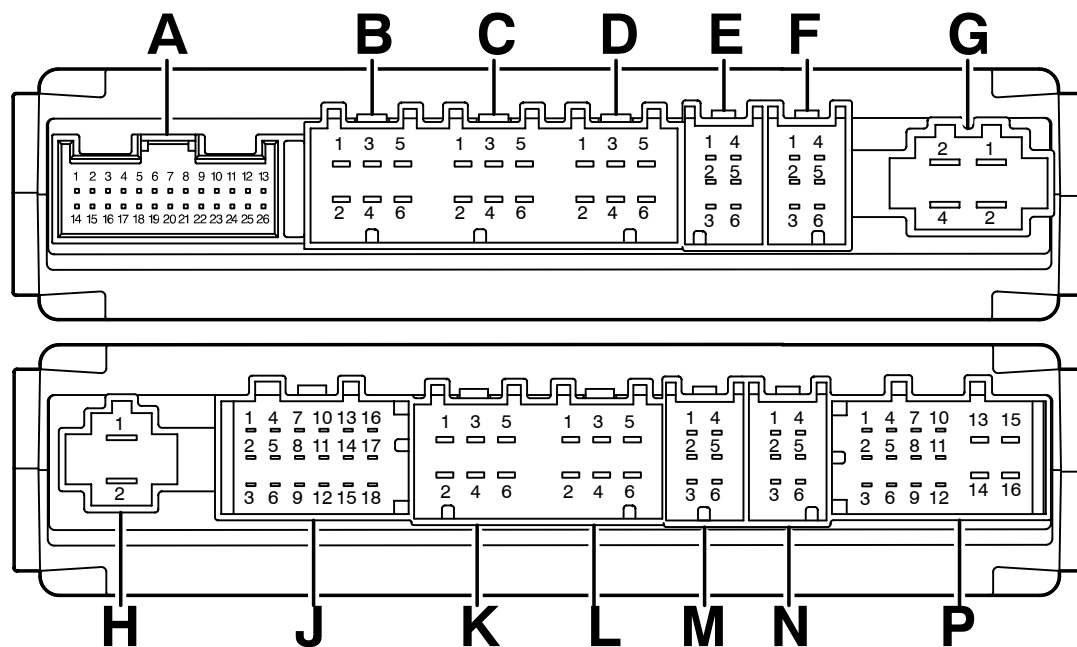**-J136- Multi-pin connector views:**

- F - Multi-pin connector, 6-pin
(Driver's seat: T6sf; Front passenger's seat: T6sj; Rear seats: T6sy)
- G - Multi-pin connector, 4-pin
(Driver's seat: T4sg; Front passenger's seat: T4sh; Rear seats: T4sj)
- H - Multi-pin connector, 2-pin
(Driver's seat: T2sh; Front passenger's seat: T2sj; Rear seats: T2sk)
- J - Multi-pin connector, 18-pin
(Driver's seat: T18sj; Front passenger's seat: T18sk; Rear seats: T18sl)
- K - Multi-pin connector, 6-pin
(Driver's seat: T6sk; Front passenger's seat: T6sp; Rear seats: T6sl)

N97-0307

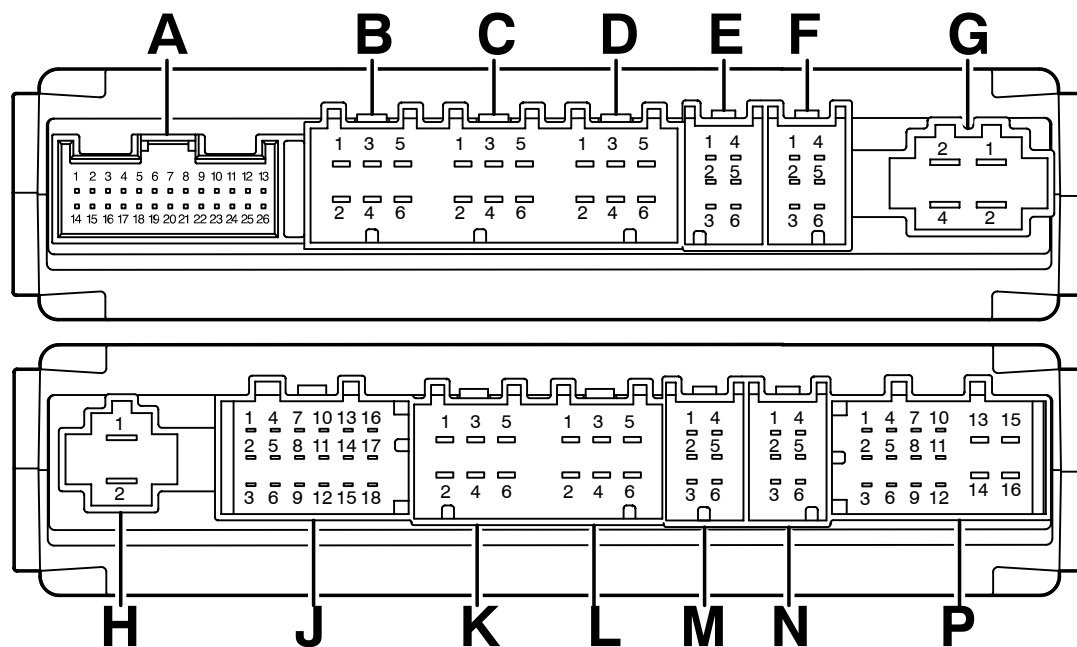**-J136- Multi-pin connector views:**


- L - Multi-pin connector, 6-pin
(Driver's seat: T6sl; Front passenger's seat: T6sq; Rear seats: T6so)
- M - Multi-pin connector, 6-pin
(Driver's seat: T6sm; Front passenger's seat: T6sr; Rear seats: T6sw)
- N - Multi-pin connector, 6-pin
(Driver's seat: T6sn; Front passenger's seat: T6ss; Rear seats: T6sx)
- P - Multi-pin connector, 16-pin
(Driver's seat: T16sp; Front passenger's seat: T16sn; Rear seats: T16sl)

N97-0307

-J136- for Driver's seat


Location:

Under driver's seat -arrow-.

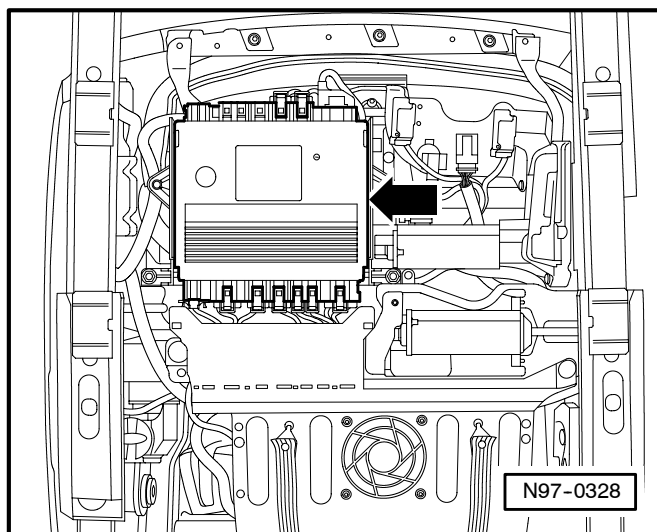**-J136- for Front passenger's seat**

Location:


Under front passenger's seat -arrow-.

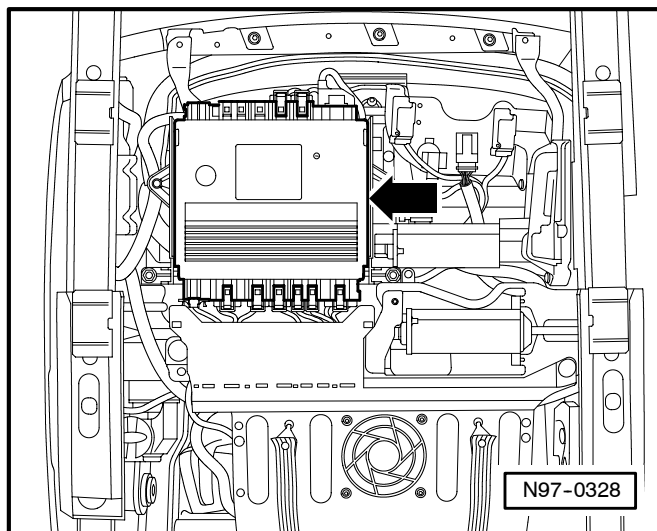

-J136- for Rear seats

Location:

Under rear seat -arrow-.

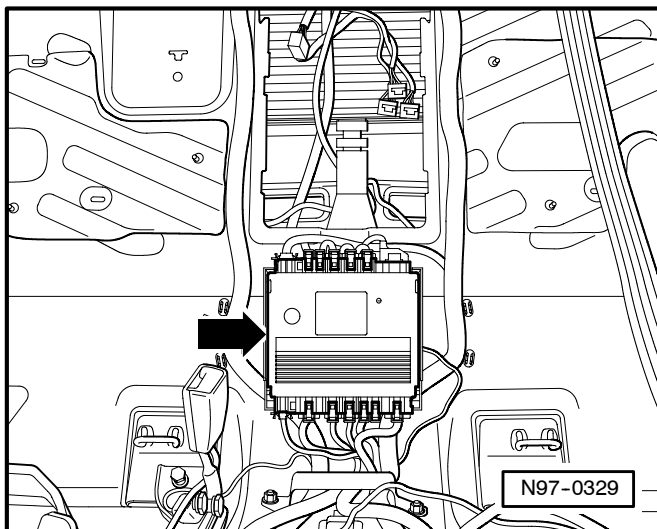


-J104- ABS Control Module (w/EDL)


A = ABS Control Module (w/EDL)

-J104- Multi-pin connector views

B = Multi-pin connector, 42-pin

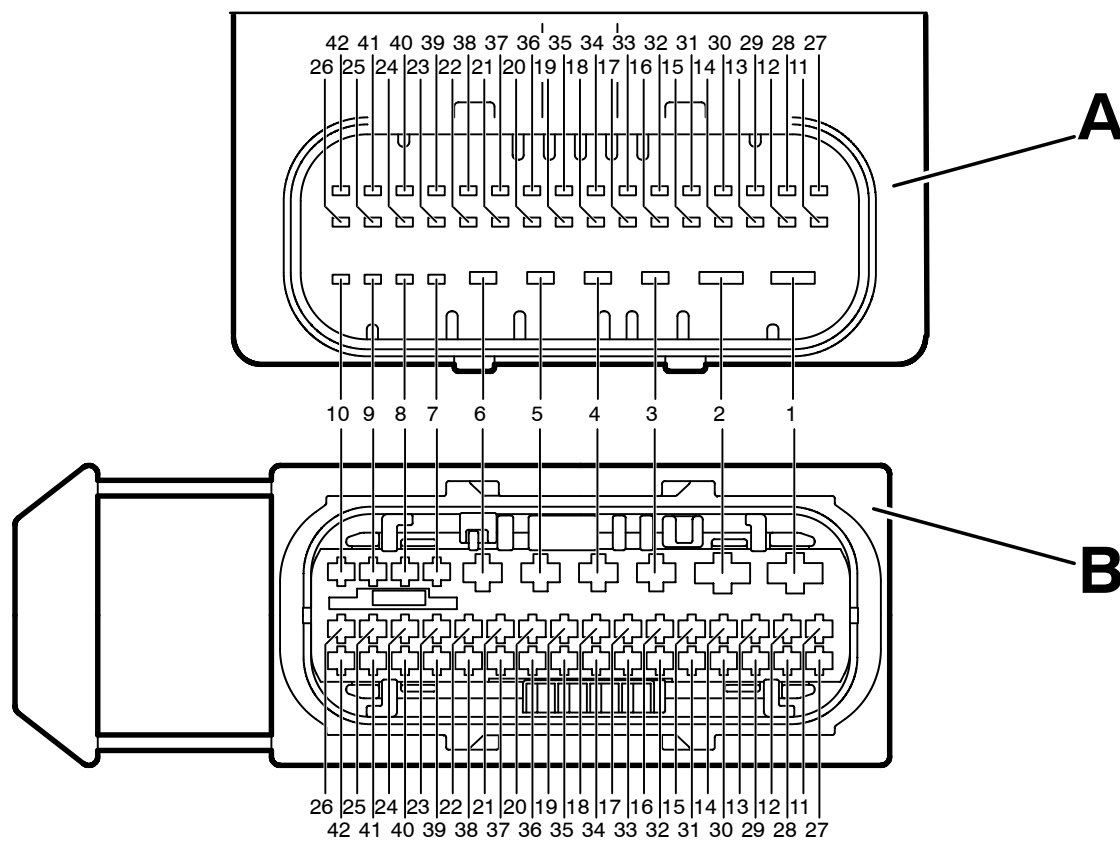

N97-0326

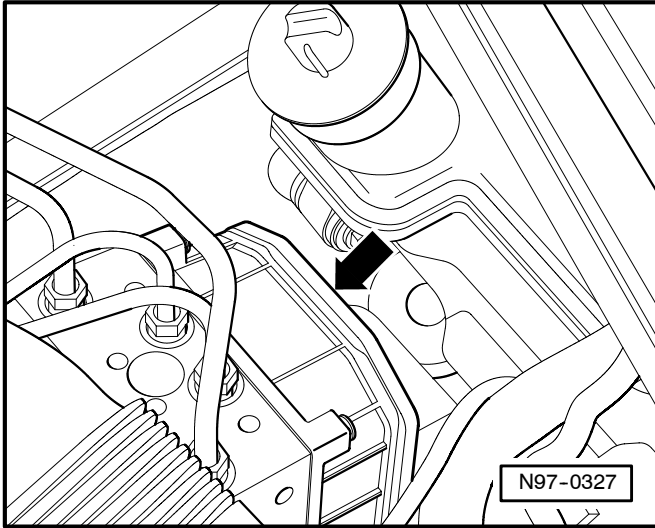

-J104- Location:


In engine compartment, left -arrow-.

**-J217- Automatic Transmisiion
Control Module (TCM)**


A = Automatic Transmission Control
Module

-J217- Multi-pin connector views:

B = Multi-pin connector, 88-pin

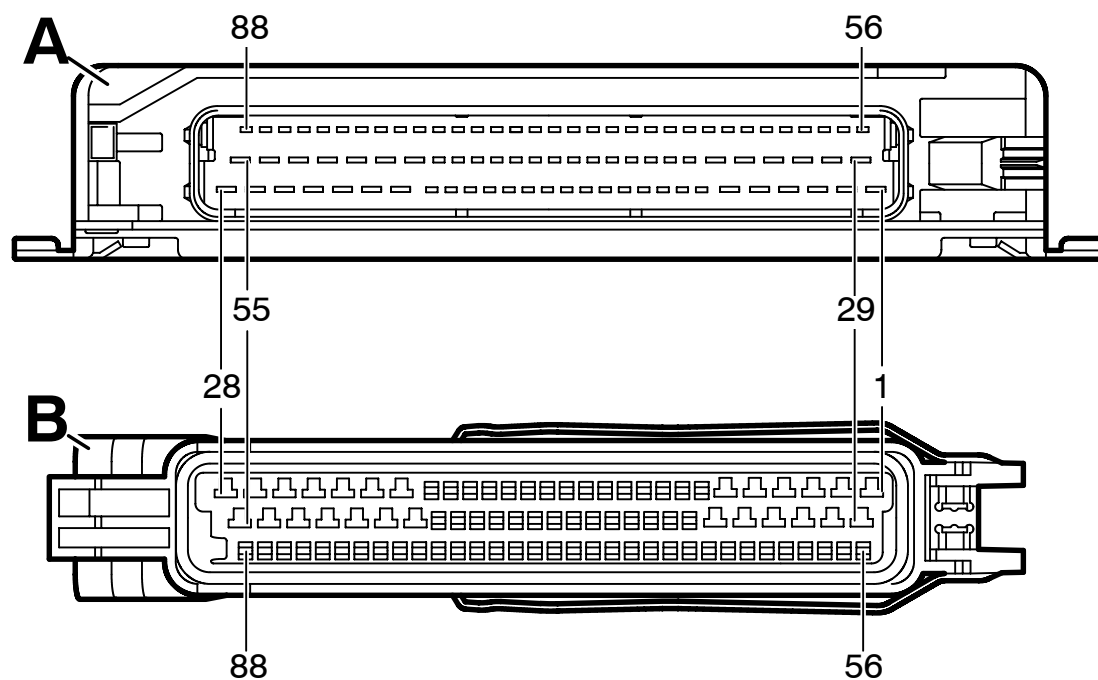

N97-0331

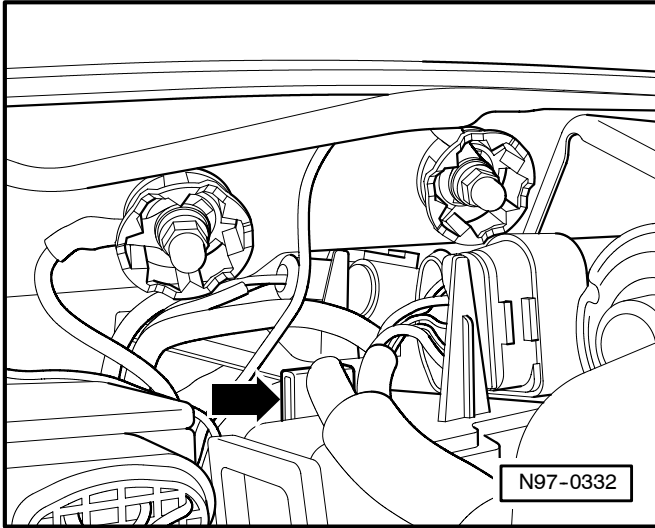

-J217- Location:

In air plenum, left -arrow-