

Servotronic,

from June 2003


Note:

Information for

- ◆ *Relay and fuse arrangements*
 - ◆ *Connector arrangements*
 - ◆ *Control Modules and Relays*
 - ◆ *Ground connections*
- ⇒ *Component Locations!*

Servotronic Control Module, Power Steering Hydraulic Pressure Valve

- J236 - Servotronic Control Module
 J285 - Control module with indicator unit in instrument panel insert
 N315 - Power Steering Hydraulic Pressure Valve
 SB70 - Fuse 70 (in fuse holder)
 T17g - 17-Pin Connector, red, behind instrument panel, left
 T32a - 32-Pin Connector, blue, on instrument cluster
 (373) - Ground Connection 8 (in main wiring harness)
 (636) - Ground Connection (power circuit control module)
 (B464) - Vehicle Speed Signal (VSS) Connection (in main wiring harness)

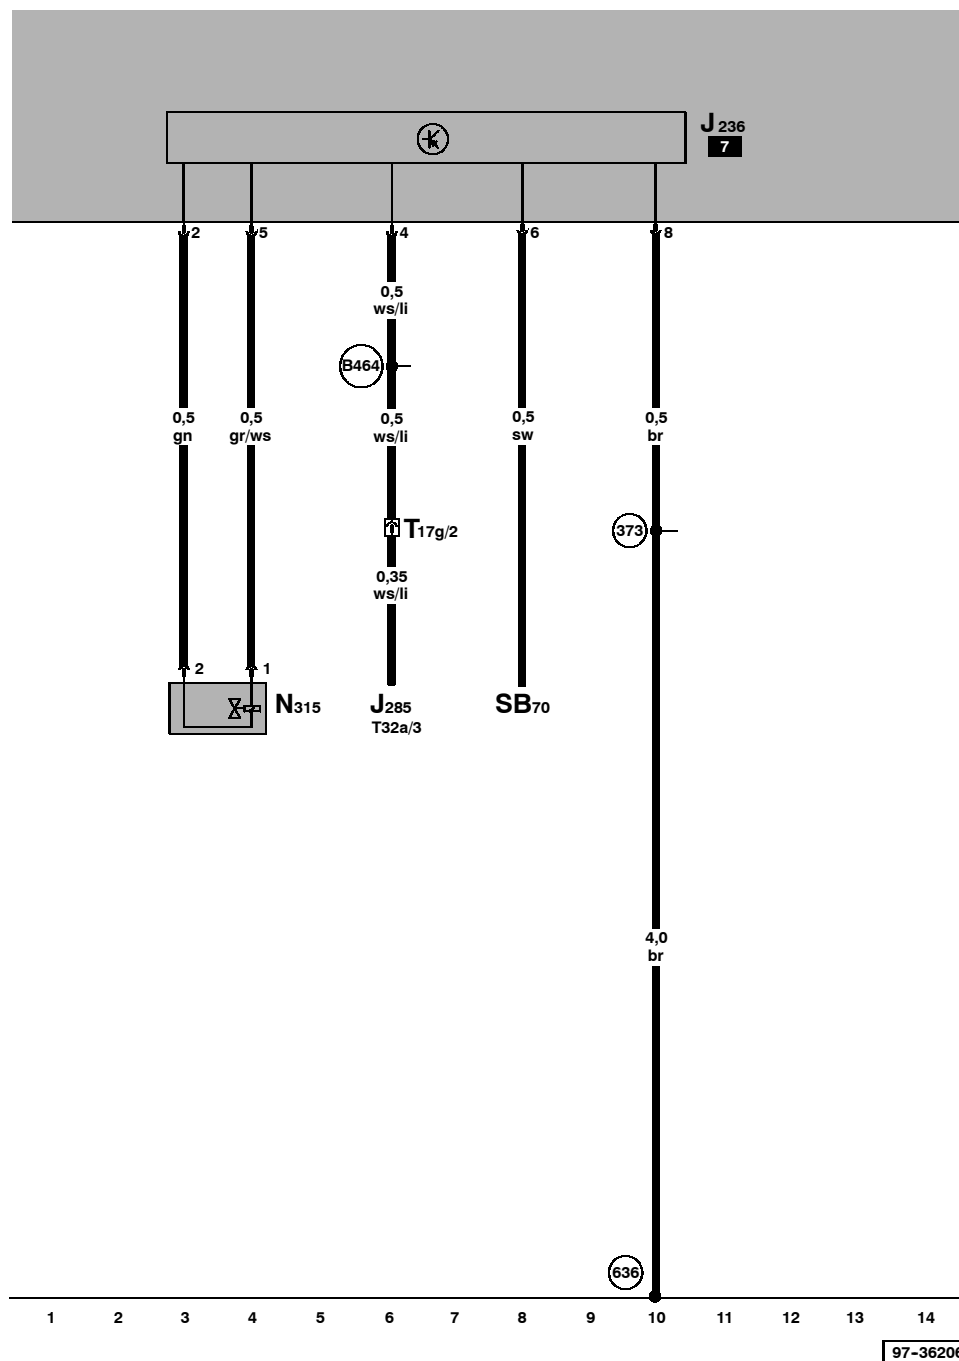

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange