


## Standard Equipment,

from June 2003

### **Note:**

*Information for*

- ◆ *Relay and fuse arrangements*
  - ◆ *Connector arrangements*
  - ◆ *Control Modules and Relays*
  - ◆ *Ground connections*
- ⇒ *Component Locations!*

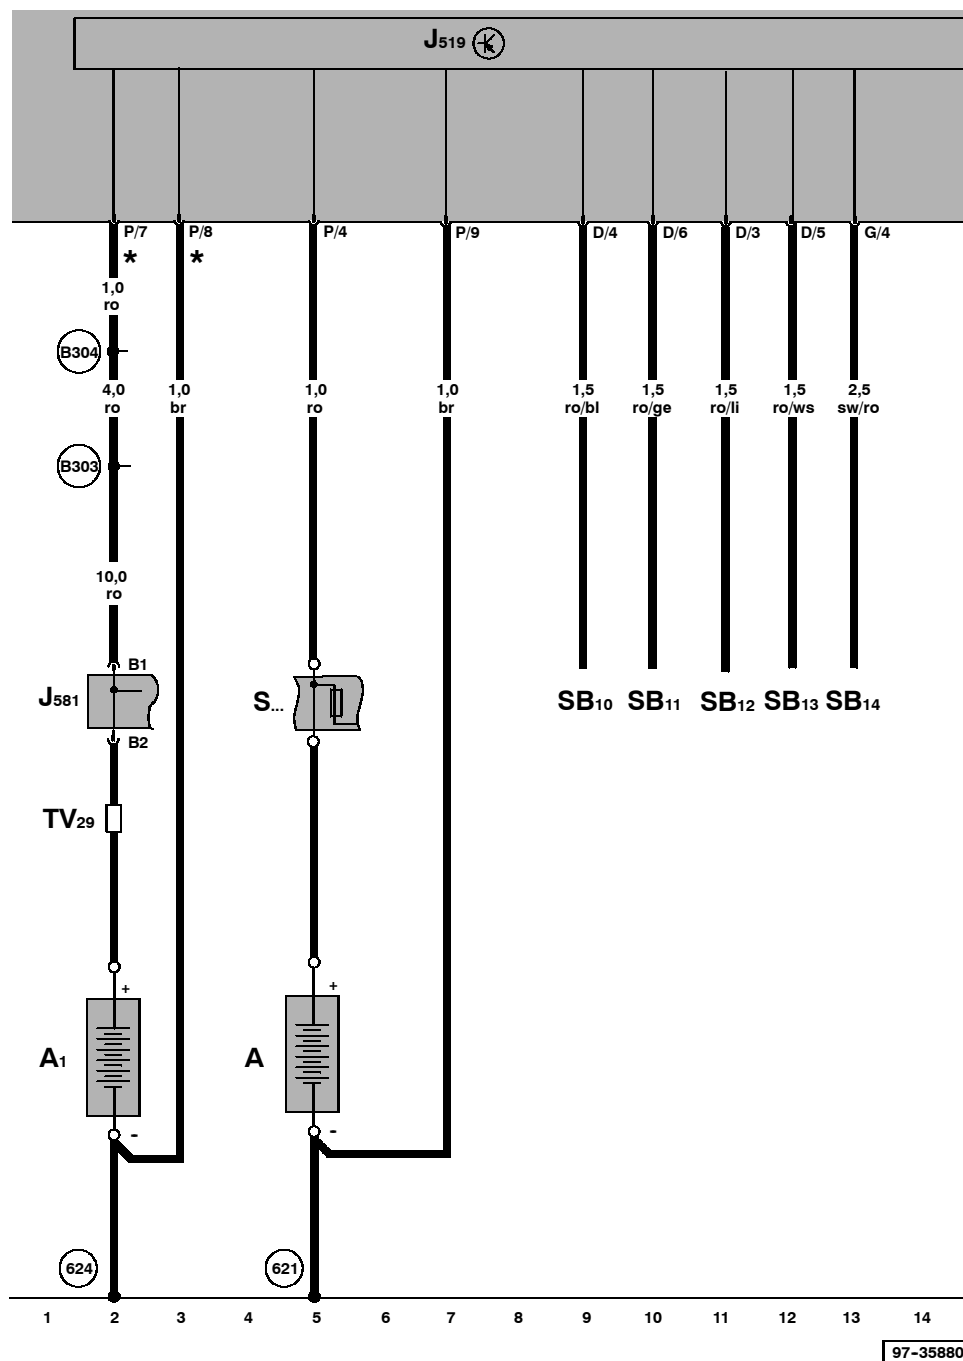


### Vehicle Electrical System Control Module, Battery, Auxiliary Battery, Parallel Battery Connection Relay, Wire junction 4 for terminal 30

- A - Battery
- A1 - Auxiliary Battery
- J519 - Vehicle Electrical System Control Module
- J581 - Parallel Battery Connection Relay
- S... - Fuse - box
- SB10 - Fuse 10 (in fuse holder)
- SB11 - Fuse 11 (in fuse holder)
- SB12 - Fuse 12 (in fuse holder)
- SB13 - Fuse 13 (in fuse holder)
- SB14 - Fuse 14 (in fuse holder)
- TV29 - Wire junction 4 for terminal 30
- 621 - Ground Connection (power circuit battery)
- 624 - Ground Connection (starter battery)
- B303 - Plus Connection 7 (30) (in main wiring harness)
- B304 - Plus Connection 8 (30) (in main wiring harness)
- \* - dual battery-system

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

### Vehicle Electrical System Control Module, High Tone Horn, Low Tone Horn, Left and Right Front Fog Light

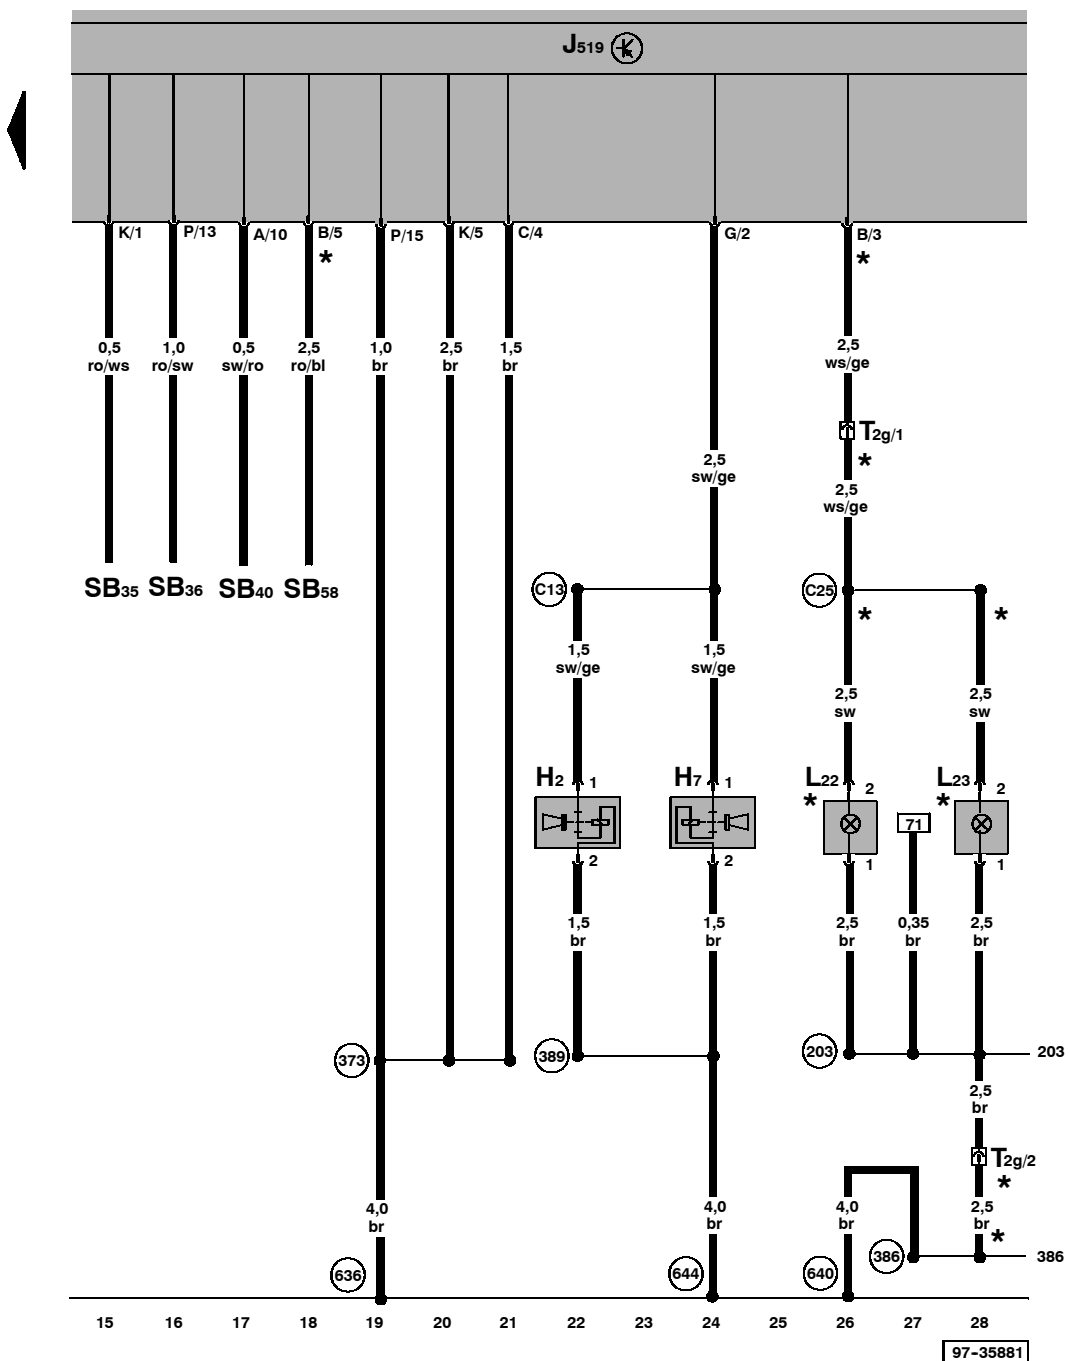



97-35881

# Vehicle Electrical System Control Module, Left HID Lamp High Beam Control Module, Left Parking Light, Left Front Turn Signal Light, Left High Beam Headlight

J519 - Vehicle Electrical System Control Module  
 J683 - Left HID Lamp High Beam Control Module  
 M1 - Left Parking Light  
 M5 - Left Front Turn Signal Light  
 M30 - Left High Beam Headlight  
 M33 - Light for side marker front left  
 T4c - 4-Pin connector  
 T4d - 4-Pin connector  
 T10a - 10-Pin connector, on headlight left  
 T12e - 12-Pin connector  
 T14a - 14-Pin connector

(203) - Ground connection, in foglight wiring harness  
 (386) - Ground Connection 21 (in main wiring harness)  
 (B274) - Plus Connection (58L) (in main wiring harness)  
 (B472) - Connection 8 (in main wiring harness)

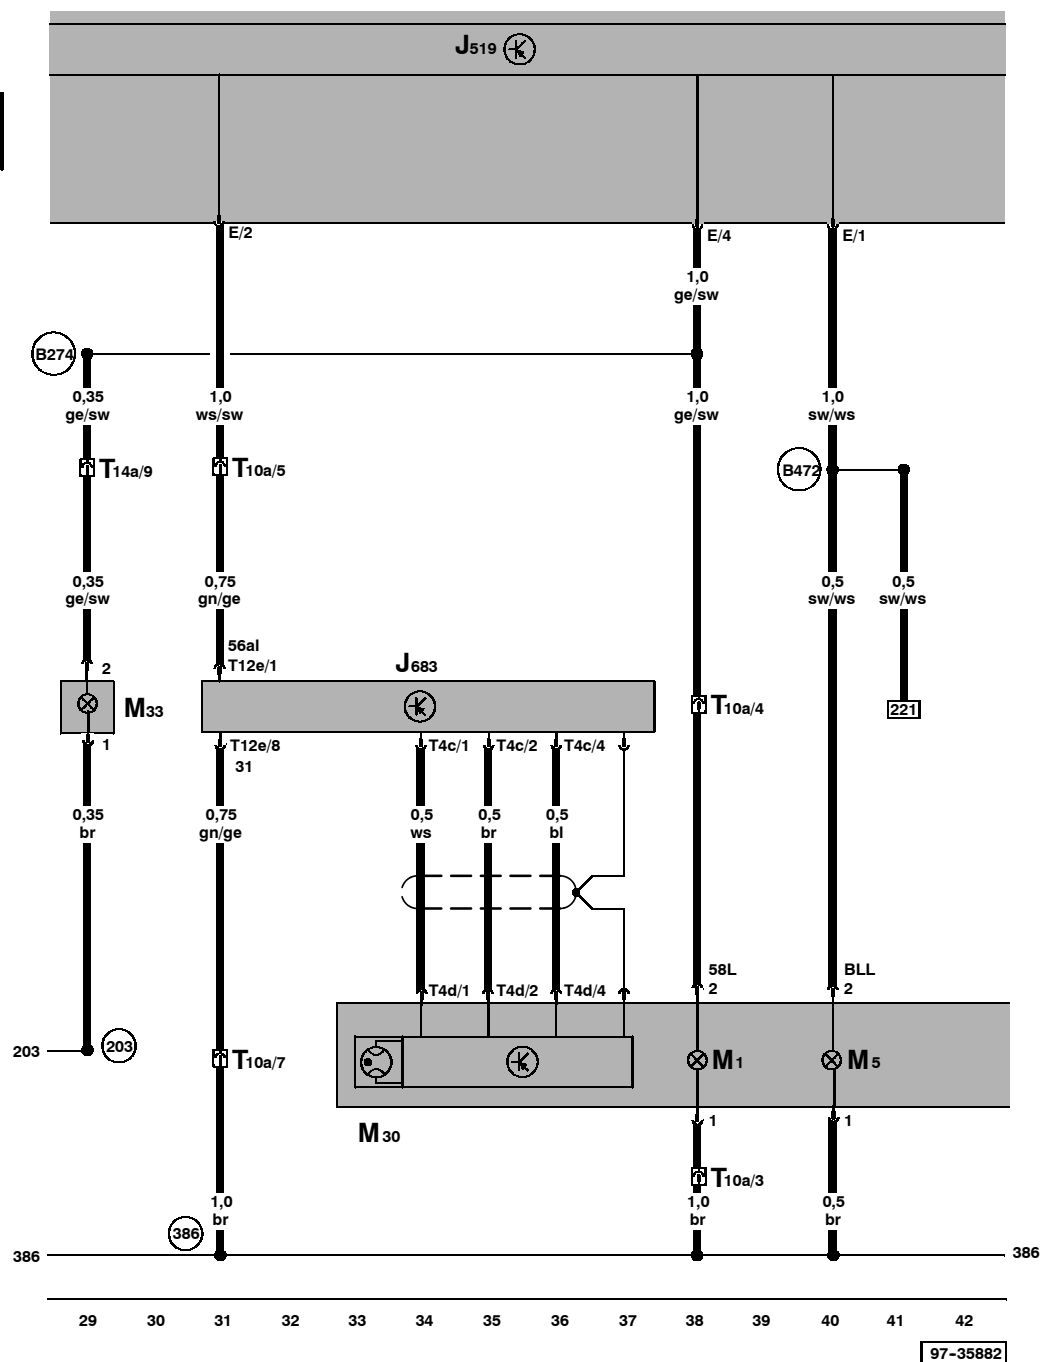


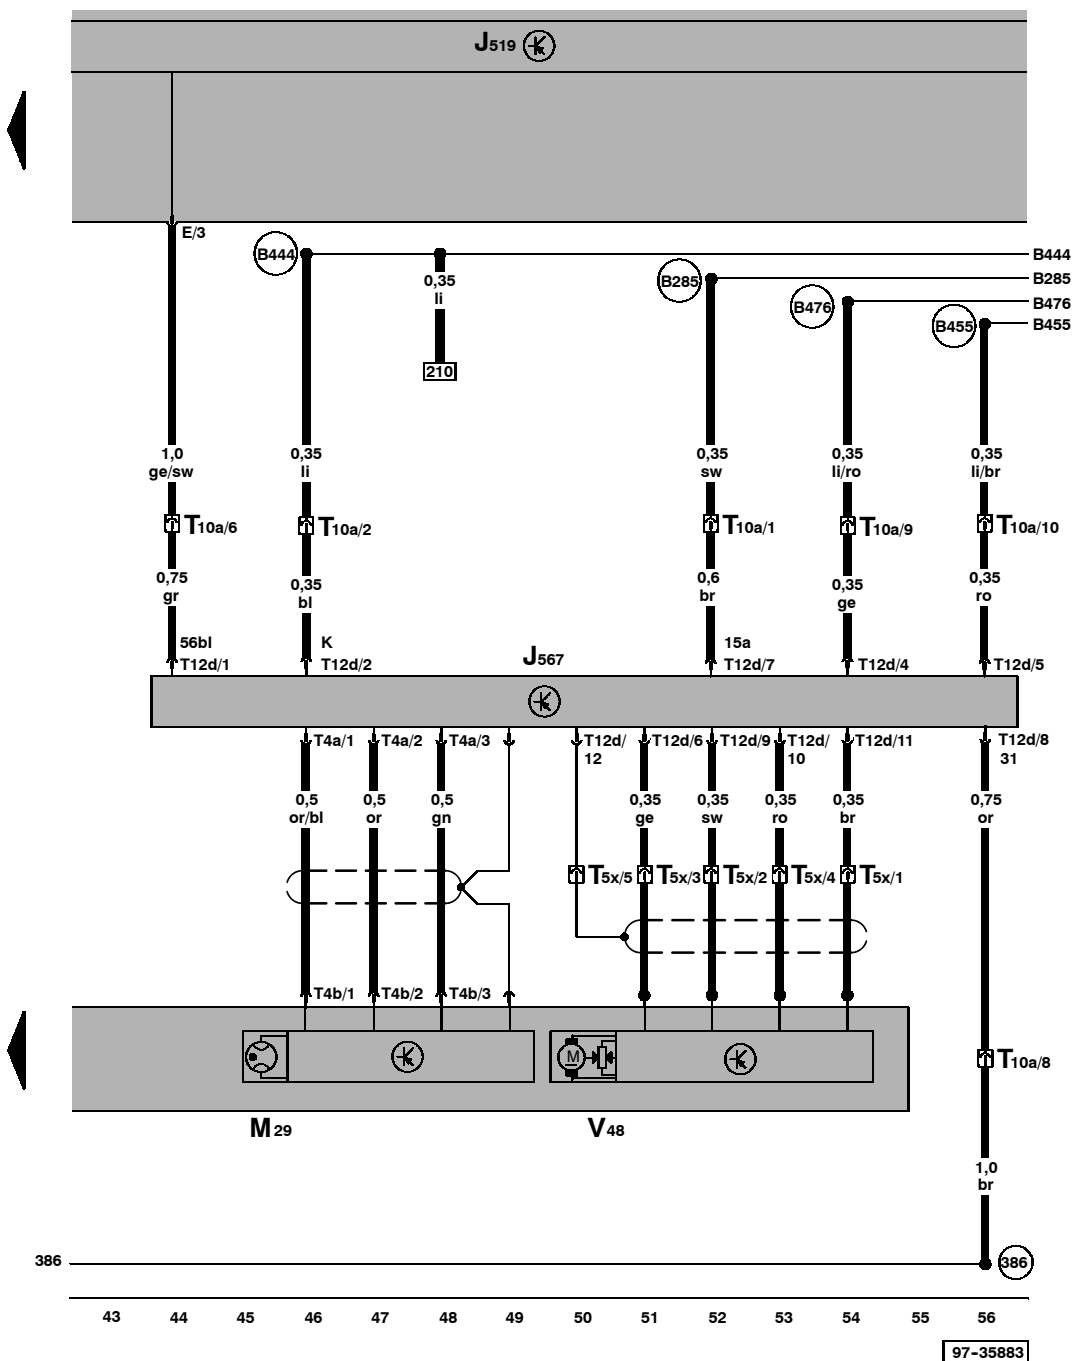**Vehicle Electrical System Control Module, Left Headlight Range Control Module, Left Low Beam Headlight, Left Headlight Beam Adjusting Motor**


- J519 - Vehicle Electrical System Control Module
- J567 - Left Headlight Range Control Module
- M29 - Left Low Beam Headlight
- T4a - 4-Pin connector
- T4b - 4-Pin connector
- T5x - 5-Pin connector
- T10a - 10-Pin connector, on headlight left
- T12d - 12-Pin connector
- V48 - Left Headlight Beam Adjusting Motor

- (386) - Ground Connection 21 (in main wiring harness)
- (B285) - Plus Connection 9 (15a) (in main wiring harness)
- (B444) - OBD Connection 1 (in main wiring harness)
- (B455) - Headlight Range Adjustment Connection (in main wiring harness)
- (B476) - Connection 12 (in main wiring harness)


**Vehicle Electrical System Control Module, Right Headlight Range Control Module, Right Low Beam Headlight, Right Headlight Beam Adjusting Motor**

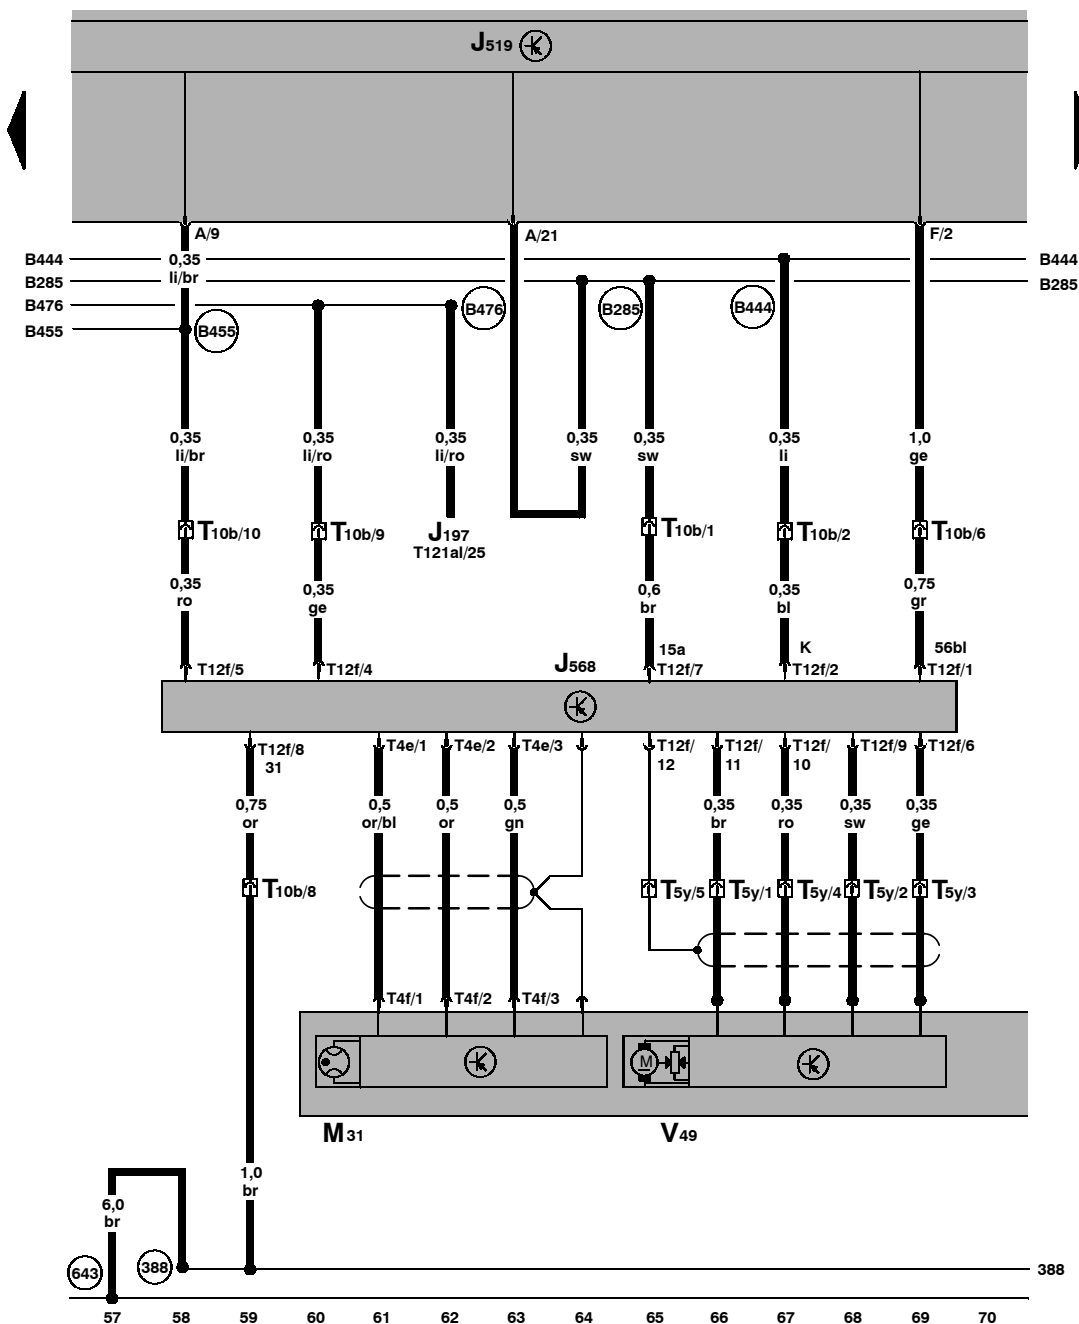

- J197 - Level Control System Control Module
- J519 - Vehicle Electrical System Control Module
- J568 - Right Headlight Range Control Module
- M31 - Right Low Beam Headlight
- T4e - 4-Pin connector
- T4f - 4-Pin connector
- T5y - 5-Pin connector
- T10b - 10-Pin connector, on headlight right
- T12f - 12-Pin connector
- T121al - 121-Pin connector
- V49 - Right Headlight Beam Adjusting Motor

- (388) - Ground Connection 23 (in main wiring harness)
- (643) - Ground Connection 1 (secondary air pump)
- (B285) - Plus Connection 9 (15a) (in main wiring harness)
- (B444) - OBD Connection 1 (in main wiring harness)
- (B455) - Headlight Range Adjustment Connection (in main wiring harness)
- (B476) - Connection 12 (in main wiring harness)

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

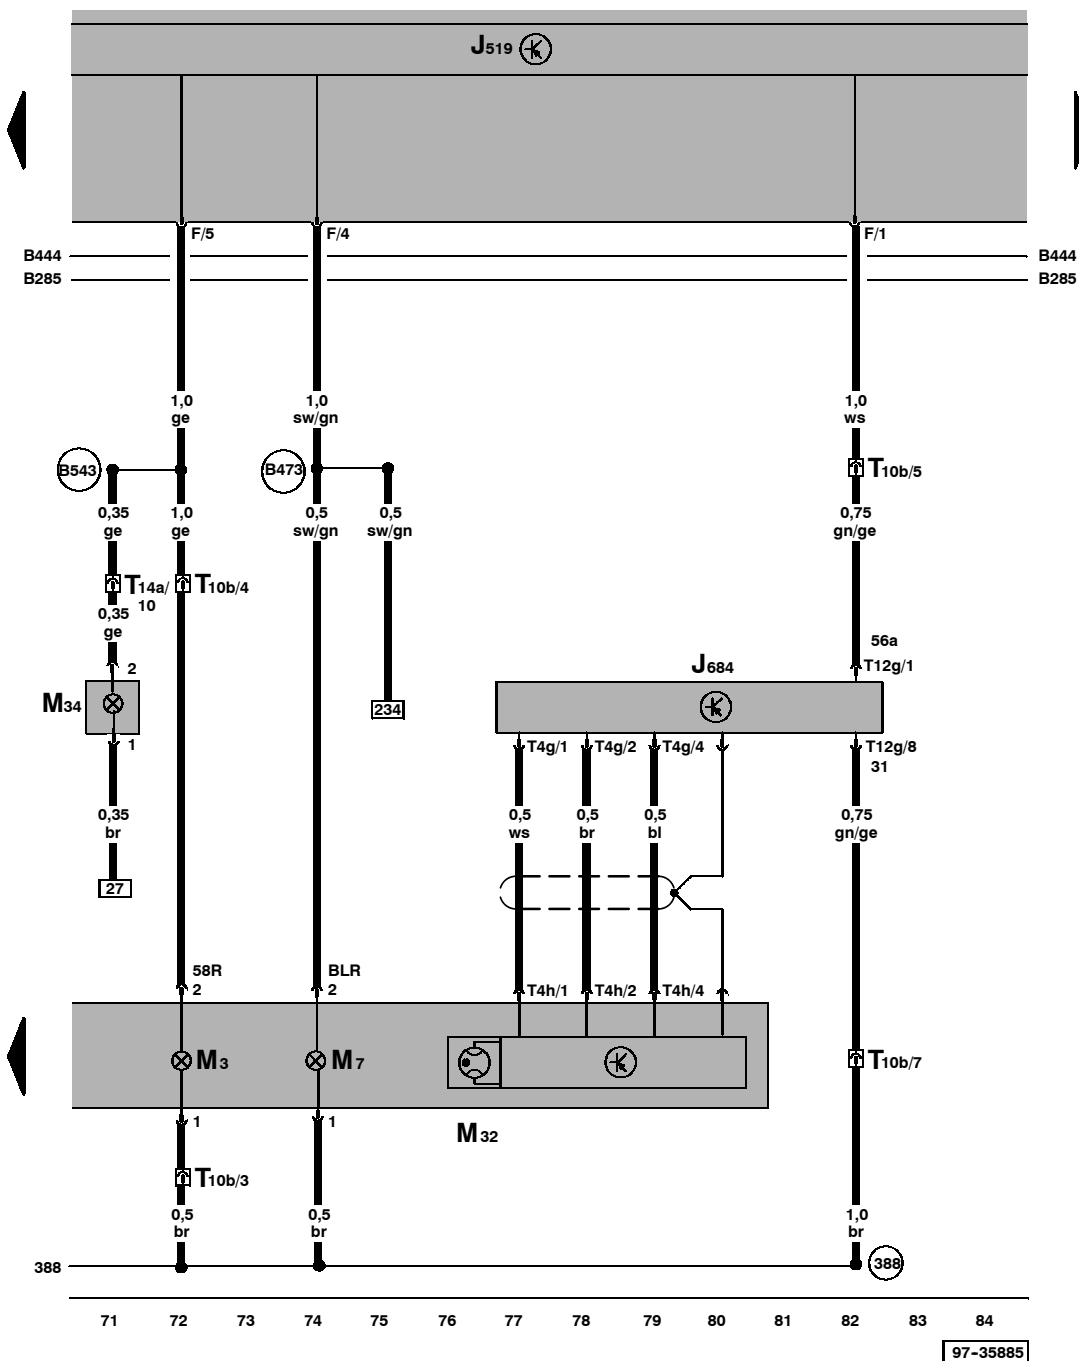
**Vehicle Electrical System Control Module, Right  
HID Lamp High Beam Control Module, Right Par-  
king Light, Right Front Turn Signal Light, Right High  
Beam Headlight**


- J519 - Vehicle Electrical System Control Module
- J684 - Right HID Lamp High Beam Control Module, on headlight right
- M3 - Right Parking Light
- M7 - Right Front Turn Signal Light
- M32 - Right High Beam Headlight
- M34 - Light for side marker front right
- T4g - 4-Pin connector
- T4h - 4-Pin connector
- T10b - 10-Pin connector, on headlight right
- T12g - 12-Pin connector
- T14a - 14-Pin connector

- (388) - Masseverbindung -23-, im Hauptleitungsstrang
- (B473) - Connection 9 (in main wiring harness)
- (B543) - Plus Connection (58R) (in main wiring harness)

ws = white  
sw = black  
ro = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = lilac  
ge = yellow  
or = orange

# Vehicle Electrical System Control Module, Light Switch, Instrument Panel Light Dimmer Switch

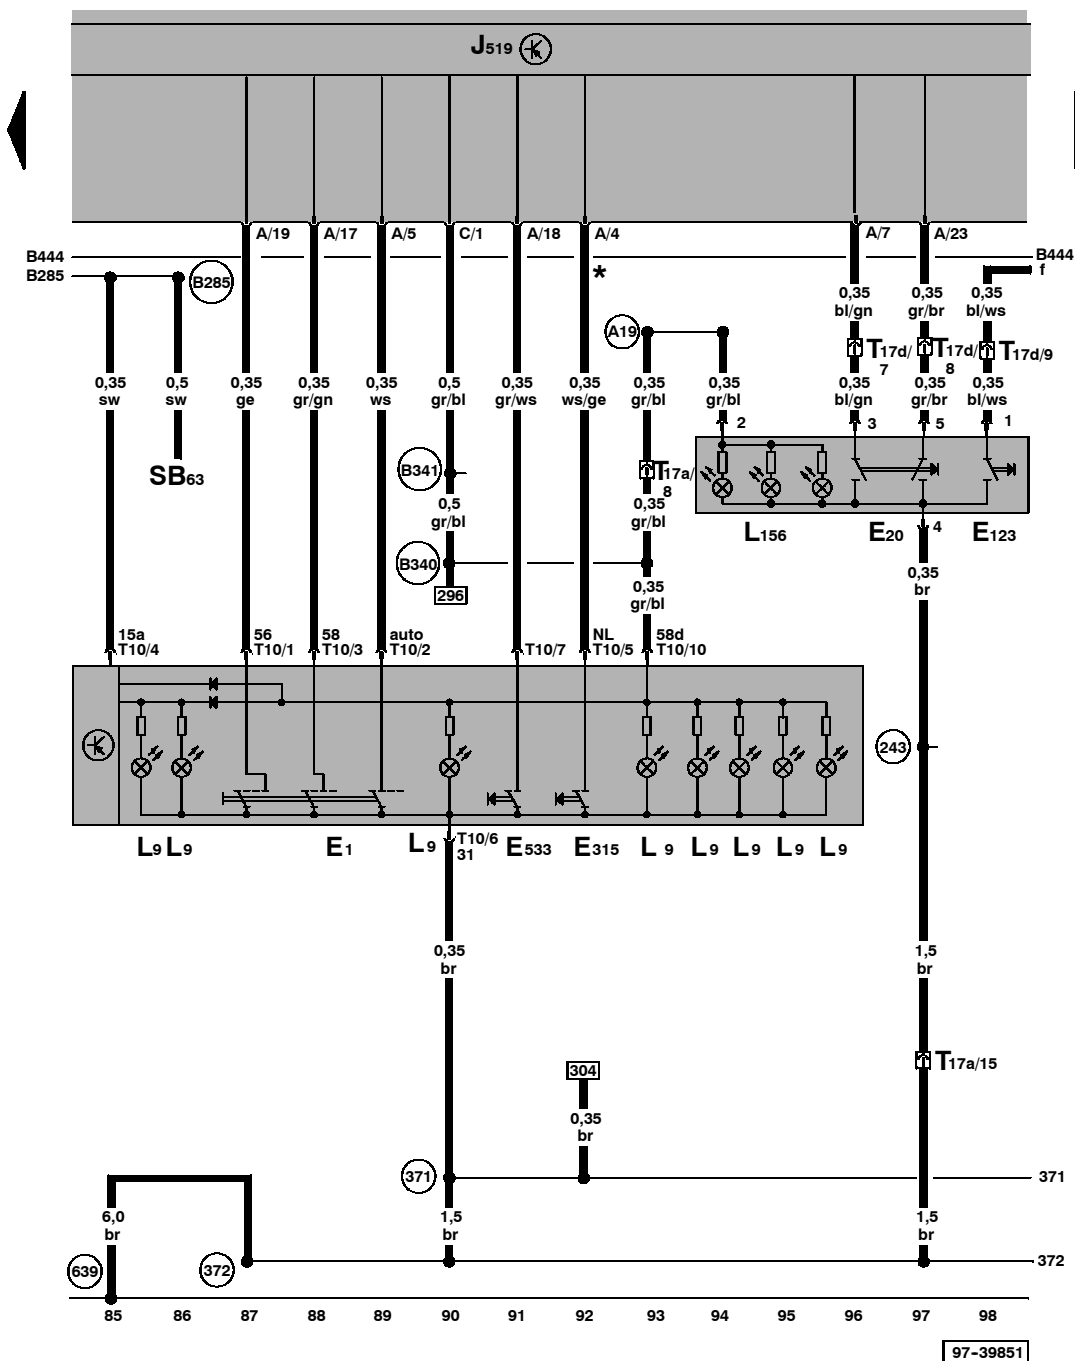


- E1 - Light switch
- E20 - Instrument Panel Light Dimmer Switch
- E123 - Trip Odometer Reset Switch
- E315 - Fog Lamp Button
- E533 - Valet Lock Button
- J519 - Vehicle Electrical System Control Module
- L9 - Headlight Switch Light
- L156 - Switch Illumination Lamp
- SB63 - Fuse 63 (in fuse holder)
- T10 - 10-Pin connector
- T17a - 17-Pin connector, grey, behind instrument panel, left
- T17d - 17-Pin connector, white, behind instrument panel, left

- (243) - Ground connection -1- in wiring harness, Climatronic
- (371) - Ground Connection 6 (in main wiring harness)
- (372) - Ground Connection 7 (in main wiring harness)
- (639) - Ground Connection (on left A-pillar)
- (A19) - wire connection (58d), in instrument panel wiring harness
- (B285) - Plus Connection 9 (15a) (in main wiring harness)
- (B340) - Connection 1 (58d) (in main wiring harness)
- (B341) - Connection 2 (58d) (in main wiring harness)
- \* - vehicles with fog lights

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange



# Vehicle Electrical System Control Module, Control module with indicator unit in instrument panel insert, Brake Fluid Level Warning Switch, Parking Brake Contact Switch

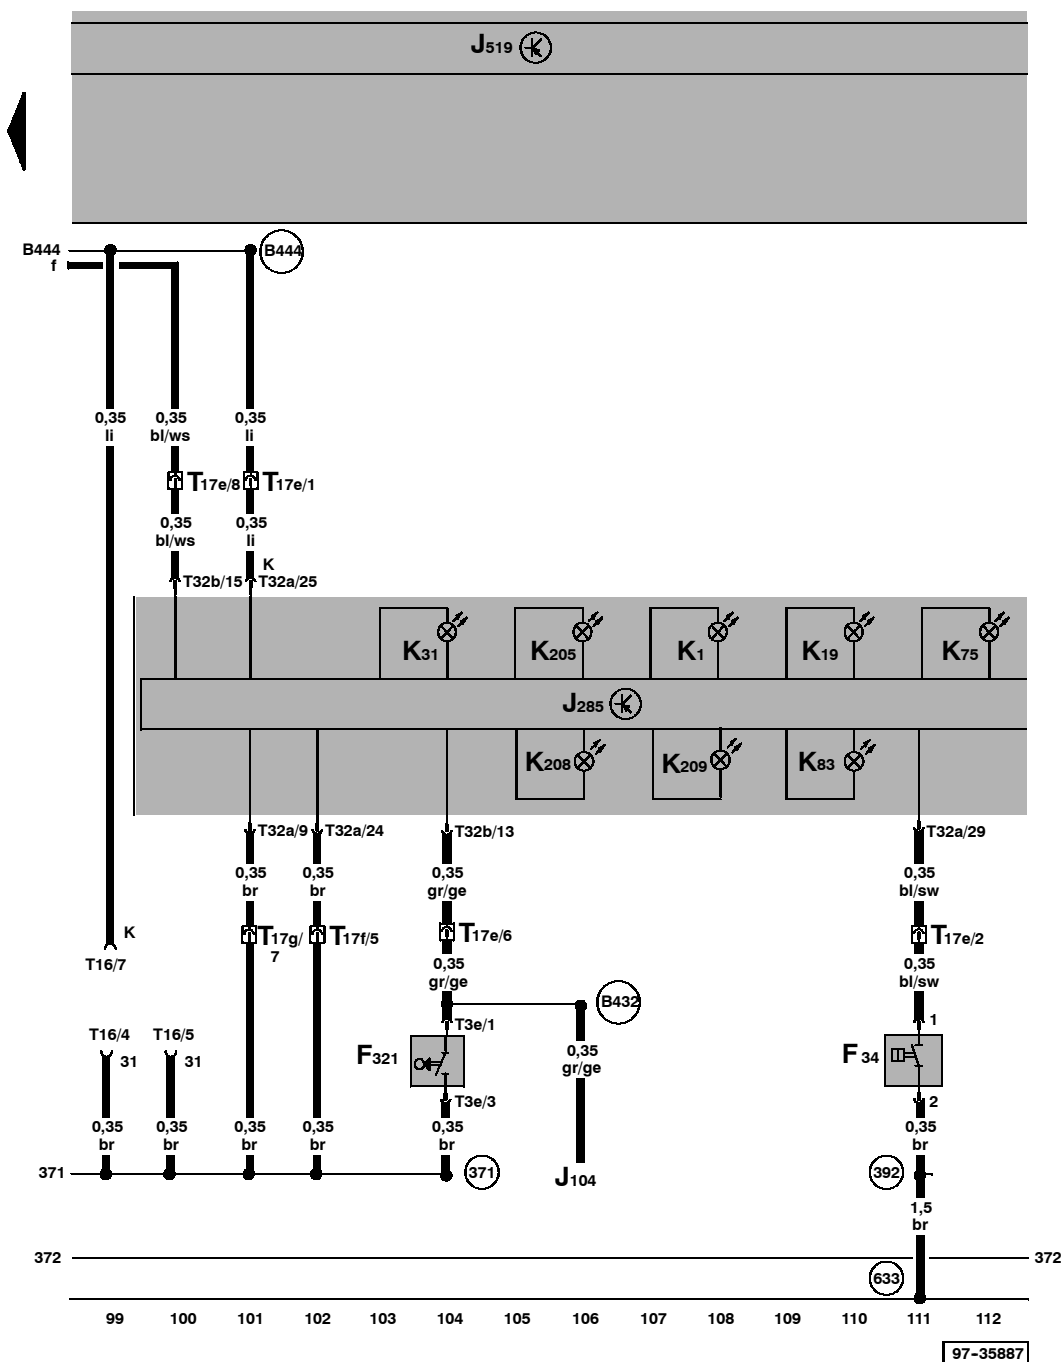

- F34 - Brake Fluid Level Warning Switch
- F321 - Parking Brake Contact Switch
- J104 - ABS Control Module (w/EDL)
- J285 - Control module with indicator unit in instrument panel insert
- J519 - Vehicle Electrical System Control Module
- K1 - Headlight High Beam Indicator Light
- K19 - Seat Belt Warning Light
- K31 - Cruise Control Indicator Light
- K75 - Airbag Malfunction Indicator Lamp (MIL)
- K83 - Malfunction Indicator Lamp (MIL)
- K205 - Daytime Running Lamp (DRL) Indicator Lamp
- K208 - Auxiliary Heater Indicator Lamp\*
- K209 - Automatic Light Control Indicator Lamp
- T3e - 3-Pin Connector
- T16 - 16-Pin Connector, black, Data Link Connector (DLC), under instrument panel, left
- T17e - 17-Pin connector, blue, behind instrument panel, left
- T17f - 17-Pin connector, green, behind instrument panel, left
- T17g - 17-Pin connector, ged, behind instrument panel, left
- T32a - 32-Pin connector, blue, on instrument cluster
- T32b - 32-Pin connector, green, on instrument cluster


- 371 - Ground Connection 6 (in main wiring harness)
- 392 - Ground Connection 27 (in main wiring harness)
- 633 - Access/Start Control Module Ground Connection
- B432 - Emergency (Foot) Brake Connection (in main wiring harness)
- B444 - OBD Connection 1 (in main wiring harness)

\* - Not applicable to USA/CDN

### Vehicle Electrical System Control Module, Control module with indicator unit in instrument panel insert, Engine Coolant Level Sensor, Windshield Washer Fluid Level Sensor

- G3 - Engine Coolant Temperature (ECT) Gauge
  - G5 - Tachometer
  - G21 - Speedometer
  - G32 - Engine Coolant Level (ECL) Sensor
  - G33 - Windshield Washer Fluid Level Sensor
  - J236 - Servotronic Control Module
  - J285 - Control module with indicator unit in instrument panel insert
  - J519 - Vehicle Electrical System Control Module
  - K13 - Rear Fog Light Indicator Light
  - K17 - Fog Light Indicator Light
  - K28 - Engine Coolant Level/Temperature (ECL/ECT) Warning Light
  - L75 - Digital Display Light
  - SB23 - Fuse 23 (in fuse holder)
  - SB54 - Fuse 54 (in fuse holder)
  - T17g - 17-Pin connector, ged, behind instrument panel, left
  - T32a - 32-Pin connector, blue, on instrument cluster
  - Y24 - Display Unit in Instrument Cluster
- (399) - Ground Connection 34 (in main wiring harness)
- (B464) - Vehicle Speed Signal (VSS) Connection (in main wiring harness)

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

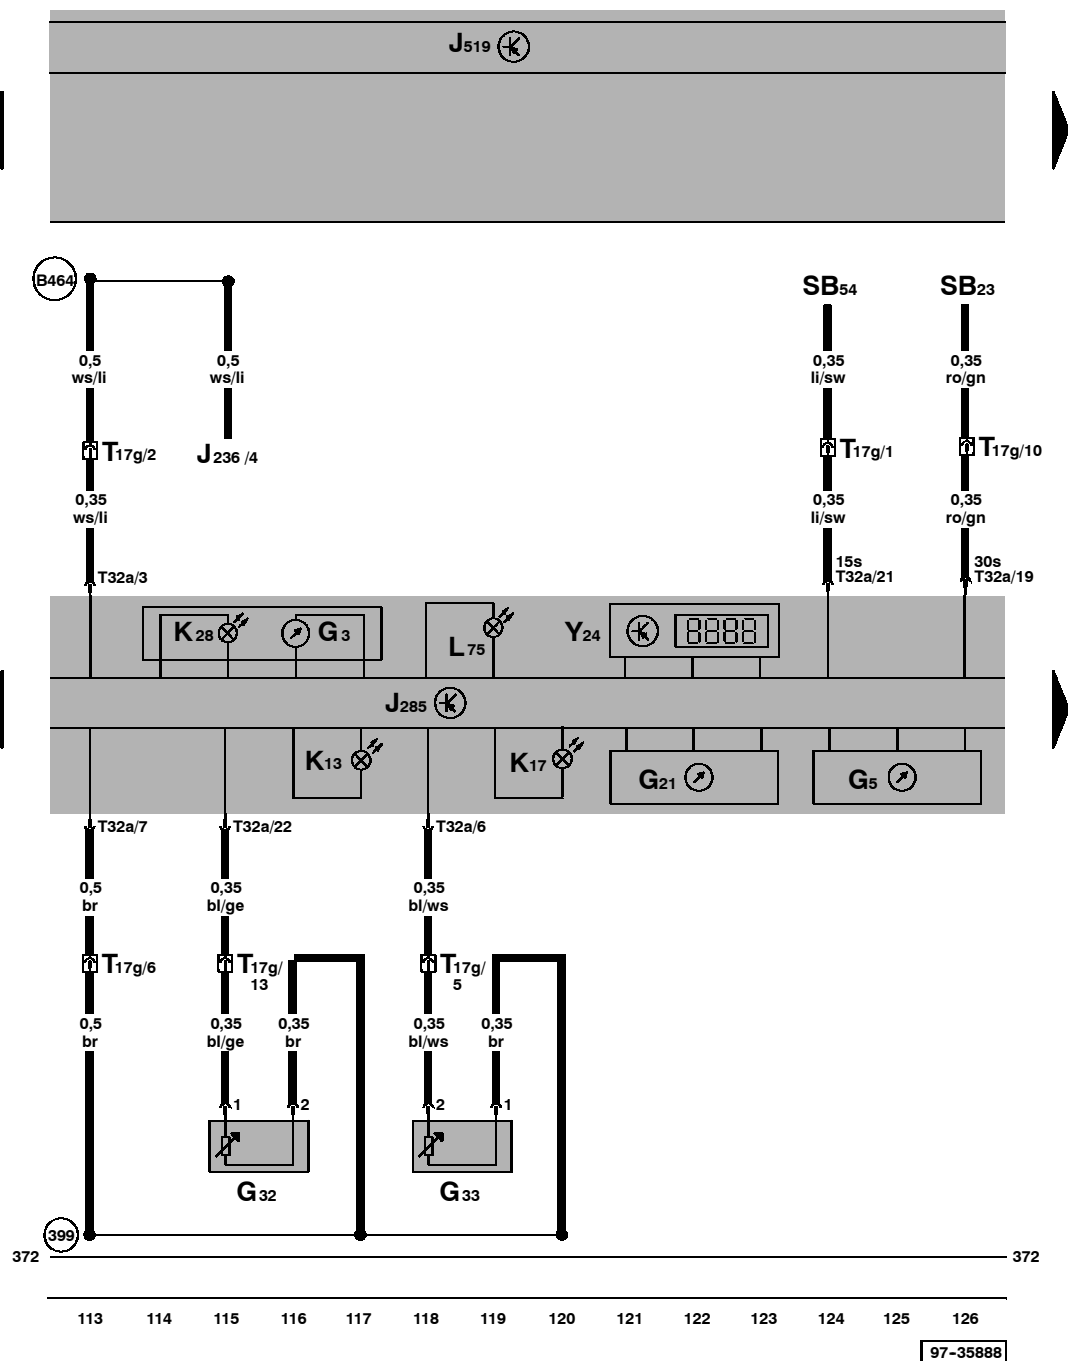


### Vehicle Electrical System Control Module, Control module with indicator unit in instrument panel insert, Left Turn Signal Indicator Light

- J285 - Control module with indicator unit in instrument panel insert  
 J367 - Battery Monitoring Control Module  
 J518 - Access/Start Control Module  
 J519 - Vehicle Electrical System Control Module  
 J533 - Data Bus On Board Diagnostic Interface  
 K65 - Left Turn Signal Indicator Light  
 K94 - Right Turn Signal Indicator Light  
 K206 - Battery Emergency Operation Indicator Lamp  
 SB27 - Fuse 27 (in fuse holder)  
 T16 - 16-Pin Connector, data link connector (DLC)  
 T17e - 17-Pin connector, blue, behind instrument panel, left  
 T17f - 17-Pin connector, green, behind instrument panel, left  
 T32a - 32-Pin connector, blue, on instrument cluster  
 T32b - 32-Pin connector, green, on instrument cluster  
 T121k - 121-Pin connector  
 Y11 - Supply Voltage Display

- (B317) - Plus Connection 3 (30a) (in main wiring harness)  
 (B383) - Powertrain CAN-Bus High Connection 1 (in main wiring harness)  
 (B390) - Powertrain CAN-Bus Low Connection 1 (in main wiring harness)  
 (B398) - Comfort System CAN-Bus High Connection 2 (in main wiring harness)  
 (B406) - Comfort System CAN-Bus Low Connection 1 (in main wiring harness)  
 (B416) - Infotainment CAN-Bus High Connection 2 (in main wiring harness)  
 (B422) - Infotainment CAN-Bus Low Connection 2 (in main wiring harness)  
 (B449) - Emergency Operation Connection (in main wiring harness)

\* - dual battery-system

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

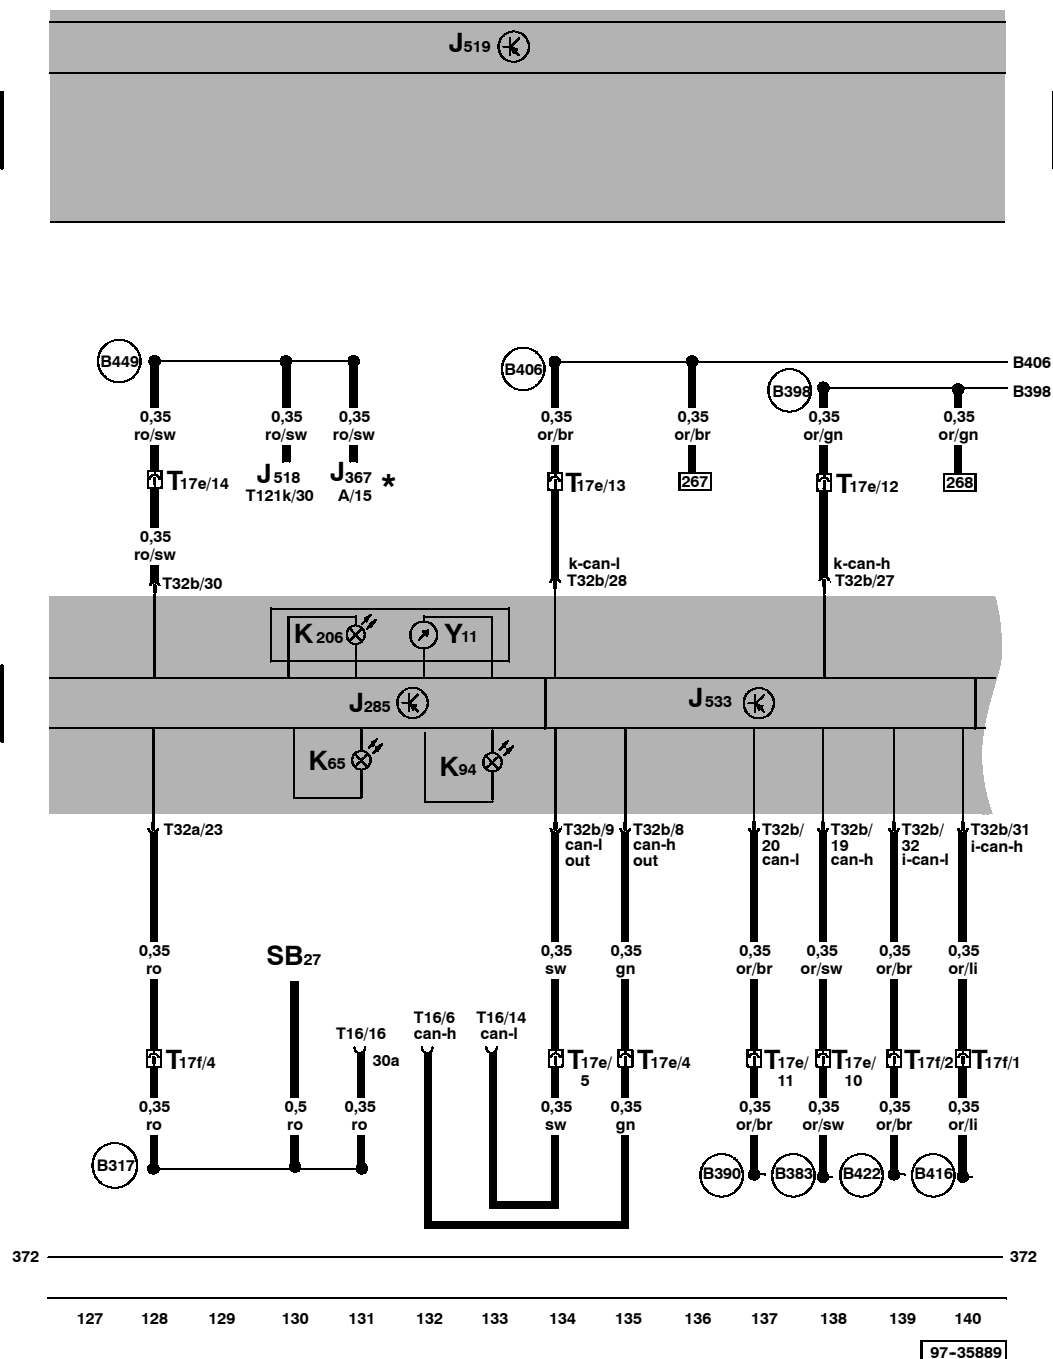




- E2 - Turn signal switch
- E3 - Emergency Flasher Switch
- E4 - Headlight Dimmer/Flasher Switch
- E19 - Park Light Switch
- E440 - Left Multi-function Buttons (on steering wheel)
- E441 - Right Multi-function Buttons (on steering wheel)
- F138 - Airbag Spiral Spring/Return Spring With Slip Ring
- H - Signal horn activation
- J519 - Vehicle Electrical System Control Module
- J523 - Front Information Display Control Head
- J527 - Steering Column Electronic Systems Control Module
- K6 - Indicator light for emergency flasher system
- L45 - Memory Operating Unit Light
- SB18 - Fuse 18 (in fuse holder)
- SB64 - Fuse 64 (in fuse holder)
- T4k - 4-Pin connector
- T12l - 12-Pin connector
- T12m - 12-Pin connector
- T12n - 12-Pin connector
- T16f - 16-Pin connector
- T17c - 17-Pin connector, black, behind instrument panel, left
- T32c - 32-Pin connector

- 367 - Ground Connection 2 (in main wiring harness)
- 372 - Ground Connection 7 (in main wiring harness)
- 629 - Ground Connection (Radio, TV, Central Display Unit)
- B398 - Comfort System CAN-Bus High Connection 2 (in main wiring harness)
- B400 - Comfort System CAN-Bus High Connection 4 (in main wiring harness)
- B406 - Comfort System CAN-Bus Low Connection 1 (in main wiring harness)
- B408 - Comfort System CAN-Bus Low Connection 3 (in main wiring harness)


### Vehicle Electrical System Control Module, Door control module driver side, Left Mirror Turn Signal Lamp, Driver's Entry Lamp

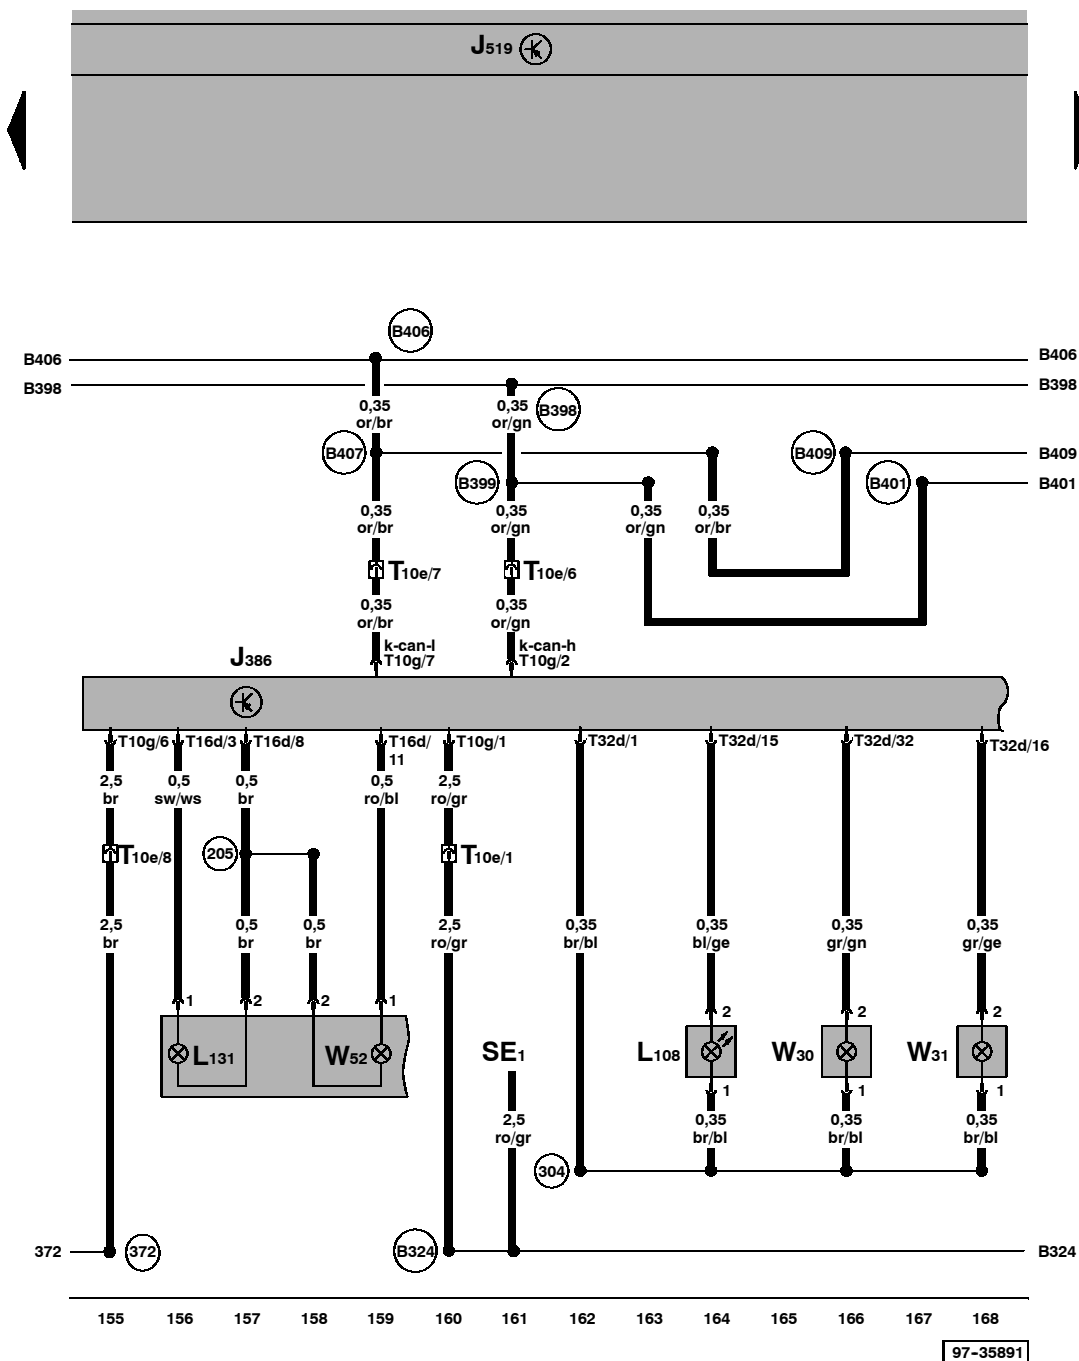

- J386 - Door control module, driver side
- J519 - Vehicle Electrical System Control Module
- L108 - Door opener lighting, driver side
- L131 - Left Mirror Turn Signal Lamp
- SE1 - Thermofuse 1 (on fuse holder)
- T10e - 10-Pin connector, black, connector station A-pillar, left
- T10g - 10-Pin connector
- T16d - 16-Pin connector
- T32d - 32-Pin connector
- W30 - Door warning light, driver side
- W31 - Entry light front, left
- W52 - Driver's Entry Lamp (in outside mirror)

- (205) - Ground connection, in driver's door wiring harness
- (304) - Ground Connection -3- (driver's door wiring harness)
- (372) - Ground Connection 7 (in main wiring harness)
- (B324) - Plus Connection 10 (30a) (in main wiring harness)
- (B398) - Comfort System CAN-Bus High Connection 2 (in main wiring harness)
- (B399) - Comfort System CAN-Bus High Connection 3 (in main wiring harness)
- (B401) - Comfort System CAN-Bus High Connection 5 (in main wiring harness)
- (B406) - Comfort System CAN-Bus Low Connection 1 (in main wiring harness)
- (B407) - Comfort System CAN-Bus Low Connection 2 (in main wiring harness)
- (B409) - Comfort System CAN-Bus Low Connection 4 (in main wiring harness)

### Vehicle Electrical System Control Module, Door control module rear left and rear right, Door Warning light and Entry light rear left and rear right

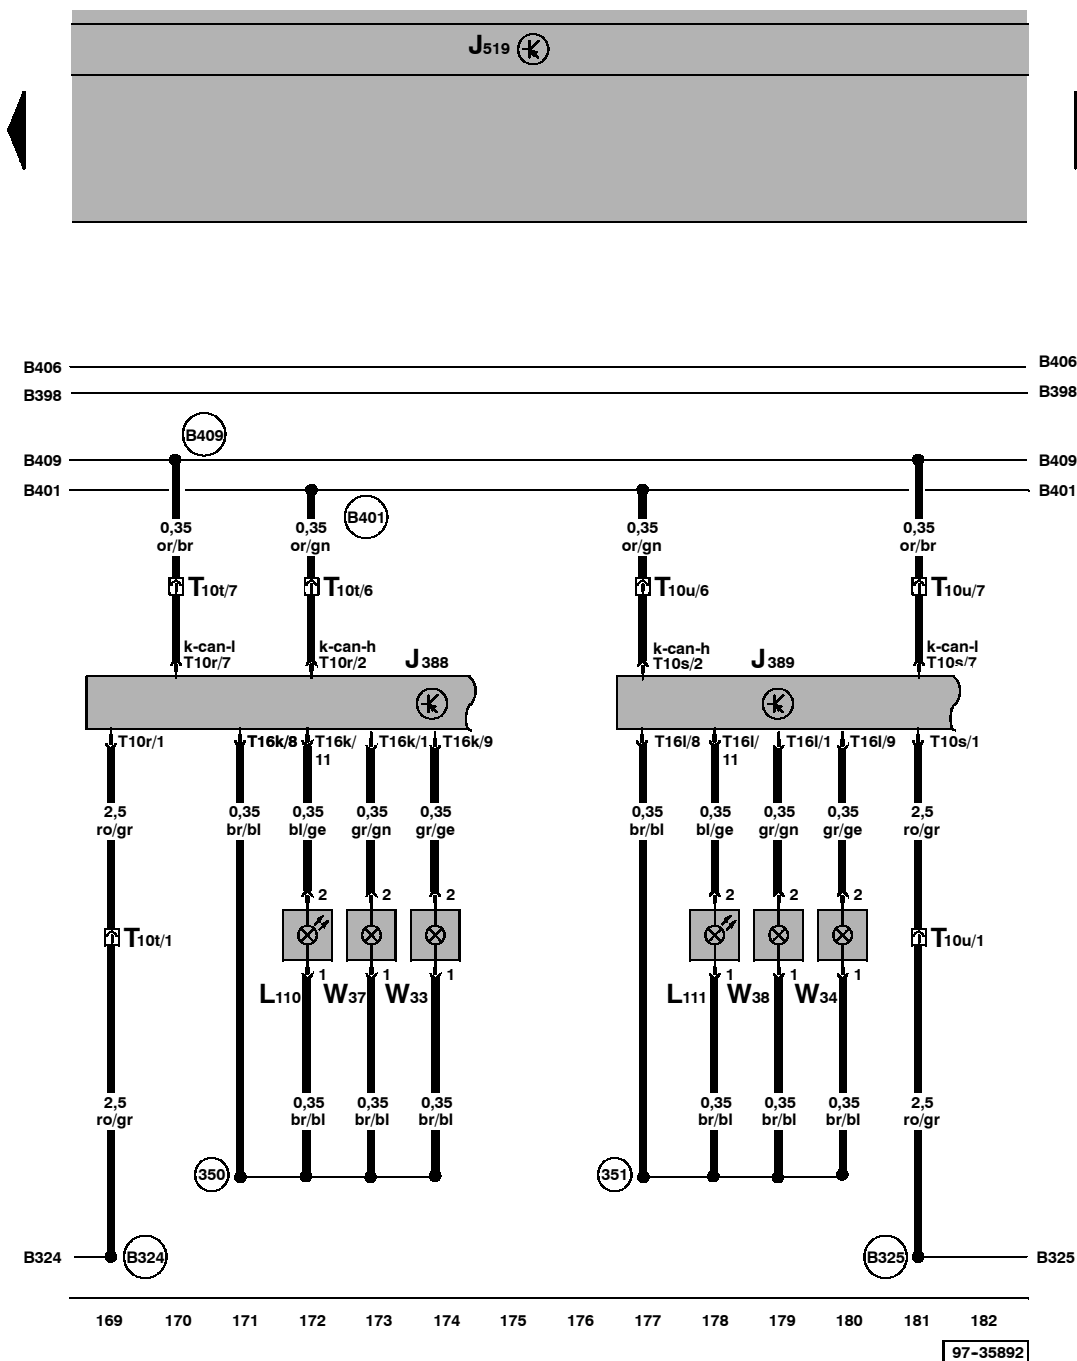


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

- J388 - Door control module, rear, left
- J389 - Door control module, rear, right
- J519 - Vehicle Electrical System Control Module
- L110 - Door opener lighting, left rear
- L111 - Door opener lighting, right rear
- T10r - 10-Pin connector
- T10s - 10-Pin connector
- T10t - 10-Pin connector, connector station B-pillar, left
- T10u - 10-Pin connector, connector station B-pillar, right
- T16k - 16-Pin connector
- T16l - 16-Pin connector
- W33 - Entry light rear, left
- W34 - Entry light rear, right
- W37 - Door warning light rear, left
- W38 - Door warning light rear, right

- (350) - Ground Connection 2 (in left rear door wiring harness)
- (351) - Ground Connection 2 (in right rear door wiring harness)
- (B324) - Plus Connection 10 (30a) (in main wiring harness)
- (B325) - Plus Connection 11 (30a) (in main wiring harness)
- (B401) - Comfort System CAN-Bus High Connection 5 (in main wiring harness)
- (B409) - Comfort System CAN-Bus Low Connection 4 (in main wiring harness)


### Vehicle Electrical System Control Module, Door control module passenger side, Front passenger's Entry Lamp, Door warning light

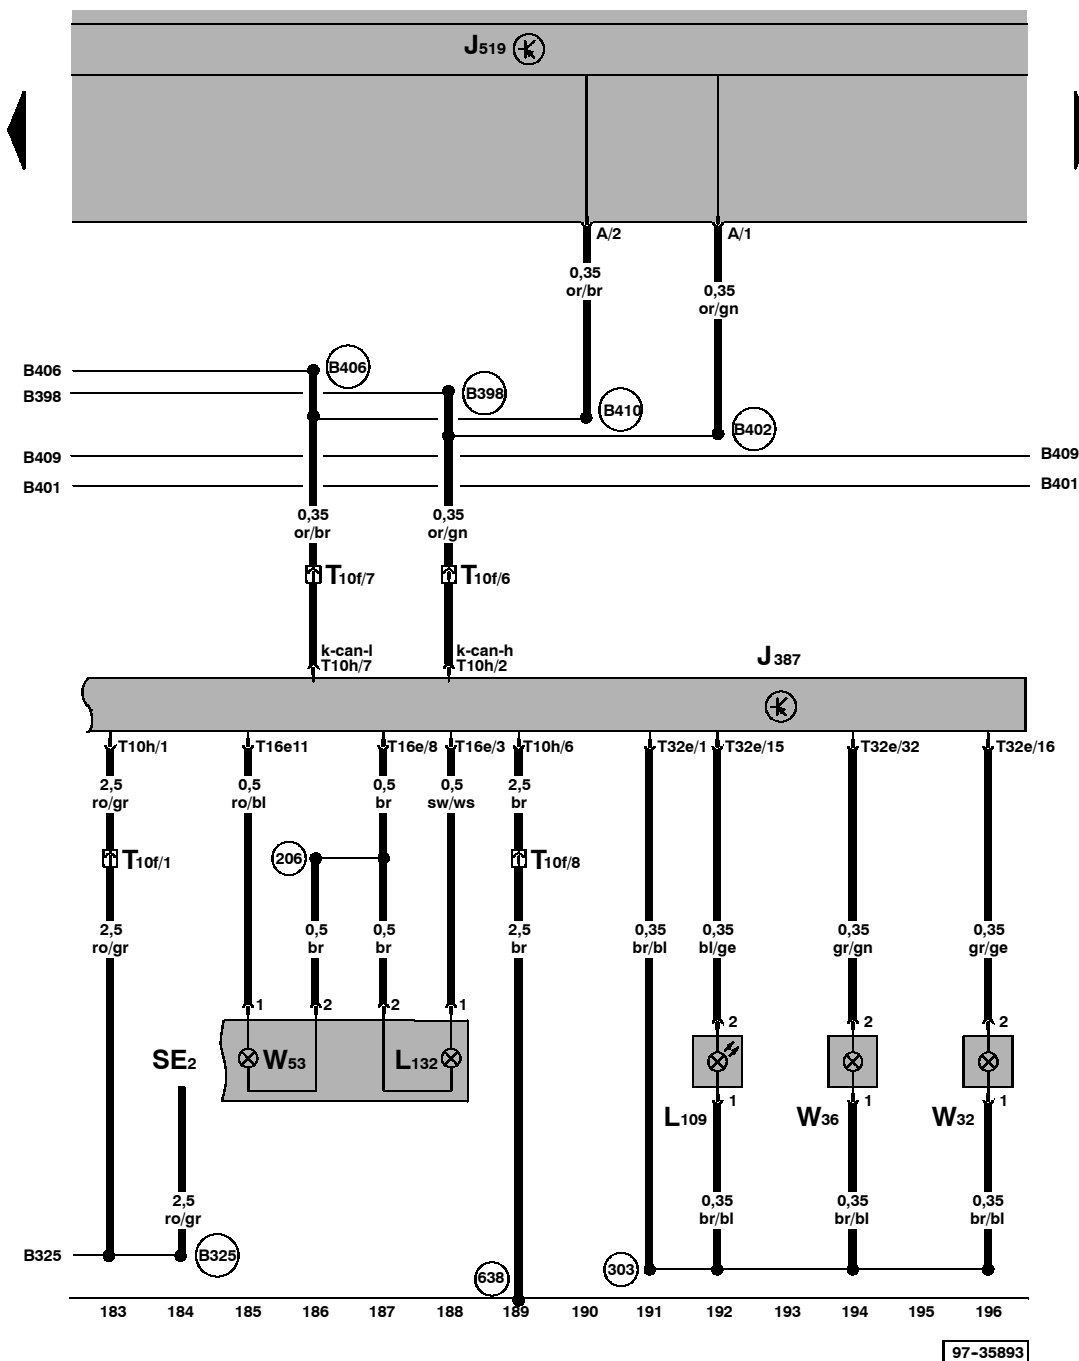

- J387 - Door control module, passenger side
  - J519 - Vehicle Electrical System Control Module
  - L109 - Door opener lighting, passenger side
  - L132 - Right Mirror Turn Signal Lamp
  - SE2 - Thermofuse 2 (on fuse holder)
  - T10f - 10-Pin connector, black, connector station
  - A-pillar, right
  - T10h - 10-Pin connector
  - T16e - 16-Pin connector
  - T32e - 32-Pin connector
  - W32 - Entry light front, right
  - W36 - Door warning light, passenger side
  - W53 - Front Passenger's Entry Lamp (in outside mirror)
- (206) - Ground connection, in passenger's door wiring harness
  - (303) - Ground Connection -3- (passenger's door wiring harness)
  - (638) - Ground Connection (on right A-pillar)
  - (B325) - Plus Connection 11 (30a) (in main wiring harness)
  - (B398) - Comfort System CAN-Bus High Connection 2 (in main wiring harness)
  - (B402) - Comfort System CAN-Bus High Connection 6 (in main wiring harness)
  - (B406) - Comfort System CAN-Bus Low Connection 1 (in main wiring harness)
  - (B410) - Comfort System CAN-Bus Low Connection 5 (in main wiring harness)

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

### Vehicle Electrical System Control Module, Central Control Module for comfort system, License Plate Light Control Module

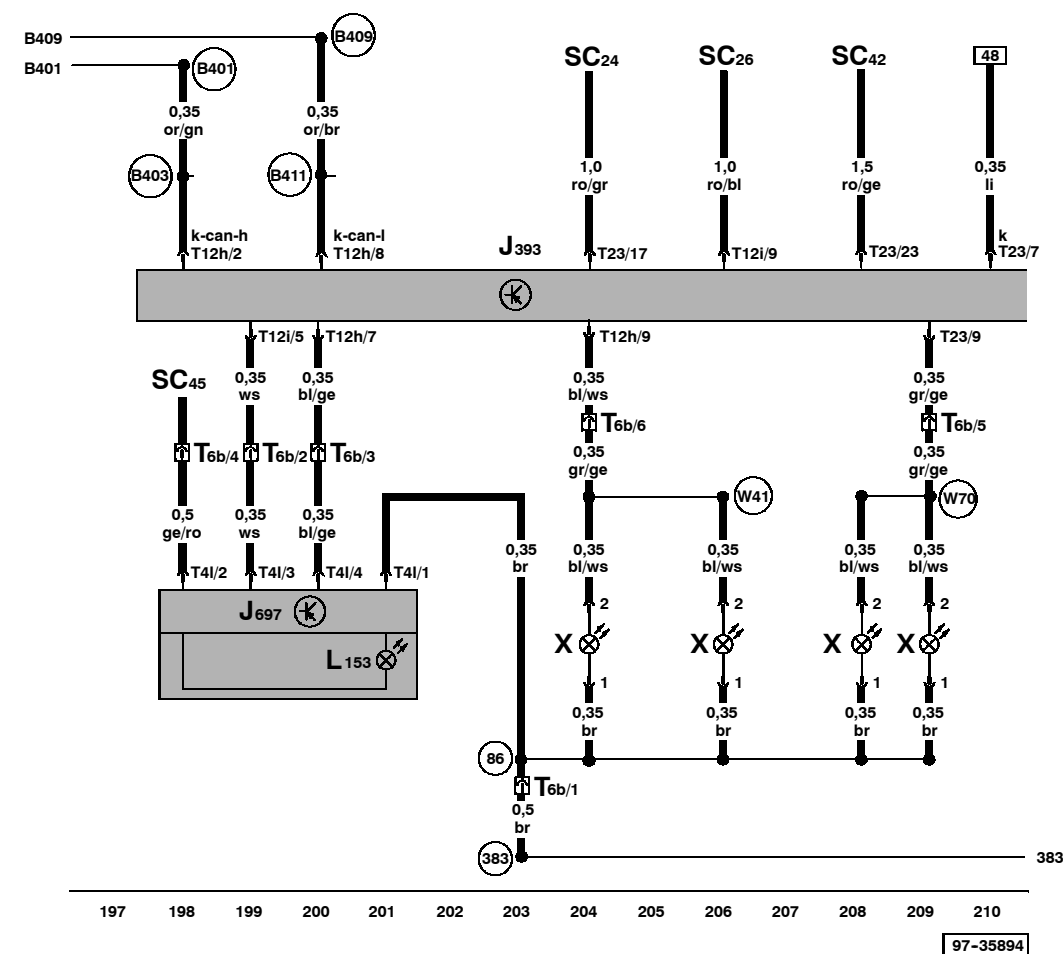

- J393 - Central control module for comfort system
- J519 - Vehicle Electrical System Control Module
- J697 - License Plate Light Control Module
- L153 - Rear Illumination Lamp
- SC24- Fuse 24 (in fuse holder)
- SC26- Fuse 26 (in fuse holder)
- SC42- Fuse 42 (in fuse holder)
- SC45- Fuse 45 (in fuse holder)
- T4l - 4-Pin connector
- T6b - 6-Pin connector, black
- T12h - 12-Pin connector
- T12i - 12-Pin connector
- T23 - 23-Pin connector
- X - License Plate Light


- (86) - Ground connection -1-, in rear wiring harness
- (383) - Ground Connection 18 (in main wiring harness)
- (B401) - Comfort System CAN-Bus High Connection 5 (in main wiring harness)
- (B403) - Comfort System CAN-Bus High Connection 7 (in main wiring harness)
- (B409) - Comfort System CAN-Bus Low Connection 4 (in main wiring harness)
- (B411) - Comfort System CAN-Bus Low Connection 6 (in main wiring harness)
- (W41) - Plus Connection (58) (license plate light wiring harness)
- (W70) - Plus Connection 2 (58) (in license plate light wiring harness)






- F - Brake Light Switch
- J... - Engine Control Module (ECM)
- J104 - ABS Control Module (w/EDL)
- J345 - Control Module for towing sensor
- J393 - Central control module for comfort system
- J519 - Vehicle Electrical System Control Module
- J690 - Left Rear Tail Light Control Module
- J693 - Right Rear Lid Tail Light Control Module
- M2 - Right Tail Light
- M4 - Left Tail Light
- M6 - Left Rear Turn Signal Light
- M9 - Left Brake Light
- M17 - Right Back-Up Light
- SB15 - Fuse 15 (in fuse holder)
- SC18 - Fuse 18 (in fuse holder)
- T12h - 12-Pin connector
- T12i - 12-Pin connector
- T14c - 14-Pin connector
- T23 - 23-Pin connector
- T42 - 42-Pin connector

- 382 - Ground Connection 17 (in main wiring harness)
- 383 - Ground Connection 18 (in main wiring harness)
- 625 - Ground Connection (left rear lights)
- B280 - Plus Connection 4 (15a) (in main wiring harness)
- B335 - Connection 1 (54) (in main wiring harness)
- B448 - Rear Fog Light Connection (in main wiring harness)
- B469 - Connection 5 (in main wiring harness)
- B470 - Connection 6 (in main wiring harness)
- B471 - Connection 7 (in main wiring harness)
- - Not applicable to USA/CDN

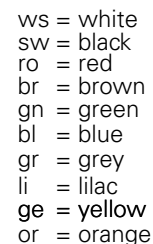

- 382 - Ground Connection 17 (in main wiring harness)
- 384 - Ground Connection 19 (in main wiring harness)
- 622 - Ground Connection 1 (ground plate)
- 626 - Ground Connection (right rear lights)
- B280 - Plus Connection 4 (15a) (in main wiring harness)
- B328 - Plus Connection 14 (30a) (in main wiring harness)
- B447 - Luggage Compartment Light Connection (in main wiring harness)
- B448 - Rear Fog Light Connection (in main wiring harness)
- B469 - Connection 5 (in main wiring harness)
- B470 - Connection 6 (in main wiring harness)
- B471 - Connection 7 (in main wiring harness)

### Vehicle Electrical System Control Module, Central Control Module for comfort system, Back-Up Light Switch, Heated rear window

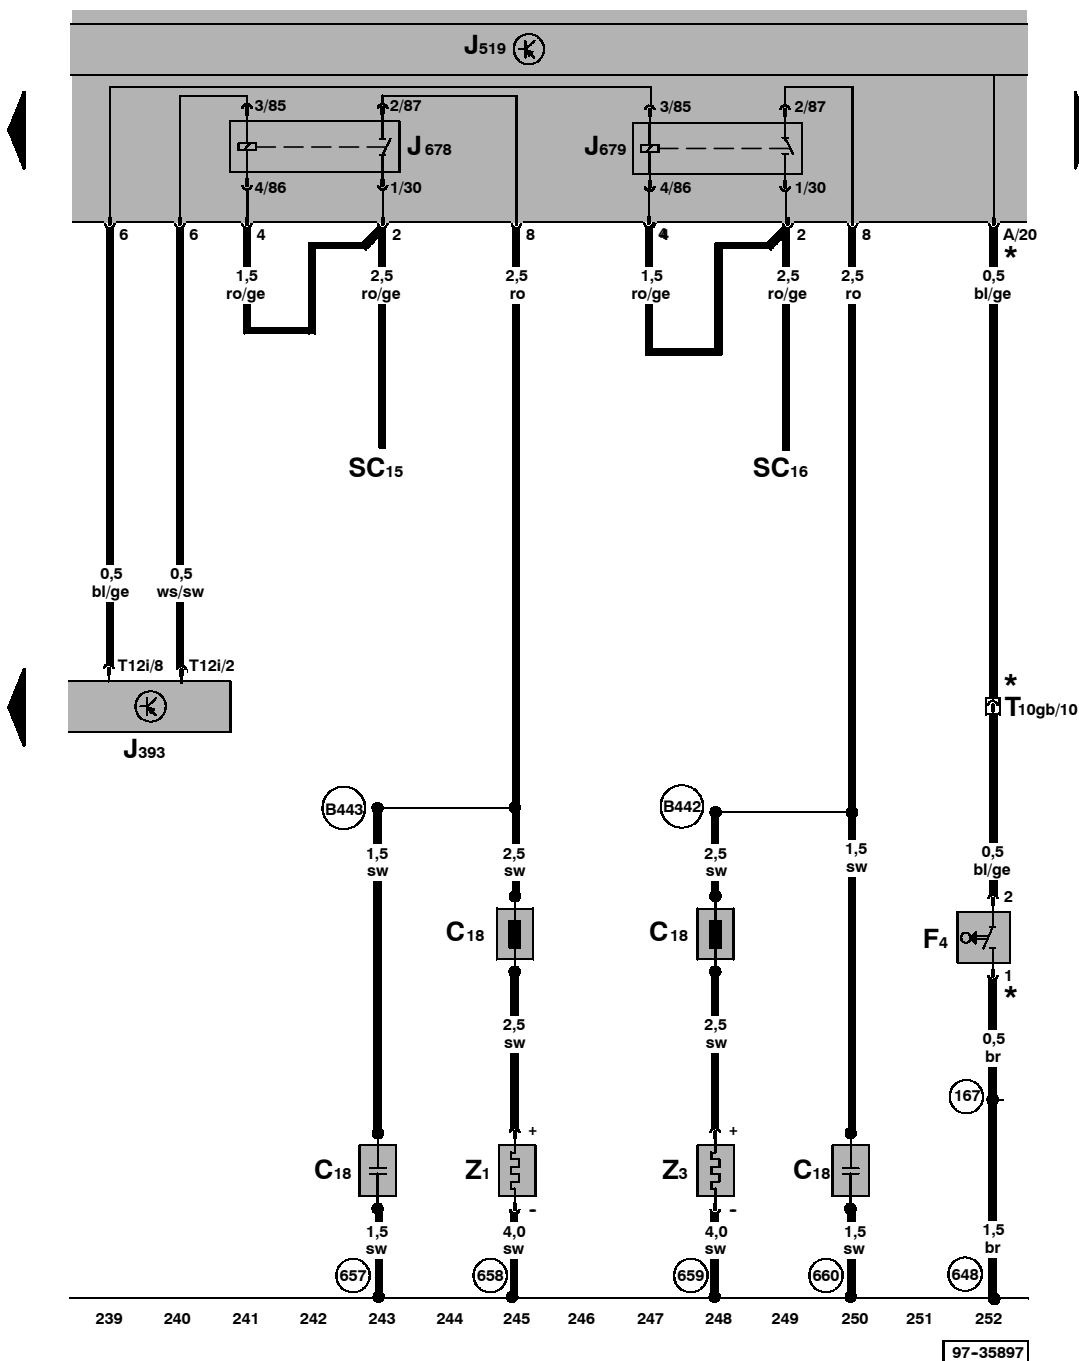

- C18 - Windshield Antenna Suppression Filter
- F4 - Back-Up Light Switch
- J393 - Central control module for comfort system
- J519 - Vehicle Electrical System Control Module
- J678 - Heated Rear Window Circuit 1 Relay
- J679 - Heated Rear Window Circuit 2 Relay
- SC15 - Fuse 15 (in fuse holder)
- SC16 - Fuse 16 (in fuse holder)
- T10gb- 10-Pin connector, black, two transmission
- T12i - 12-Pin connector
- Z1 - Heated rear window
- Z3 - 2nd Stage Rear Window Heater Element

- (167) - Ground connection -4-, in engine compartment wiring harness
- (648) - Ground Connection 4 (on firewall)
- (657) - Ground Connection 1 (left, near rear window)
- (658) - Ground Connection 2 (left, near rear window)
- (659) - Ground Connection 1 (right, near rear window)
- (660) - Ground Connection 2 (right, near rear window)
- (B442) - Rear Window Connection 1 (in main wiring harness)
- (B443) - Rear Window Connection 2 (in main wiring harness)

\* - manual transmission only


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange


**Vehicle Electrical System Control Module, Roof  
Electronics Control Module, Automatic Day/Night  
Interior Mirror Switch**

- E386 - Automatic Day/Night Interior Mirror Switch  
 G353 - Inside Mirror Horizontal Position Sensor  
 G354 - Inside Mirror Vertical Position Sensor  
 J519 - Vehicle Electrical System Control Module  
 J528 - Roof Electronics Control Module  
 K207 - Automatic Day/Night Outside Mirror Indicator Lamp  
 L76 - Push Button Light  
 T2l - 2-Pin connector, in driver's door  
 T2n - 2-Pin connector, in passenger's door  
 T6c - 6-Pin connector  
 T8c - 8-Pin connector  
 T10e - 10-Pin connector, black, connector station A-pillar, left  
 T10f - 10-Pin connector, black, connector station A-pillar, right  
 T12n - 12-Pin connector  
 T26 - 26-Pin connector  
 V297 - Interior Mirror Motor (horizontal)  
 V298 - Interior Mirror Motor (vertical)  
 Y7 - Automatic Day/Night Interior Mirror  
 Y20 - Driver's Automatic Day/Night Outside Mirror  
 Y21 - Front Passenger's Automatic Day/Night Outside Mirror

- 128 - Ground connection -1-, in interior light wiring harness  
 B427 - Mirror Auto-dimming Signal Connection 1 (in main wiring harness)  
 B428 - Mirror Auto-dimming Signal Connection 2 (in main wiring harness)  
 R6 - plus connection -1-, in interior light wiring harness

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

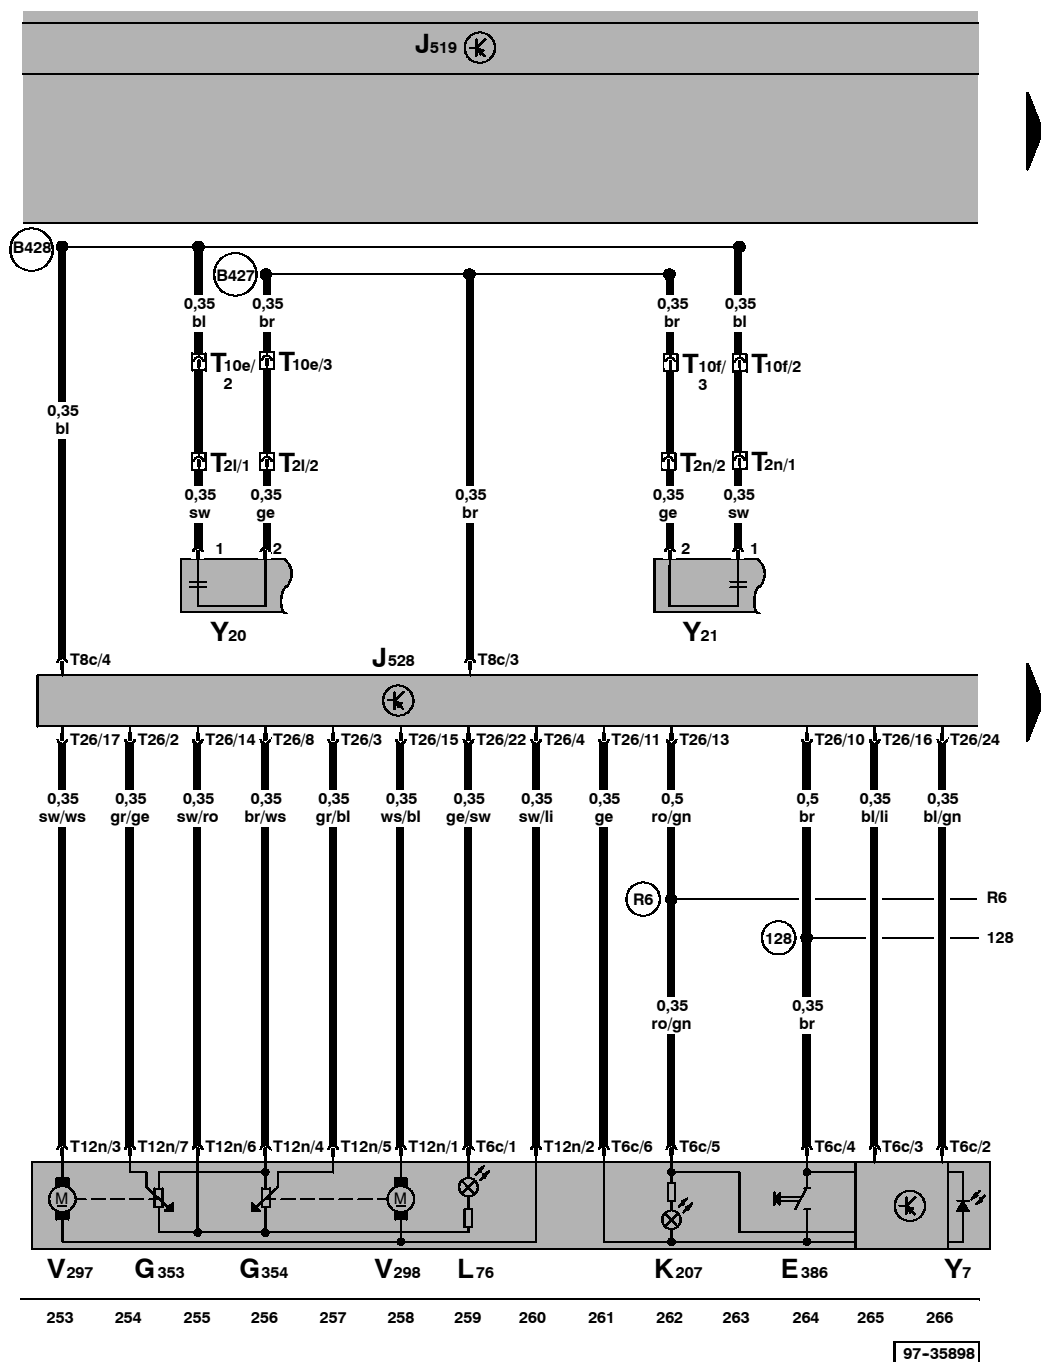

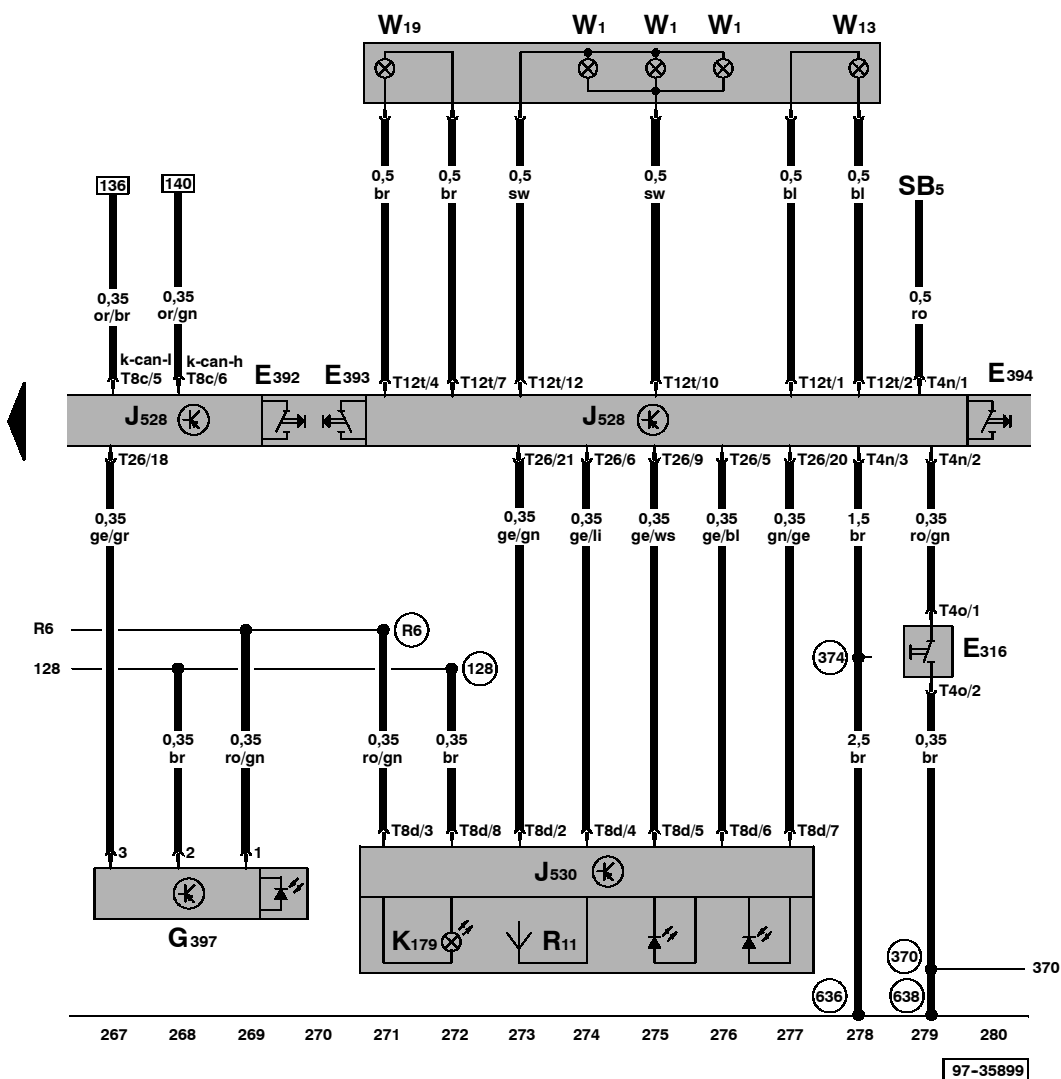**Vehicle Electrical System Control Module, Roof Electronics Control Module, Rain/Light Recognition Sensor, Garage Door Opener Control Module, Glove Compartment Button**


- E316 - Glove Compartment Button
- E392 - Garage Door Opener Button 1
- E393 - Garage Door Opener Button 2
- E394 - Garage Door Opener Button 3
- G397 - Rain/Light Recognition Sensor
- J519 - Vehicle Electrical System Control Module
- J528 - Roof Electronics Control Module
- J530 - Garage Door Opener Control Module
- K179 - Garage Door Opener Indicator Lamp
- R11 - Antenna
- SB5 - Fuse 5 (in fuse holder)
- T4n - 4-Pin connector
- T4o - 4-Pin connector
- T8c - 8-Pin connector
- T8d - 8-Pin connector
- T12t - 12-Pin connector
- T26 - 26-Pin connector
- W1 - Interior light, front
- W13 - Passenger's Map/Reading Light
- W19 - Left Front Reading Light


- (128) - Ground connection -1-, in interior light wiring harness
- (370) - Ground Connection 5 (in main wiring harness)
- (374) - Ground Connection 9 (in main wiring harness)
- (636) - Ground Connection (power circuit control module)
- (638) - Ground Connection (on right A-pillar)
- (R6) - plus connection -1-, in interior light wiring harness

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

# Vehicle Electrical System Control Module, Roof Electronics Control Module, Left and Right Rear Reading Light

- E326 - Front Interior Lamp Button
- E453 - Left Rear Interior Light Switch 1
- E454 - Left Rear Reading Light Switch
- E455 - Right Rear Reading Light Switch 1
- E456 - Rear Interior Light Door Contact Switch 2
- E457 - Driver's Reading Light Button
- E458 - Front Passenger's Reading Light Button
- E459 - Front Interior Light Door Contact Switch
- F147 - Left Make-Up Mirror Light Switch
- F148 - Right Make-Up Mirror Light Switch
- J519 - Vehicle Electrical System Control Module
- J528 - Roof Electronics Control Module
- L76 - Push Button Light
- T6q - 6-Pin connector
- T12r - 12-Pin connector
- T24c - 24-Pin connector
- W11 - Left Rear Reading Light
- W12 - Right Rear Reading Light
- W14 - Right Make-up Mirror Light
- W20 - Left Make-up Mirror Light
- W43 - Rear courtesy lamp

- (163) - Ground connection -2-, in interior light wiring harness
- (R7) - plus connection -2-, in interior light wiring harness

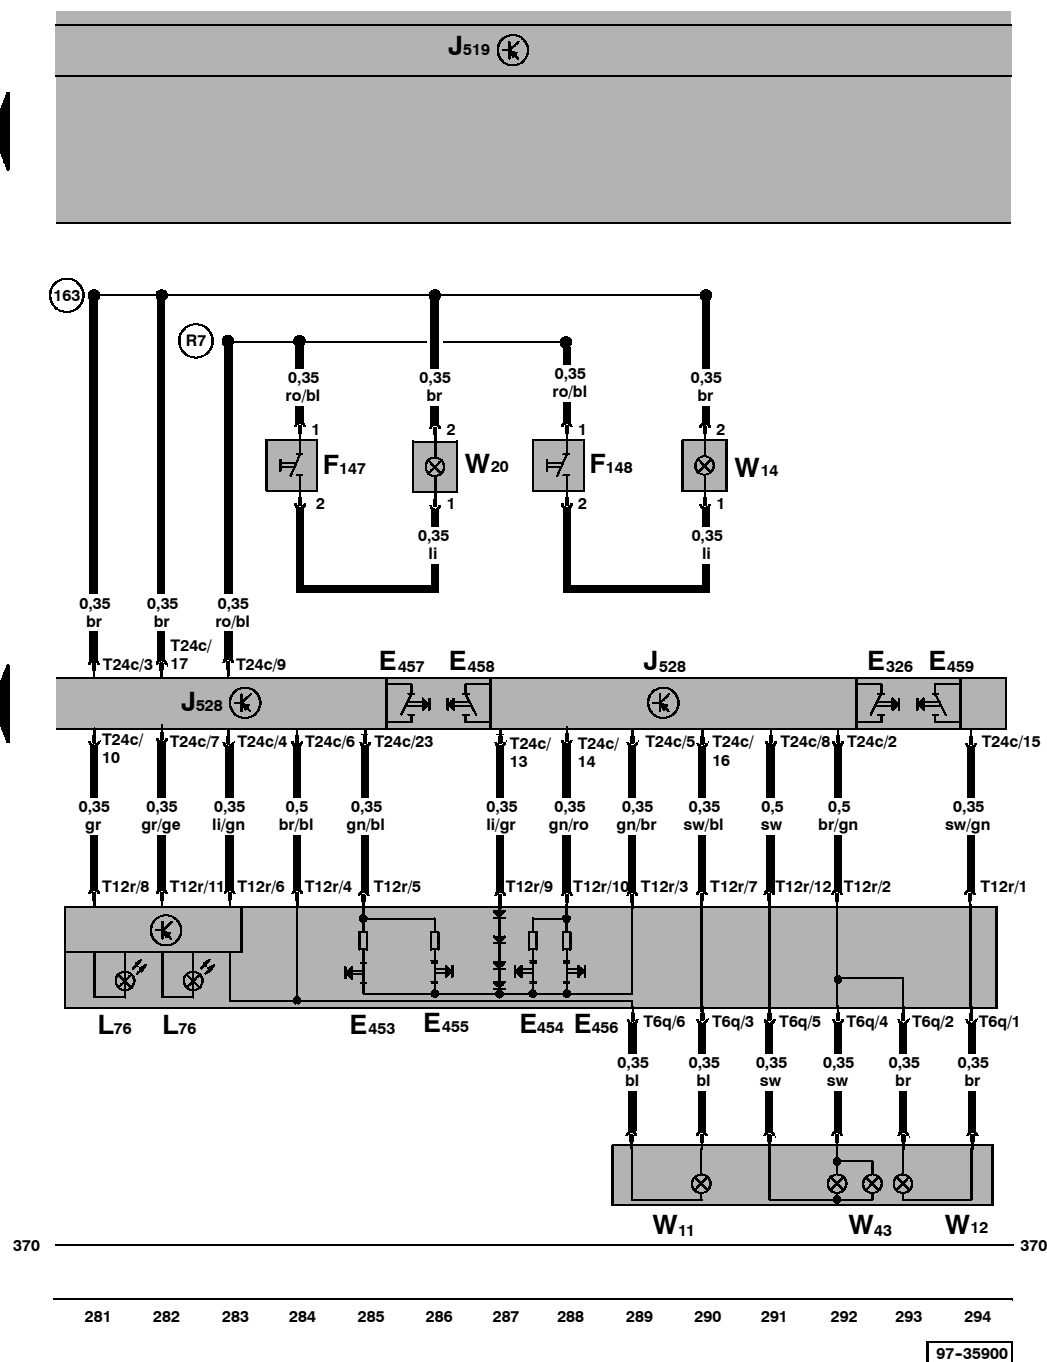

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

### Vehicle Electrical System Control Module, Cigarette Lighter, Glove Compartment Light

- J519 - Vehicle Electrical System Control Module  
 L15 - Ashtray Light  
 L28 - Cigarette Lighter Light  
 L106 - Footwell lighting, left rear  
 L107 - Footwell lighting, right rear  
 L151 - Left Front Footwell Illumination  
 L152 - Right Front Footwell Illumination  
 SB84 - Fuse 84 (in fuse holder)  
 SB85 - Fuse 85 (in fuse holder)  
 SB86 - Fuse 86 (in fuse holder)  
 T6tl - 6-Pin connector, red, connector station B-pillar, left  
 T6tr - 6-Pin connector, rot, connector station B-pillar, right  
 T10t - 10-Pin connector, connector station B-pillar, left  
 T10u - 10-Pin connector, connector station B-pillar, right  
 T10y - 10-Pin connector, under driver's seat  
 T10z - 10-Pin connector, under passenger's seat  
 U1 - Cigarette Lighter  
 U3 - Left Rear Cigarette Lighter  
 U7 - Right Rear Cigarette Lighter  
 W6 - Glove Compartment Light

- 370 - Ground Connection 5 (in main wiring harness)  
 380 - Ground Connection 15 (in main wiring harness)  
 397 - Ground Connection 32 (in main wiring harness)  
 630 - Ground Connection (Radio, A/C)  
 631 - Ground Connection (right rear door)  
 634 - Ground Connection (driver's seat control module)  
 B342 - Connection 3 (58d) (in main wiring harness)  
 B433 - Footwell illumination Connection (in main wiring harness)

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = lilac  
 ge = yellow  
 or = orange

