



Fuel Rail with Fuel Injector, Assembly Overview – 4.2L

1 - Supply line
2 - Return line
9 - Fuel pressure regulator
12 - Vacuum actuator For variable intake manifold
14 - Intake manifold change-over valve - N156 -
16 - Fuel injector - N30...N33, N83...N86 -