



**Ignition System Components, Assembly Overview – 4.2L**

<b>1</b> - Connection for knock sensor
<b>2</b> - Knock sensor 1 - <b>G61</b> -
<b>4</b> - Camshaft position (CMP) sensor 2 - <b>G163</b> - For intake camshaft, bank 2
<b>8</b> - Hood For Camshaft Position (CMP) Sensor - <b>G40</b> -
<b>9</b> - Ignition coil with power output stage - <b>N70</b> , <b>N127</b> , <b>N291</b> , <b>N292</b> , <b>N323</b> , <b>N324</b> , <b>N325</b> - and - <b>N326</b> -
<b>11</b> - Knock sensor 2 - <b>G66</b> -
<b>14</b> - Camshaft Position (CMP) sensor - <b>G40</b> - For intake camshaft, bank 1