

Coolant fan,

from June 2003

Note:

Information for


- ◆ *Relay and fuse arrangements*
- ◆ *Connector arrangements*
- ◆ *Control Modules and Relays*
- ◆ *Ground connections*
- ⇒ *Component Locations!*

Coolant FC Control Module, Coolant FC Control Module 2, Coolant Fan

- J... - Engine Control Module (ECM)
 J271 - Motronic Engine Control Module (ECM) Power Supply Relay *
 J293 - Coolant FC (Fan Control) Control Module
 J670 - Motronic Engine Control Module (ECM) Power Supply Relay 2 **
 J671 - Coolant FC (Fan Control) Control Module 2
 SD12- Fuse 12 (on fuse holder)
 SD27- Fuse 27 (on fuse holder)
 SD28- Fuse 28 (on fuse holder)
 T10gb- 10-Pin connector, black, connector station 2 / transmission
 T121a- 121-Pin connector
 TV22 - Wire junction -2- for terminal 30
 V7 - Coolant Fan
 V177 - Coolant Fan -2-

- 642 - Ground Connection (electronic fan control)
 B354 - Plus Connection 5 (87a) (in main wiring harness)
 B371 - Antenna Connection 1 (in main wiring harness)

- * - engine code BGJ only
 ** - engine code BAP only

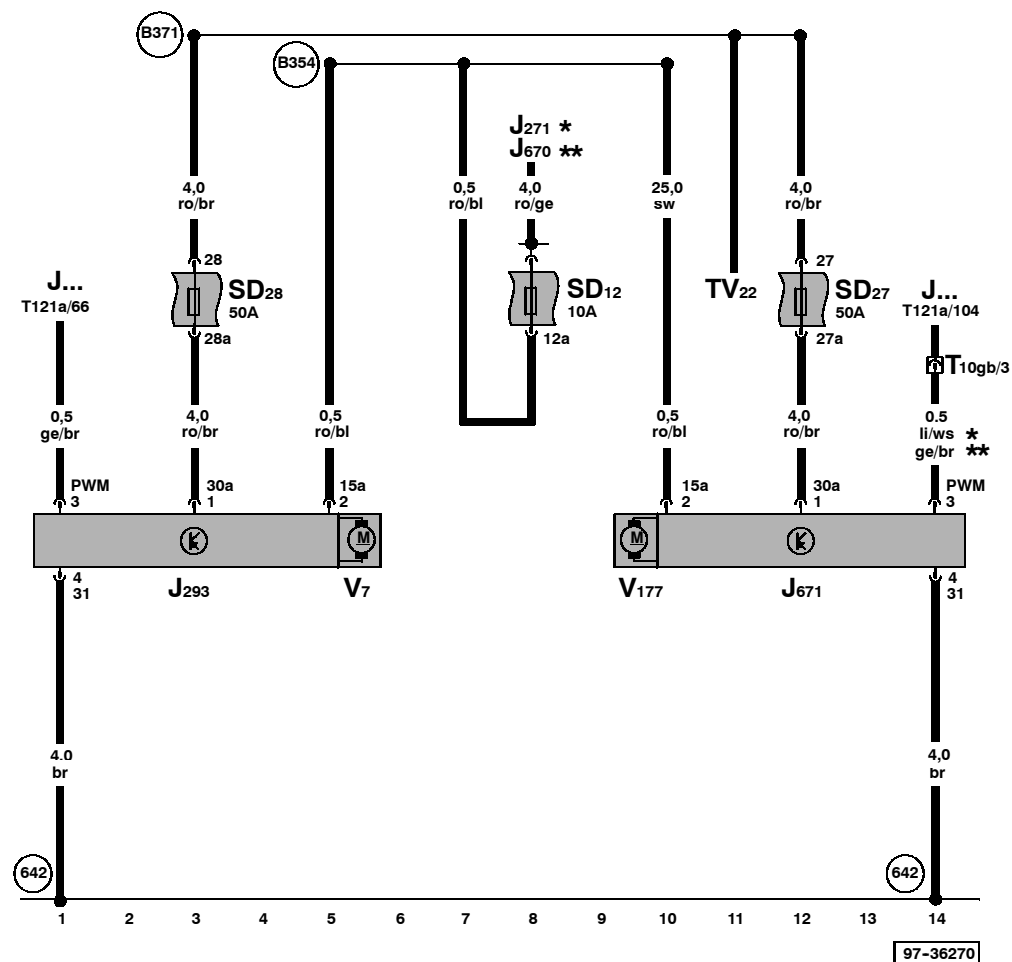

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange